

The background of the entire page is a light gray circuit board pattern with various electronic components like resistors, capacitors, and integrated circuits. A solid dark blue horizontal band spans the middle of the page, serving as a backdrop for the main text.

COMMERCIAL LIGHTING CONTROLS

# ANSI/ASHRAE/IES 90.1 2010

Design to meet code compliance with Lutron

USD List prices effective July 10, 2022



# Table of Contents

ASHRAE 90.1-2010

## Introduction

Solutions Overview . . . . .	2
Summary of Code Requirements . . . . .	4
Daylight Zone Requirements . . . . .	5
Suggested Code Compliant Solutions . . . . .	6
How to Use this Guide . . . . .	8
Vive Local Solutions   Layout . . . . .	10

## Applications

### Atrium

Retrofit (Switching) . . . . .	12
New Construction (Dimming 0-10V) . . . . .	14

### Break Room

Retrofit (Switching) . . . . .	16
New Construction (Dimming 0-10V) . . . . .	18

### Classroom

Retrofit (Switching) . . . . .	20
New Construction (Dimming 0-10V) . . . . .	22
Recommended (Fixture Control) . . . . .	24

### Conference Room

Retrofit (Switching) . . . . .	26
New Construction (Dimming 0-10V) . . . . .	28
Recommended (Fixture Control) . . . . .	30

### Egress Corridor

Retrofit (Switching) . . . . .	32
New Construction (Dimming 0-10V) . . . . .	34

### Open Office

Retrofit (Switching) . . . . .	36
New Construction (Dimming 0-10V) . . . . .	38
Recommended (Fixture Control) . . . . .	40

### Private Office

Retrofit (Switching) . . . . .	42
New Construction (Dimming 0-10V) . . . . .	44

### Restroom (Multi-Stall)







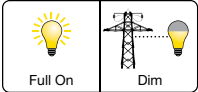
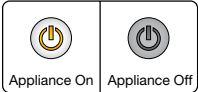

Retrofit (Switching) . . . . .	46
New Construction (Dimming 0-10V) . . . . .	48

### Egress Stairwell

Retrofit (Fixture Control) . . . . .	50
New Construction (Fixture Control) . . . . .	52

This document summarizes the lighting and receptacle control requirements for commercial buildings. It is for information purposes only. It is not meant to replace your state’s or local jurisdiction’s official energy code. The recommendations presented in this guide are based on the originally published code prior to addenda. Please refer to your local building energy code or authority having jurisdiction for your precise requirements. Only the authority having jurisdiction can guarantee code compliance.

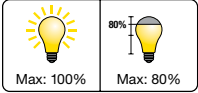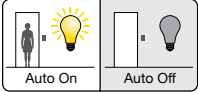
Energy-saving lighting control strategies

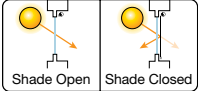Strategy		Potential savings
	<b>High-end trim/tuning</b> sets the maximum light level based on customer requirements in each space.*	10–30% Lighting
	<b>Occupancy/vacancy sensing</b> turns lights on when occupants are in a space and off when they vacate the space.*	20–60% Lighting
	<b>Daylight harvesting</b> dims electric lights when daylight is available to light the space.*	25–60% Lighting
	<b>Personal dimming control</b> gives occupants the ability to set the light level.*	10–20% Lighting
	<b>Controllable window shading</b> moves shades to reduce glare and solar heat gain.*	10–20% Cooling
	<b>Scheduling</b> provides scheduled changes in light levels based on the time of day.*	10–20% Lighting
	<b>Demand response</b> automatically reduces lighting loads during peak electricity usage times.*	30–50% During peak period
	<b>Plug load control</b> automatically turns off loads after occupants leave a space.*	15–50% of Controlled loads
	<b>HVAC integration</b> controls heating, ventilation, and air conditioning systems through a contact closure.*	5–15% HVAC

\*Go to [lutron.com/references](https://lutron.com/references) for more information

Codes can sometimes be complicated and difficult to navigate. This commercial application guide provides examples of how Lutron products can be used to meet or exceed code requirements. This guide focuses on Vive and Vive compatible solutions, but our other control systems offer similar features.

Lutron Product Capabilities: Commercial Applications

	Local Solutions			Panel Solutions	
	Wallbox	Vive	Vive with wireless hub*	Energi Savr Node	Quantum
Strategies for code/standards compliance	Occupancy sensing	●	●	●	●
	Multi-level lighting control	●	●	●	●
	Daylight harvesting		●	●	●
	Receptacle control		●	●	●
	Timeclock			●	●
	Demand response		● <sup>†</sup>	● <sup>†</sup>	●
	Energy monitoring		●		●
	BACnet integration		●		●

To learn more about these products and their specifications, go to [lutron.com/catalogs](https://lutron.com/catalogs)

\* For the latest information on products compatible with the Vive wireless hub go to [lutron.com/vive](https://lutron.com/vive)  
\*\* Requires QS Timeclock  
<sup>†</sup> Automated Demand Response capability requires signal from a third-party device

Summary of Requirements for Lighting and Receptacle Controls

ASHRAE 90.1-2010

The requirements listed below are summarized for simplicity and may have other exceptions that were omitted.

	Minimum control type	Description	Code provision
Local Control	Switching	Lighting shall be capable of turning ON and OFF. There shall be at least one manual device for control of the lighting within a space. See code for spaces that allow remote location of control.	9.4.1.2 (a) Exceptions
	Multi-level or dimming <sup>1</sup>	Lighting shall be capable of providing at least one level between 30% and 70% of full power, in addition to ON and OFF. There shall be at least one manual device for control of the lighting within a space. See code for spaces that allow remote location of control.	9.4.1.2 (a)
Automatic Control <sup>3</sup>	Timeclock <sup>2</sup>	<b>Interior:</b> Scheduled control, based on time-of-day, turns lighting ON or OFF based on typical occupancy. Occupancy sensors also comply as an alternate to using a timeclock. <b>Exterior &amp; parking garages:</b> Scheduled control, based on time-of-day and sunrise/sunset, turns lighting ON or OFF based on typical occupancy and daylight (requires astronomical timeclock).	9.4.1.1 (a) 9.4.1.3 (a) & (c) 9.4.1.7 (a), (b), & (c)
	Occupancy sensor	Automatic control turns lighting ON upon occupancy or OFF after a vacancy of 30 minutes or less.	9.4.1.2 (b) 9.4.1.3 (b)
	Full ON	When initiated by a timeclock or occupancy sensor, lighting is automatically turned ON to maximum lighting power.	9.4.1 Exceptions
	Partial ON	When initiated by a timeclock or occupancy sensor, lighting is automatically turned ON to 50% or less of maximum lighting power.	9.4.1
	Full OFF	When initiated by a timeclock or occupancy sensor, lighting is automatically turned OFF.	9.4.1.2 (b)
	Partial OFF	When initiated by a timeclock or occupancy sensor, lighting is automatically reduced by at least 50% of maximum lighting power (30% for enclosed parking garages and exterior). Automatic full OFF also complies.	9.4.1.3 (b) 9.4.1.6 (g) 9.4.1.7 (c)
Other	Daylight responsive control <sup>1</sup>	<b>Interior:</b> A sensor which adjusts lighting in response to available daylight is required for sidelight and skylight zones. There must be at least two light levels between ON and OFF. See the “Daylight Zone Requirements” diagrams for more information. <b>Exterior and parking garages:</b> A photosensor can be used as an alternate to the dawn/dusk operation of an astronomical timeclock. The perimeter 20 ft. of parking garages with access to daylight must automatically reduce lighting power in response to daylight.	9.4.1.3 (d) 9.4.1.4 9.4.1.5 9.4.1.7 (a)
	Receptacle control	At least 50% of the receptacles in the space shall automatically turn OFF based on typical occupancy or after a vacancy of 30 minutes or less. Plug-in devices do not comply.	8.4.2

For areas being used as a path of egress or fixtures being used for emergency, verify compliance with your local authority having jurisdiction. Acceptance (functional) testing is required for all new construction applications to ensure that control hardware and software are calibrated, programmed and functioning properly (Code provision 9.4.4).

1 When multi-level lighting control and/or daylight responsive control is required, Lutron recommends using continuous dimming to allow for smooth light level adjustment and maximize energy savings.

2 Lutron recommends using occupancy sensors to achieve automatic on/off requirements in place of a timeclock to maximize energy savings and optimize user experience.

3 Manual ON is always permitted for interior applications. Provide manual ON control when no automatic ON is indicated.


Daylight Zone Requirements

ASHRAE 90.1-2010


**Daylight Zone Requirements:**  
Fixtures in primary side-light or skylight zones must be controlled by a daylight sensor. Fixtures in daylight zone must be controlled separately from fixtures in the rest of the space.

**Daylight Exceptions:**  
Daylight control is not required in primary sidelighted areas less than 250 sq. ft. and in areas under skylights less than 900 sq. ft.

Sidelighting (Window)

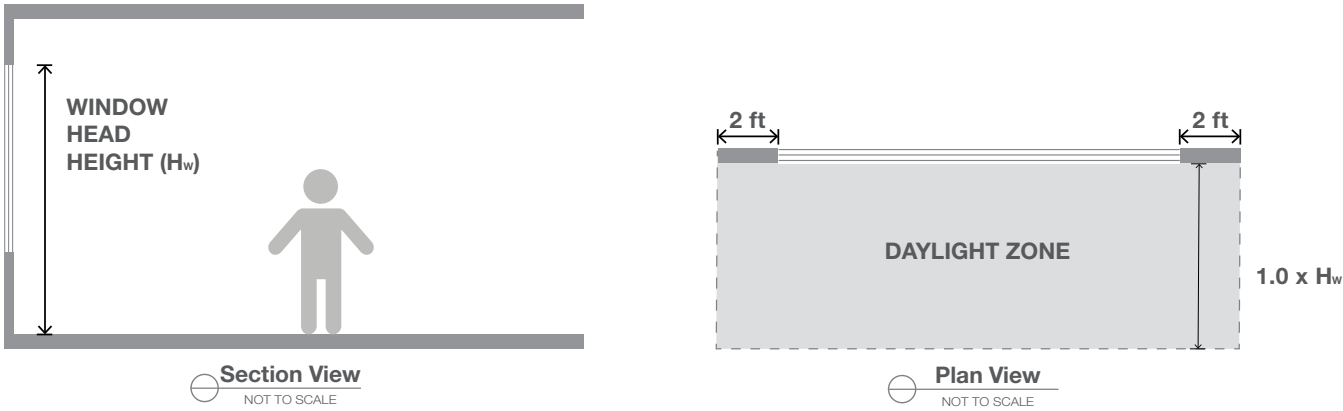

Toplighting (Skylight)

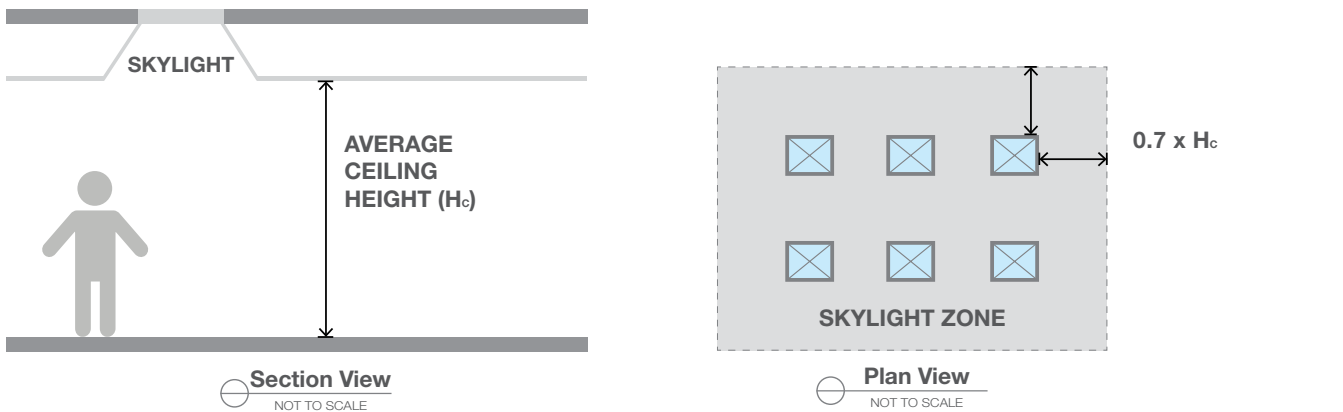

Suggested Code Compliant Solutions

ASHRAE 90.1-2010

The compliant solutions listed below are suggested based on total installed cost, simplicity of design, and basic functional needs for the space. These solutions do not represent the only compliant options to meet lighting and receptacle control requirements. Applications in this guide will illustrate these solutions and/or alternate solutions for advanced functionality.

		Atrium	Break Room	Classroom, Lecture Hall, Training Room	Conference, Multi-purpose Room	Egress Corridor <sup>4</sup>	Lobby
Local Control	Switching						
	Multi-level or dimming	●	●	●	●	●	● <sup>6</sup>
Automatic Control <sup>2</sup>	Timeclock	⚙					
	Occupancy sensor		⚙	⚙	⚙	⚙	⚙
	Full ON	⚙				⚙	⚙
	Partial ON						
	Full OFF	⚙	⚙	⚙	⚙	⚙	⚙
	Partial OFF					●	
Other	Daylight responsive control	●	●	●	●	●	●
	Receptacle control			●			

1 Retrofit requirements indicated are for lighting alterations greater than 10% of the connected load in a space.

2 Manual ON is always permitted for interior applications. Provide manual ON control when no automatic ON is indicated.

3 When typically occupied, the sensor provides Partial OFF functionality. When typically unoccupied, the sensor provides Full OFF functionality. For entrances and exits, lights are scheduled to Full OFF when typically unoccupied and at night; daylighting and occupancy sensing are not required.

Suggested Code Compliant Solutions

ASHRAE 90.1-2010

Diagram key:

- = New construction
- ⚙ = Lighting retrofit<sup>1</sup>
- ⚙● = New construction and retrofit<sup>1</sup>

Open Office (>250 sq. ft.)	Private Office (<250 sq. ft.)	Restroom	Egress Stairwell <sup>4</sup>	Storage Room	Facade/Landscape	Parking Garage (Not Roof) <sup>3</sup>	Other Exterior <sup>5</sup>
		●		●			
●	●		●				
					●	●	●
⚙	⚙	⚙	⚙	⚙		●	
⚙		⚙	⚙		●	●	●
●							
⚙	⚙	⚙		⚙	●	●	●
			⚙			●	●
●		●	●	●		●	
●	●						

4 For areas not designated as a path of egress, the occupancy sensor must turn lights to full OFF.

5 Astronomical timeclock shall ensure all lights are off during daylight hours. Lights should be scheduled to Partial OFF during night hours. See section 9.4.1.4 for scheduling times.

6 Multi-level or dimming capability is not required in non-daylit lobbies.

This application guide is designed to help specifiers and contractors understand codes and Lutron controls in a simple manner. Each of the pages will lay out different spaces, the corresponding lighting control products and the way the system is setup in the space.

For Specifiers

Use this application guide for design suggestions, the way the system operates and to specify the relevant products for each space.

For Contractors

Use this application guide to understand how the system is installed, the way the system must operate and to order the correct products for each application.

Understand how the products are laid out in the space


Learn more about the products used in the space


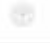



Room type

Type of solution

Classroom | New Construction

ASHRAE 90.1-2010



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowRak dimming module with 0-10V	3	\$ 180.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-36RL-GWH-LD1	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50



Code Notes: For non daylight classrooms, all general lighting can be connected to a single 0-10V dimming module. Receptacle Control is required for Shop and Laboratory classrooms. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

22

Classroom | New Construction

ASHRAE 90.1-2010

Visible System Components



Pico wireless control

Radio Powr Savr wireless corner-mount vacancy sensor and daylight sensor

Control Functionality



**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There is one perimeter daylight zone.  
Manual: Occupant uses wall dimmers to set desired light levels for both general and white-board lights.



**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.



Control Strategies





Manual On/Off



Full On/Dim



Full On/Dim



Max 100% Max 80%

Occupancy/Vacancy

Daylight Harvesting

Personal Dimming

High-end Trim/Tuning

Lighting Energy Savings\*

60%

\*Go to [lutron.com/energy](http://lutron.com/energy) for more information.

23

Type of solution

Learn about the products visible in the space and the different options available for these.

Learn what strategies are implemented in the space

Learn what energy savings you achieve over manual shut-off

Understand how the space functions with the installed system

This guide offers up to three solutions per space type.






- The **Retrofit Solutions** are simple and inexpensive solutions, generally suited for a basic retrofit.
- The **New Construction Solutions** are value driven, generally best suited for new construction.
- The **Recommended Solutions** have advanced functionality for greater comfort and energy savings.



# Vive Local Solutions Layout

ASHRAE 90.1-2010

This is a high-level overview of the local solutions layout. For individual room requirements refer to the detailed room type solutions in this guide. A single PowPak module can control a single or multiple fixtures. The products shown here are representative of local solutions. Multiple product options are available to meet the needs of the space.


-  Vive wireless hub\*
-  PowPak module
-  Occupancy sensor
-  Pico wireless remote control
-  Daylight sensor




### Vive wireless hub Features:

- Central control, management, and monitoring of Vive devices via web browser
- Supports astronomic and time-of-day events
- Two contact closure inputs for 3rd party integration such as Automatic Demand Response
- WiFi access for easy commissioning
- Control up to 10,000 sq. ft. with a single hub
- Optional BACnet integration

\* Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details

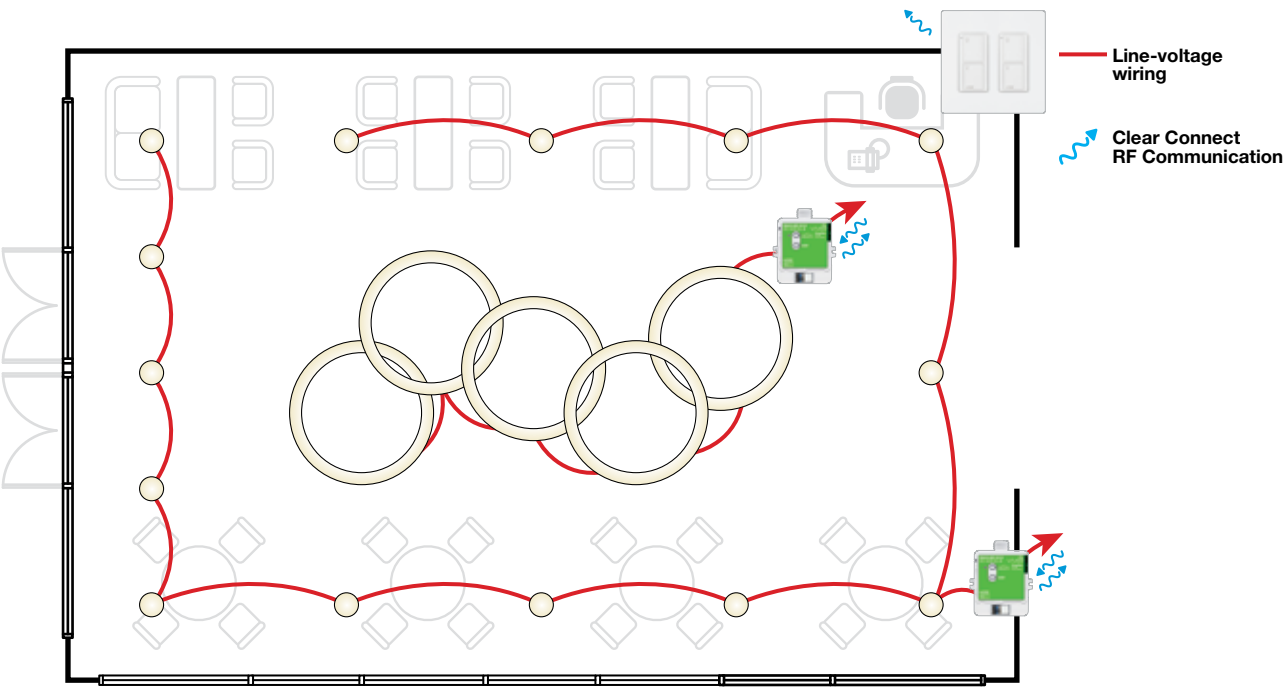



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	2	\$ 155.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50
	HJS-1-FM	Vive wireless Hub	Shared	Consult your local rep for Hub pricing and service options.

**Code Notes:** Requirements specified for atriums 20-40 ft. in height. Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.

Visible System Components




Pico wireless control

Control Functionality

**When Occupied:**  
Manual: Occupant uses wall switches to turn on and turn off general lighting.

**Timeclock:**  
Timeclock turns lights on during normally occupied hours.  
  
Timeclock turns lights off during normally unoccupied hours.

Control Strategies

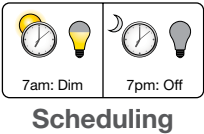


Lighting Energy Savings\*

10%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.



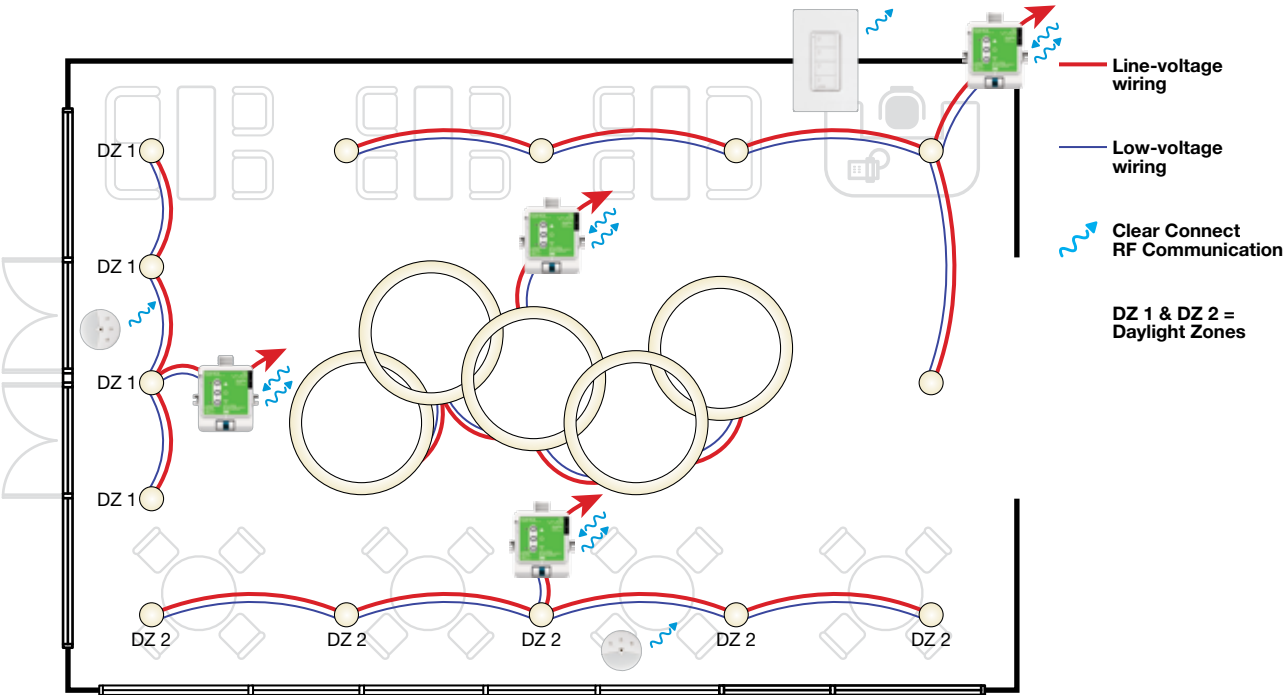

Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	4	\$ 180.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	2	\$ 150.00
	PJ2-4B-GWH-L31	Pico wireless 4-button scene control	1	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50
	HJS-1-FM	Vive wireless Hub	Shared	Consult your local rep for Hub pricing and service options.

**Code Notes:** Requirements specified for 20-40 ft. atriums.  
Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless 4-button scene control



Radio Powr Savr wireless daylight sensor

Control Functionality

 
**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.


Manual: Occupant selects scenes to set desired light levels for all lights.

**Timeclock:**  
Timeclock turns lights off during normally unoccupied hours.


Control Strategies




Daylight Harvesting

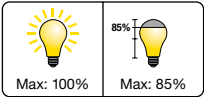

High-end Trim/Tuning

 

Scheduling

 



Scene Control

Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

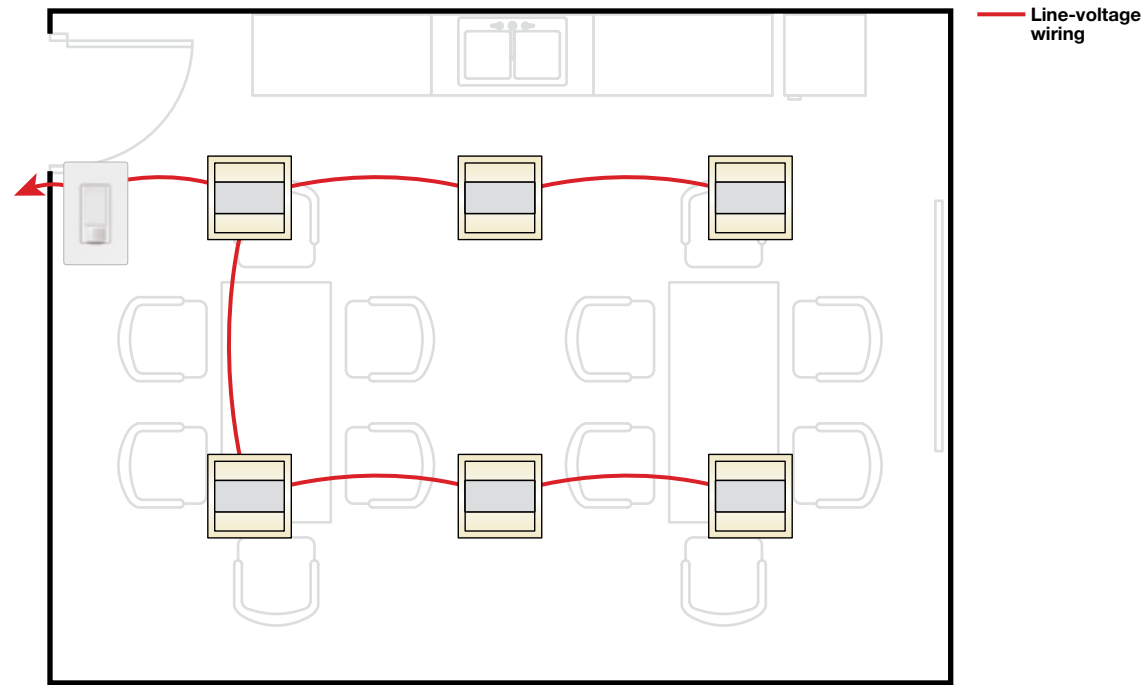

Symbol	Model Number	Description	Qty	List Price Each
	MS-VPS6M2-DV-WH	Maestro vacancy sensing switch*	1	\$ 57.20

\* Maestro MS-VPS6M2 is not compatible with Vive wireless hub.

Visible System Components





Maestro vacancy sensing switch

Control Functionality

- Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.
- When Occupied:**  
Manual: Occupant uses wall switch to turn all lights off.
- Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Control Strategies

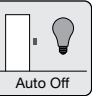


Manual On      Auto Off




Occupancy/Vacancy

Lighting Energy Savings\*

30%

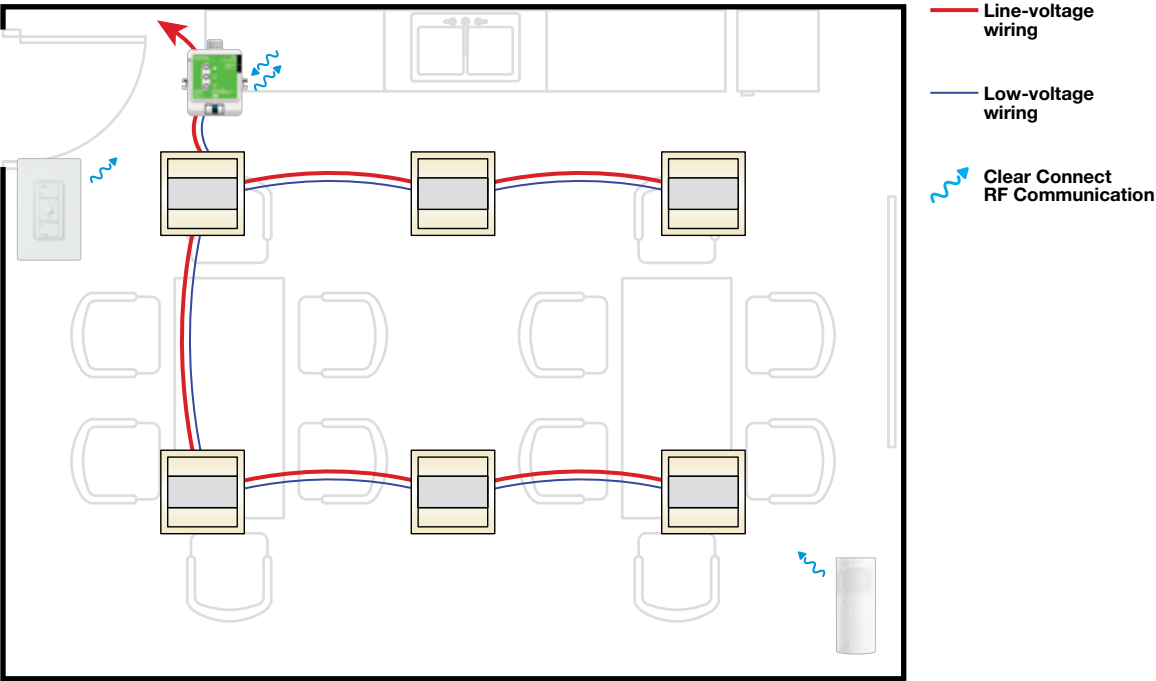\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	1	\$ 180.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

**Code Notes:** For break rooms with daylight, include a 0-10V dimming module per zone and a daylight sensor. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless control



Radio Powr Savr wireless corner-mount vacancy sensor

Control Functionality

**Occupant Enters:** Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

 
**When Occupied:** Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:** All lights automatically turn off 15 minutes after all occupants exit.


Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.



Control Strategies



Occupancy/Vacancy

 





High-end Trim/Tuning

Lighting Energy Savings\*

45%

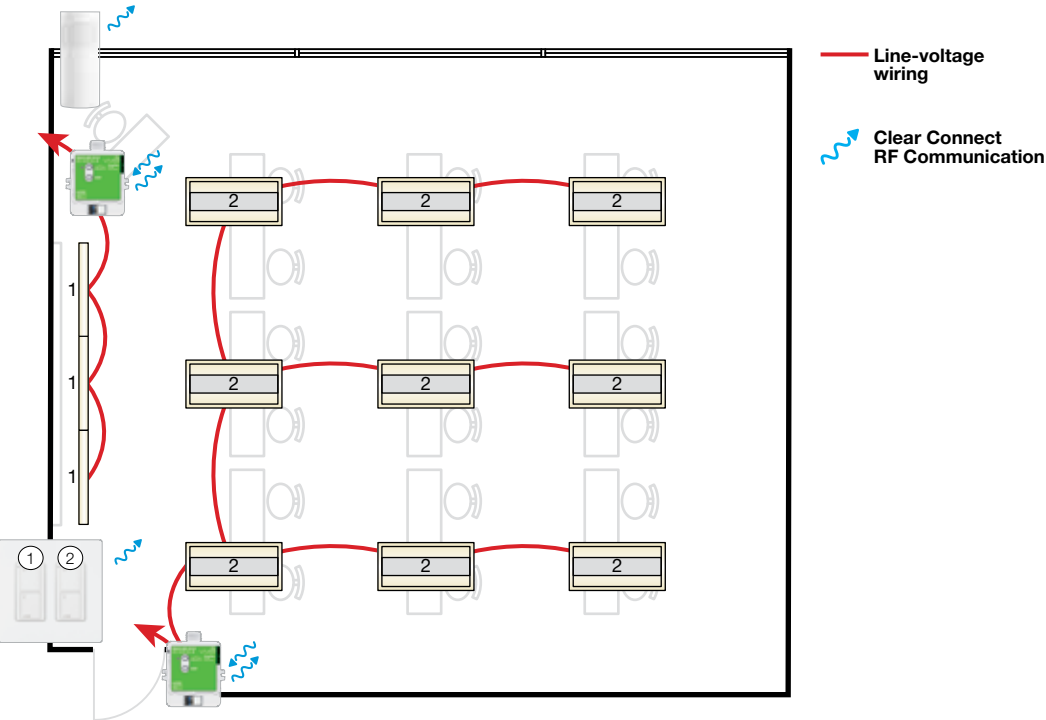\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	2	\$ 155.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



Radio Powr Savr wireless corner-mount vacancy sensor

Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

 
**When Occupied:**  
Manual: Occupant uses wall switches to turn on and turn off general and white-board lighting.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.



Control Strategies






Occupancy/Vacancy

Lighting Energy Savings\*

45%

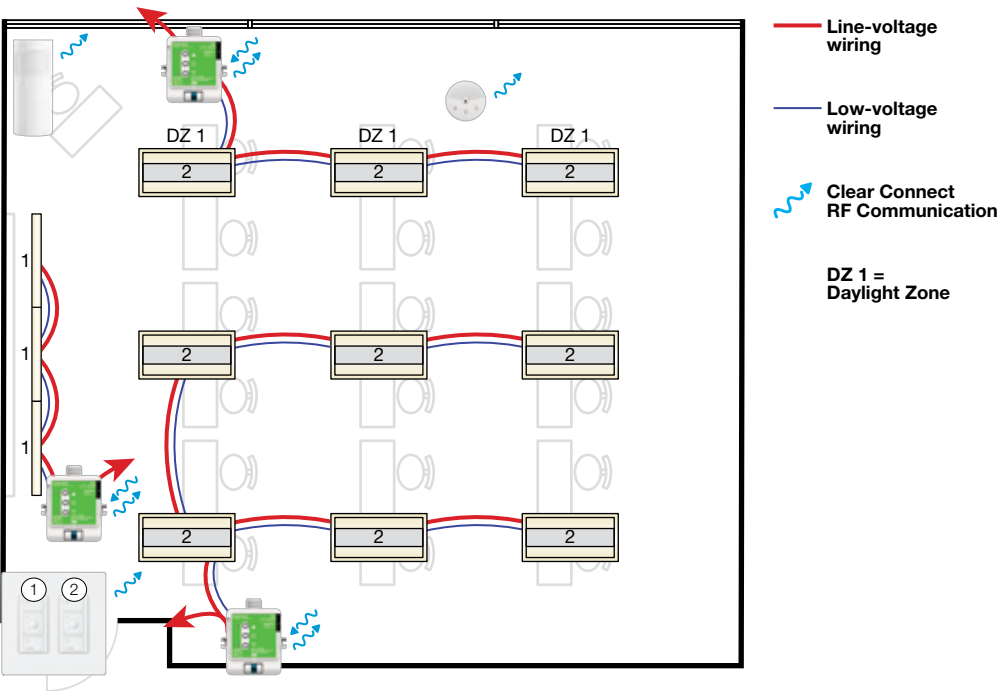\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	3	\$ 180.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

**Code Notes:** For non-daylight classrooms, all general lighting can be connected to a single 0-10V dimming module. Receptacle Control is required for Shop and Laboratory classrooms. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless control



Radio Powr Savr wireless corner-mount vacancy sensor and daylight sensor

Control Functionality

Occupant Enters:

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There is one perimeter daylight zone.

 
Manual: Occupant uses wall dimmers to set desired light levels for both general and white-board lights.

Occupant Exits:


All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.


Control Strategies




Occupancy/Vacancy

 

Daylight Harvesting

 

Personal Dimming

 





High-end Trim/Tuning

Lighting Energy Savings\*

60%

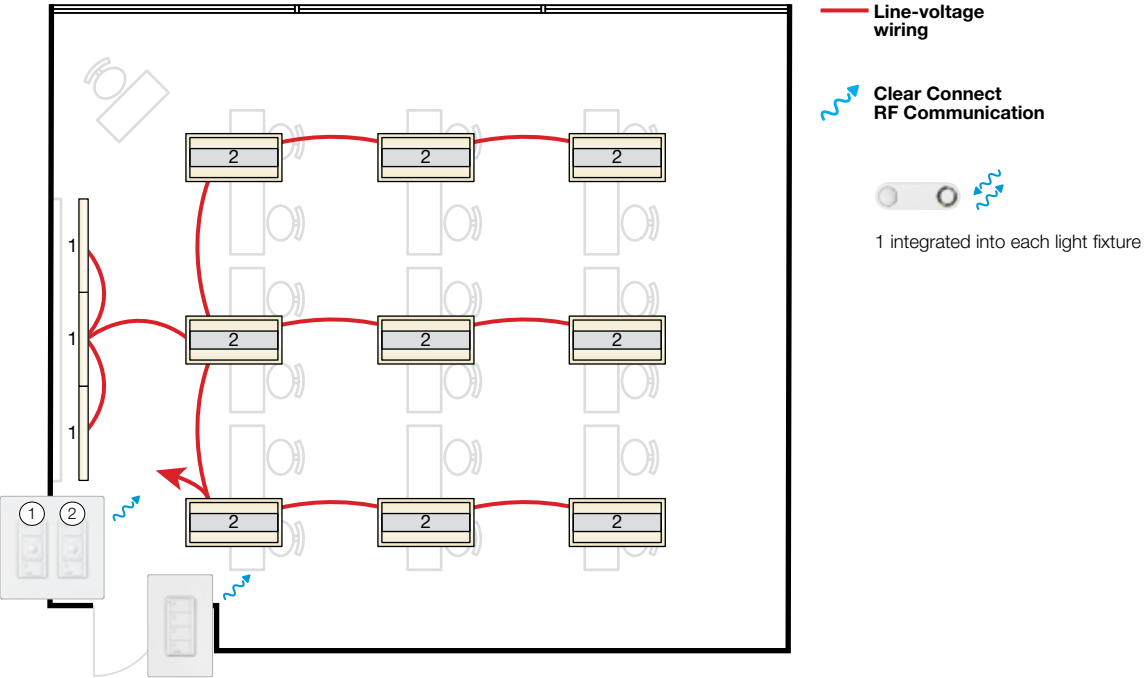\* Go to [lutron.com/references](http://lutron.com/references) for more information.

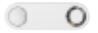

Symbol	Model Number	Description	Qty	List Price Each
	Integral to fixture <sup>1</sup>	Integral fixture control with sensor	12	\$ 78.00 <sup>2</sup>
	PJ2-4B-GWH-L31	Pico wireless 4-button scene control	1	\$ 45.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	3	\$ 9.50

1. Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to [lutron.com/findafixture](http://lutron.com/findafixture) for a complete list of compatible fixtures and drivers.  
2. Fixture adder for the control module may vary.



Receptacle control is required for shop and laboratory classrooms.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.  
This solution requires digitally enabled ballasts and drivers by others.

 
Visible System Components



Pico wireless control



Pico wireless 4-button scene control



Integral fixture control with sensor

Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

 
**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant selects scenes or uses dimmers to set desired light levels for all lights. Entry scene controller has 3 user preferred presets and 1 all off button.


**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.


Control Strategies




Occupancy/Vacancy

 


Daylight Harvesting

 

Personal Dimming

 

High-end Trim/Tuning

 


Scene Control




Lighting Energy Savings\*

65%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

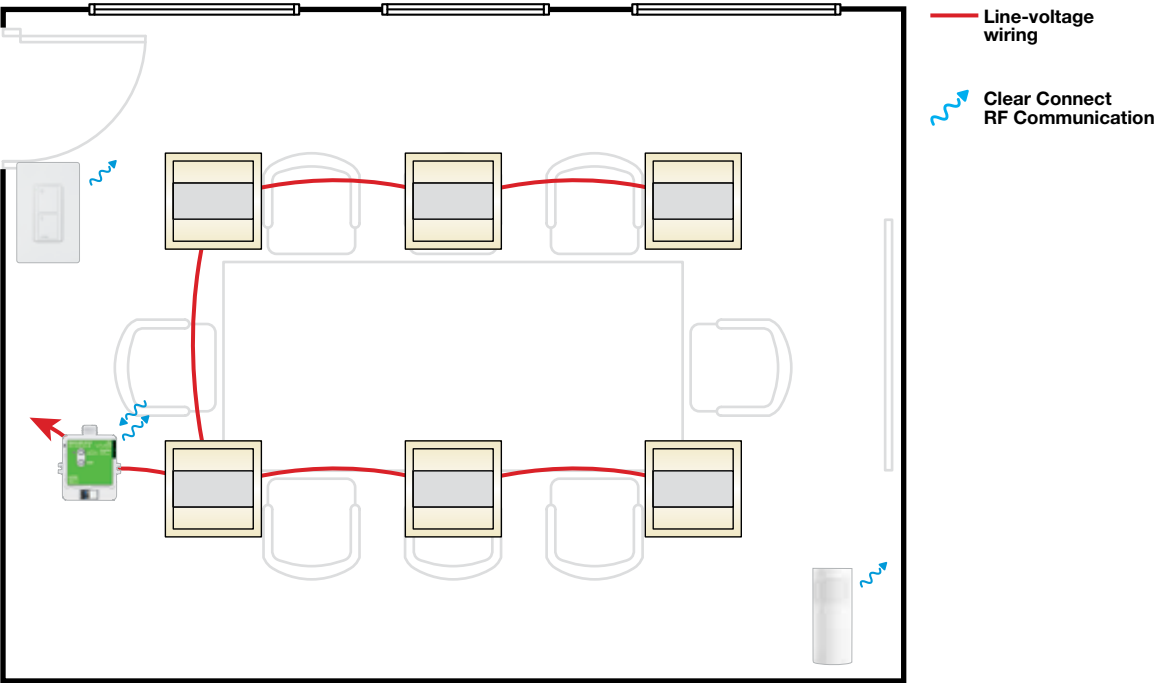



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



Radio Powr Savr wireless corner-mount vacancy sensor

Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.


**When Occupied:**  
Manual: Occupant uses wall switch to turn all lights off.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.



Control Strategies

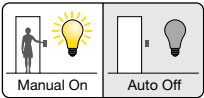




Occupancy/Vacancy

Lighting Energy Savings\*

40%

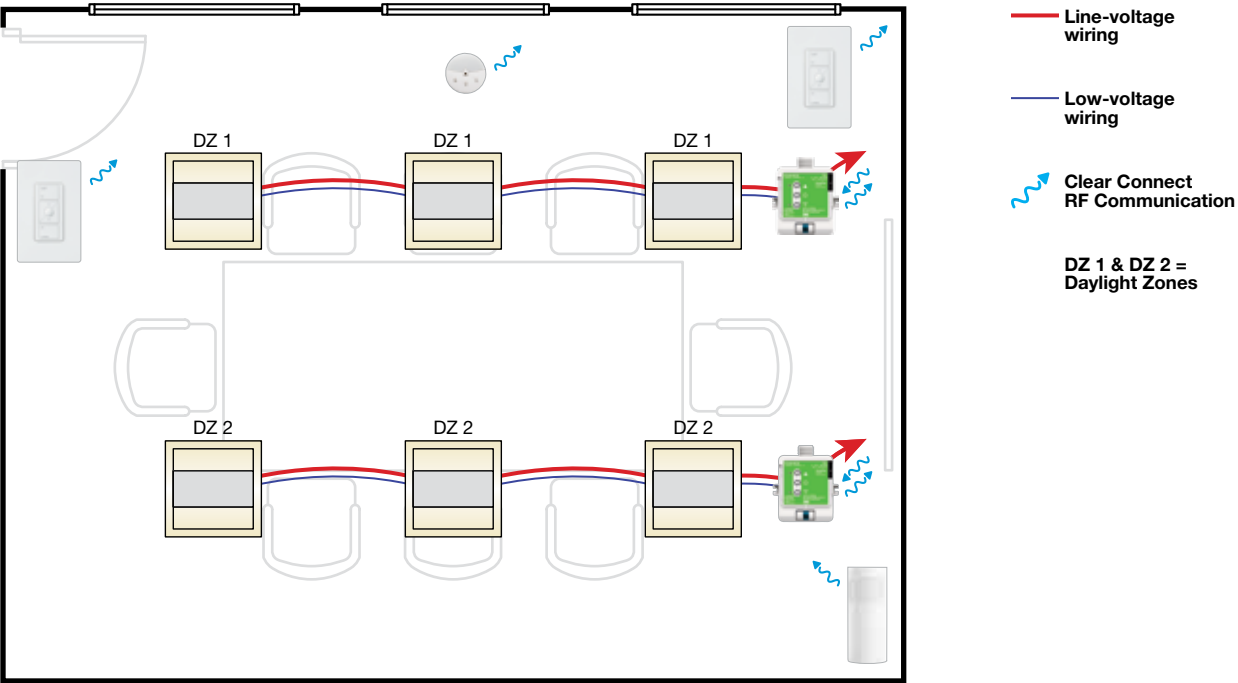\* Go to [lutron.com/references](https://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	2	\$ 180.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

For non-daylight conference rooms the lighting can be connected to a single 0-10V dimming module.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.


**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.


Control Strategies

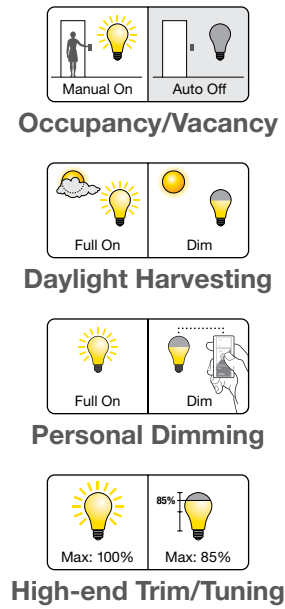

Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

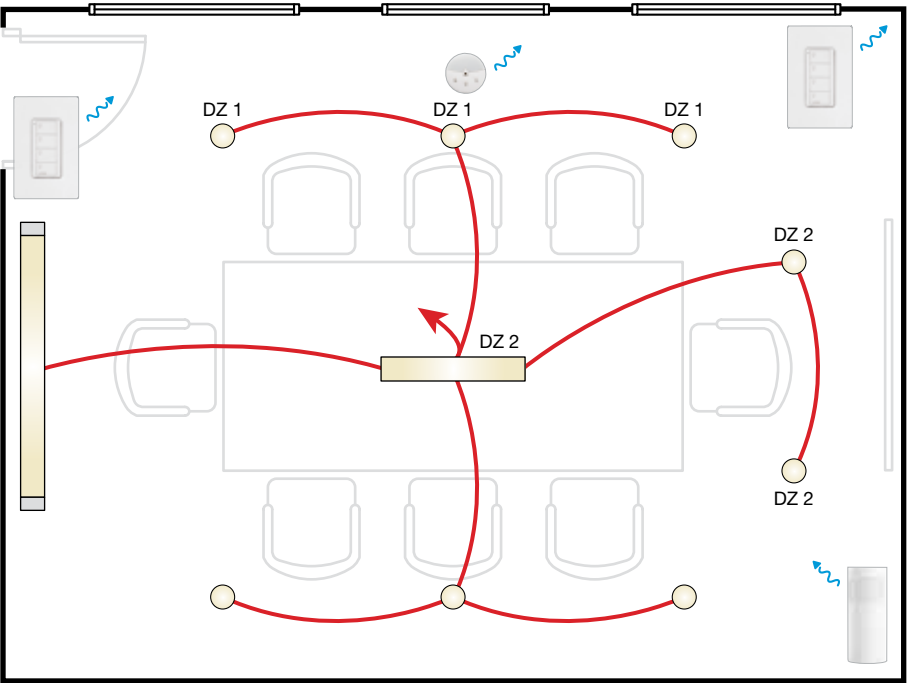

- Line-voltage wiring
- Clear Connect RF Communication
- DZ 1 & DZ 2 = Daylight Zones
- 1 required for each light fixture
- 1 required for each light fixture

Symbol	Model Number	Description	Qty	List Price Each
	Multiple	EcoSystem-enabled Hi-Lume soft-on, fade-to-black series ballasts/drivers	10	Consult your local rep
	FCJS-ECO	Wireless fixture control with EcoSystem	10	\$ 91.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-4B-GWH-L31	Pico wireless 4-button scene control	2	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. Go to [lutron.com/BallastTool](http://lutron.com/BallastTool) or [lutron.com/findafixture](http://lutron.com/findafixture) to identify the correct ballast or LED fixture for your project.

Visible System Components

Pico wireless 4-button scene control

Radio Powr Savr wireless corner-mount vacancy sensor and daylight sensor

Control Functionality

- Occupant Enters:** Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.
- When Occupied:** Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.  
  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.
- Occupant Exits:** All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.



Control Strategies

Manual On   Auto Off

**Occupancy/Vacancy**

Full On   Dim

**Daylight Harvesting**

Full On   Dim

**Personal Dimming**

Max: 100%   Max: 85%

**High-end Trim/Tuning**


Scene 1   Scene 2




**Scene Control**

Lighting Energy Savings\*

60%

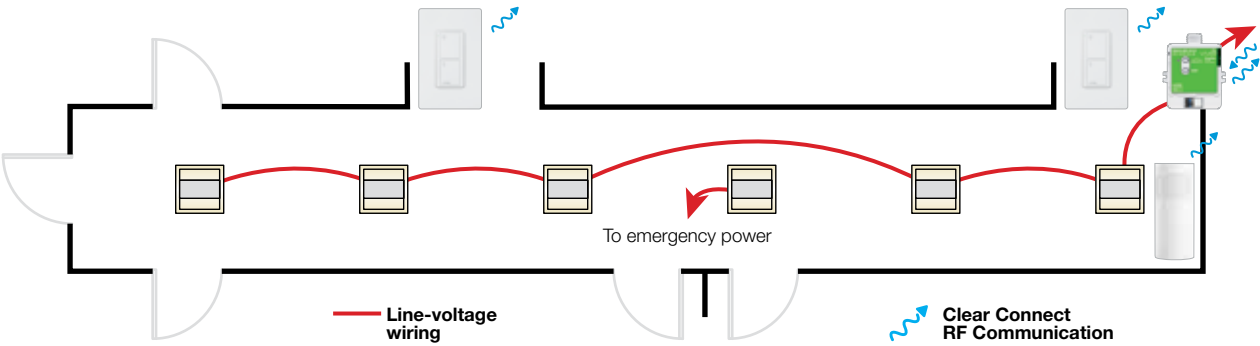\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-OHLB-P-WH	Radio Powr Savr wireless hallway occupancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



Radio Powr Savr wireless hallway occupancy sensor

Control Functionality


**Occupant Enters:**  
All non-emergency lights automatically turn on to maximum light level.

**When Occupied:**  
Manual: Occupant uses wall switch to turn all non-emergency lights off.

**Occupant Exits:**  
All non-emergency lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.

Control Strategies

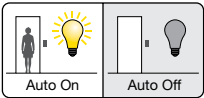





Occupancy/Vacancy

Lighting Energy Savings\*

40%

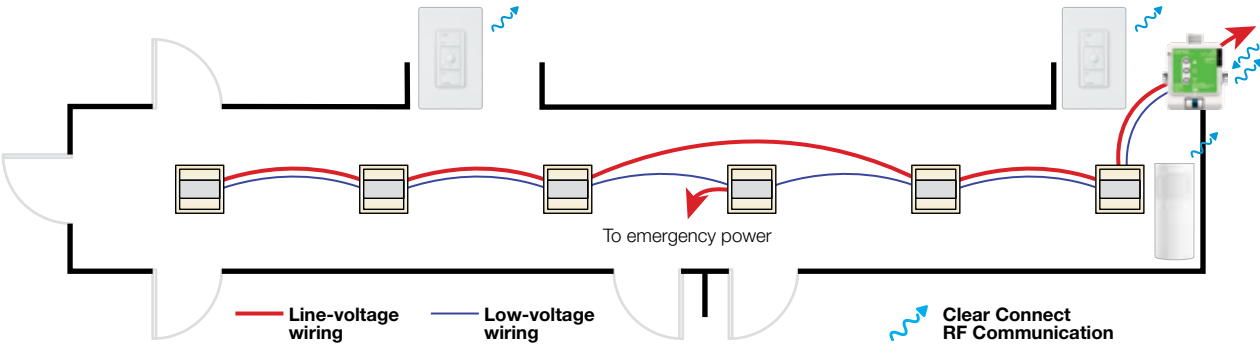\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	1	\$ 180.00
	LRF2-OHLB-P-WH	Radio Powr Savr wireless hallway occupancy sensor	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for corridors with daylight zones. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless control



Radio Powr Savr wireless hallway occupancy sensor



Control Functionality

**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.


**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired levels for all lights. Manual control cannot fully shut off the lights. Minimum light level is set to 10%.

**Occupant Exits:**  
All lights automatically go to minimum light level 15 minutes after all occupants exit.


**Emergency Mode:**  
Lighting connected to emergency power turns on to full output.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.

Control Strategies

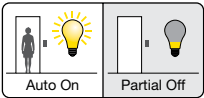

Occupancy/Vacancy

 


High-end Trim/Tuning




Lighting Energy Savings\*

60%

**Code Note:** For non-egress corridors, set the minimum light level to full off.

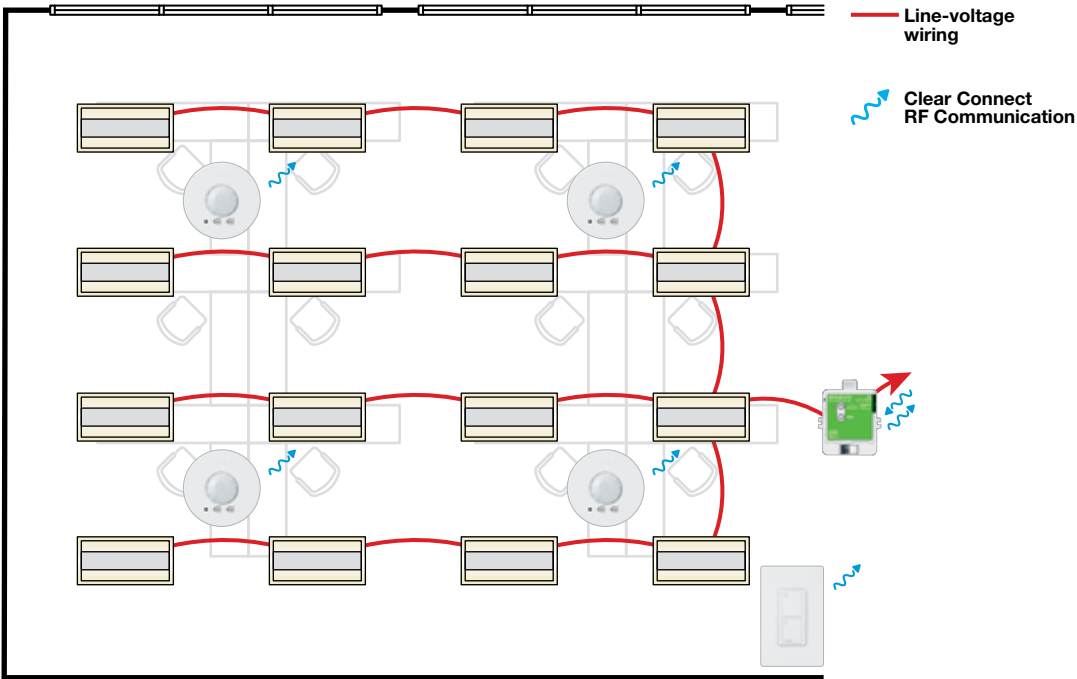\* Go to [lutron.com/references](https://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless ceiling-mount occupancy sensor	4	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



 
Radio Powr Savr wireless ceiling-mount occupancy sensor

Control Functionality

- Occupant Enters:**  
All lights automatically turn on to maximum light level.
- When Occupied:**  
Manual: Occupant uses wall switch to turn all lights off.
- Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.

Control Strategies




Occupancy/Vacancy






Lighting Energy Savings\*

35%

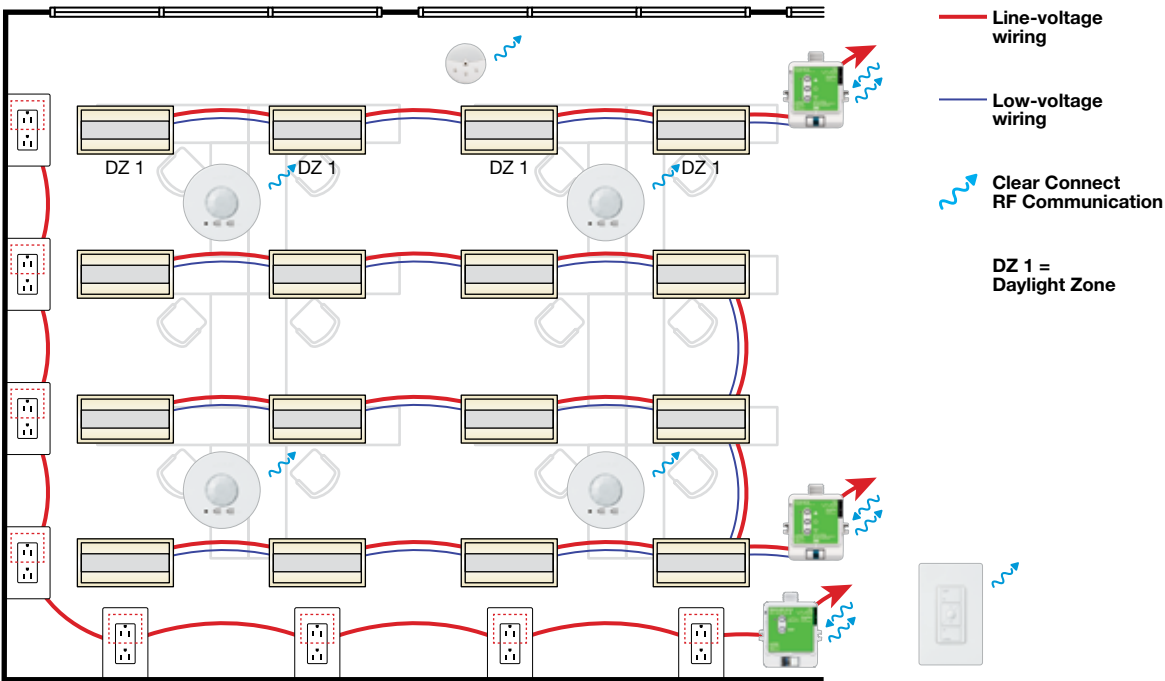\* Go to [lutron.com/references](http://lutron.com/references) for more information.





Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	2	\$ 180.00
	RMJS-20R-DV-B	20A PowPak relay module	1	\$ 170.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1	\$ 150.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless ceiling-mount occupancy sensor	4	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

**Code Notes:** For non-daylight open offices, all general lighting can be connected to a single 0-10V dimming module. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
All lights automatically turn on to 50% light level. Occupant turns on lights to maximum level manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There is one perimeter daylight zone.


Manual: Occupant uses wall dimmers to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.


Control Strategies

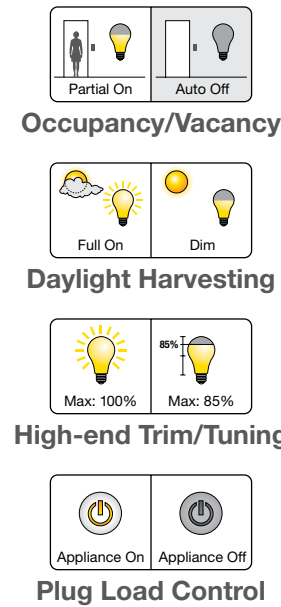

Lighting Energy Savings\*

50%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

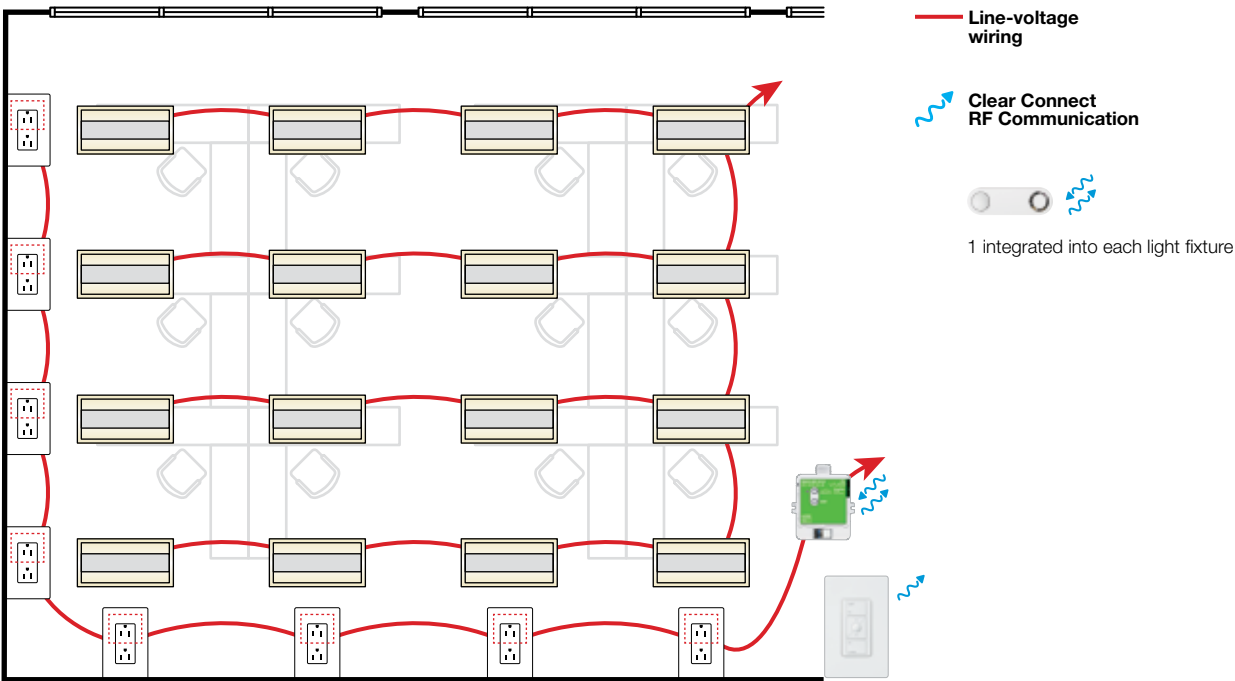

Symbol	Model Number	Description	Qty	List Price Each
	Integral to fixture <sup>1</sup>	Integral fixture control with sensor	16	\$ 78.00 <sup>2</sup>
	RMJS-20R-DV-B	20A PowPak relay module	1	\$ 170.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

1. Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to [lutron.com/findafixture](http://lutron.com/findafixture) for a complete list of compatible fixtures and drivers.  
2. Fixture adder for the control module may vary.



Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires digitally enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
Each individual light automatically turns on to 50% light level as occupant approaches fixture proximity.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:**  
Automatic: Each individual overhead light dims/brightens based on local daylight availability.

Manual: Occupant uses wall dimmer to set desired light levels for all lights. Maximum light level is set to 80%.


**Occupant Exits:**  
Each individual light automatically turns off 15 minutes after all occupants exit fixture proximity.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.




Control Strategies

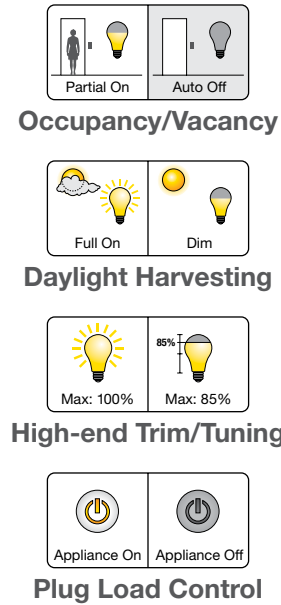




Lighting Energy Savings\*

60%

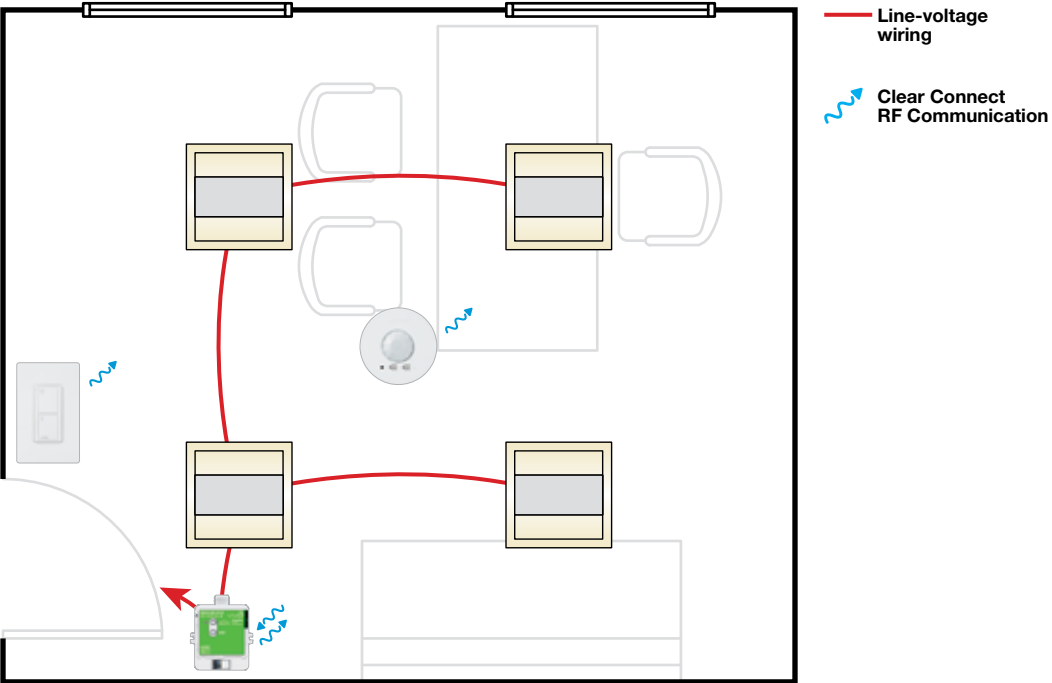\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-VCR2B-P-WH	Radio Powr Savr wireless ceiling-mount vacancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

Visible System Components



Control Functionality


**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

**When Occupied:**  
Manual: Occupant uses wall switch to turn all lights off.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.

Control Strategies

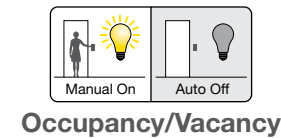


Lighting Energy Savings\*

30%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.

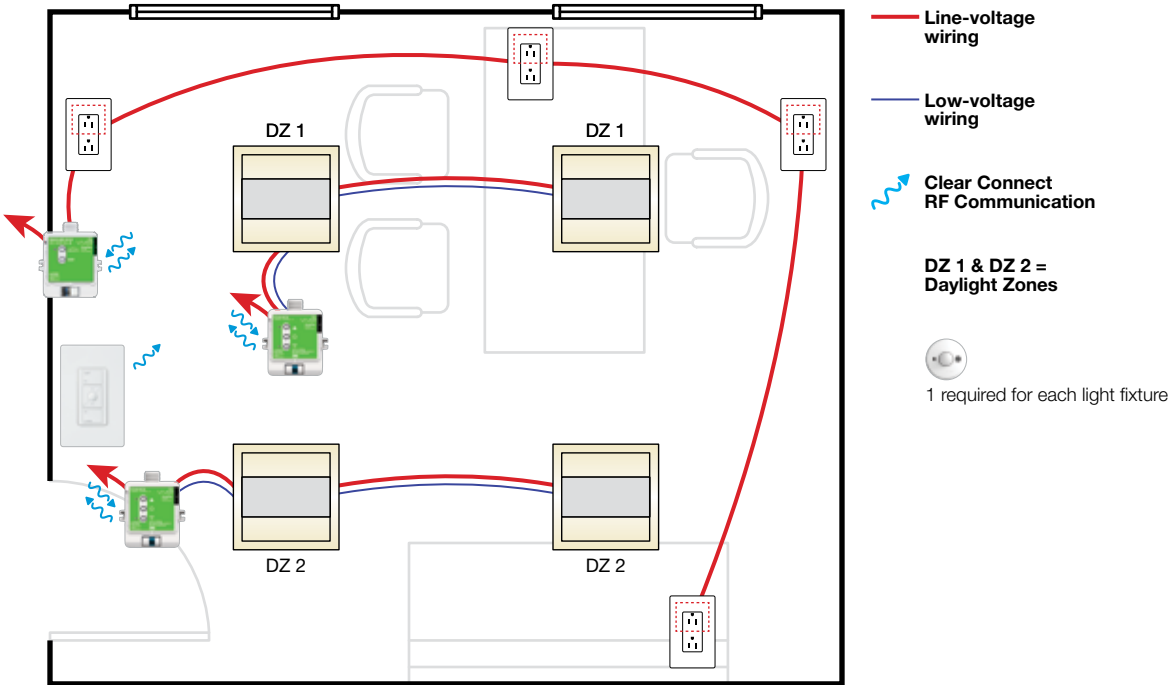

Symbol	Model Number	Description	Qty	List Price Each
	FCJS-010	Wireless Fixture Control with 0-10V	2	\$ 91.00
	RMJS-20R-DV-B	20A PowPak relay module	1	\$ 170.00
	FC-SENSOR	PowPak Fixture Sensor	2	\$ 40.50
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

FCJS models are capable of controlling up to 3 ballasts or drivers. Review the "Vive PowPak Fixture Controls" submittal document for more design details. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses wall dimmer to set desired light levels for all lights.






**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.




Control Strategies

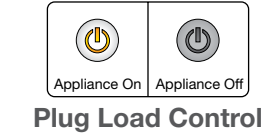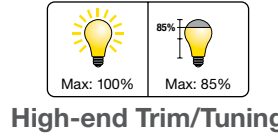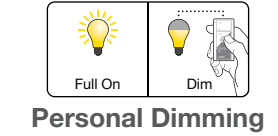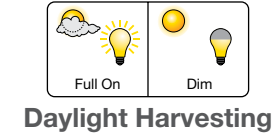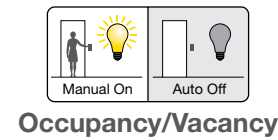




Lighting Energy Savings\*

60%

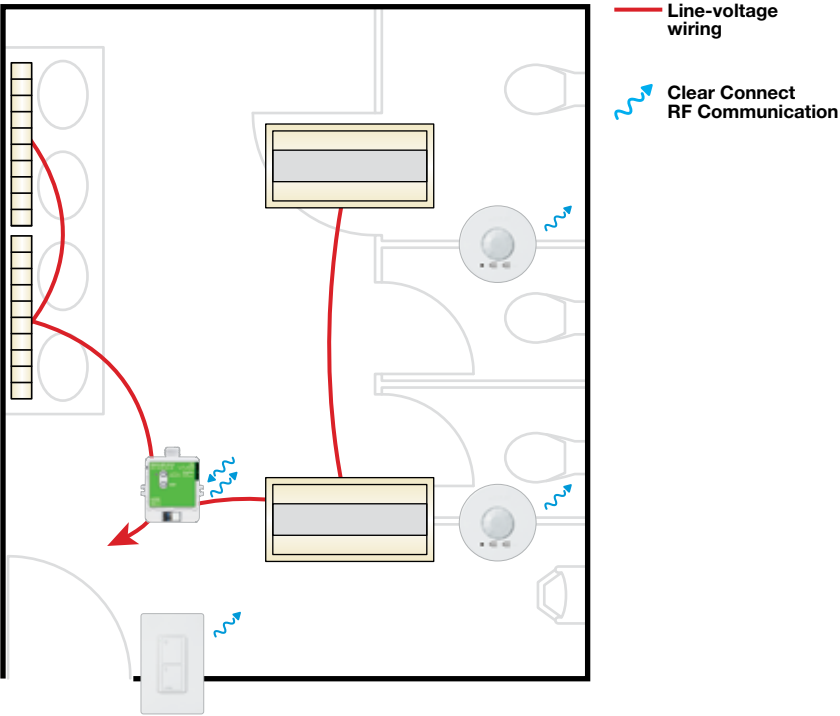\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless ceiling-mount occupancy sensor	2	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



Radio Powr Savr wireless ceiling-mount occupancy sensor

 
Control Functionality

**Occupant Enters:**  
All lights automatically turn on to maximum light level.

**When Occupied:**  
Manual: Occupant uses wall switch to turn all lights off.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Control Strategies







Occupancy/Vacancy

Lighting Energy Savings\*

50%

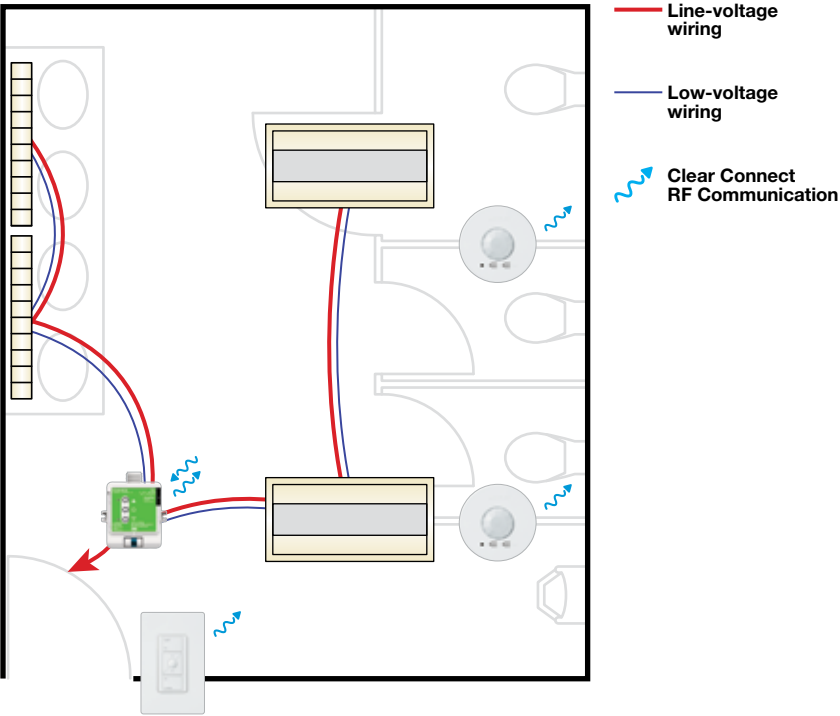\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	1	\$ 180.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless ceiling-mount occupancy sensor	2	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

**Code Notes:** Add a daylight sensor for restrooms with daylight zones.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Control Functionality


**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.

Control Strategies

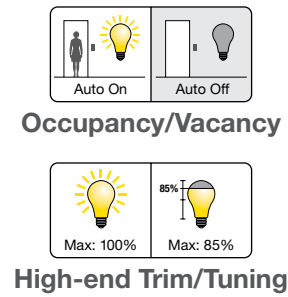




Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

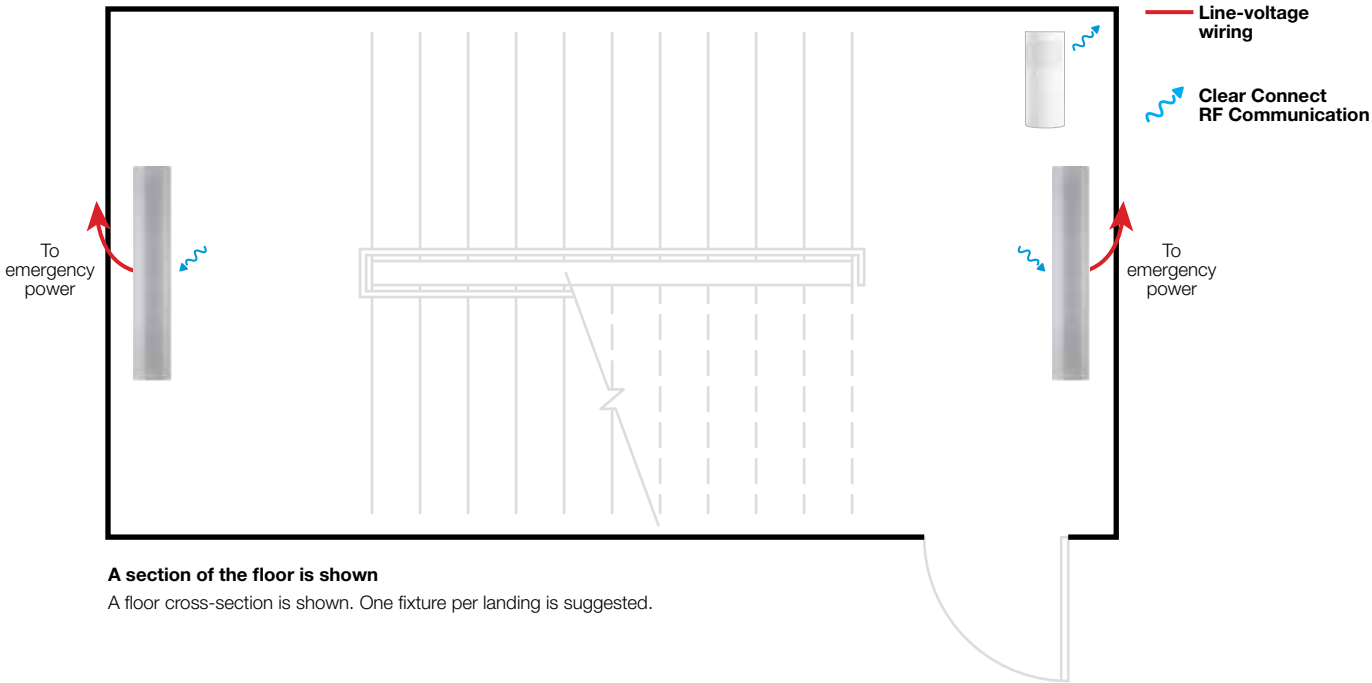



Symbol	Model Number	Description	Qty	List Price Each
	FXSWLX4H	Lutron 4 ft. stairwell LED fixture	2 (per floor)	\$ 720.00
	LRF2-OKLB-P-WH	Radio Powr Savr wireless corner-mount occupancy sensor	1 (per floor)	\$ 105.00

**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for stairwells with daylight zones. Lutron Stairwell Fixture (FXSWLX44) is not currently compatible with Vive wireless hub. A new model number is coming soon that will include Vive compatibility. Go to [lutron.com/vive](https://lutron.com/vive) for the latest compatibility details.

Visible System Components



Radio Powr Savr  
wireless corner-mount  
occupancy sensor

Control Functionality

**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

 
**Occupant Exits:**  
All lights dim to the minimum light level 15 minutes after all occupants exit. Minimum light level is set to 10%.

**Emergency Mode:**  
Lighting connected to emergency power turns on to full output.


**Code Notes:** For non-egress stairwells, see the recommended solution and set the minimum light level to full off.



Control Strategies



Occupancy/Vacancy

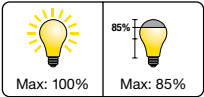


High-end Trim/Tuning



Lighting Energy Savings\*

80%

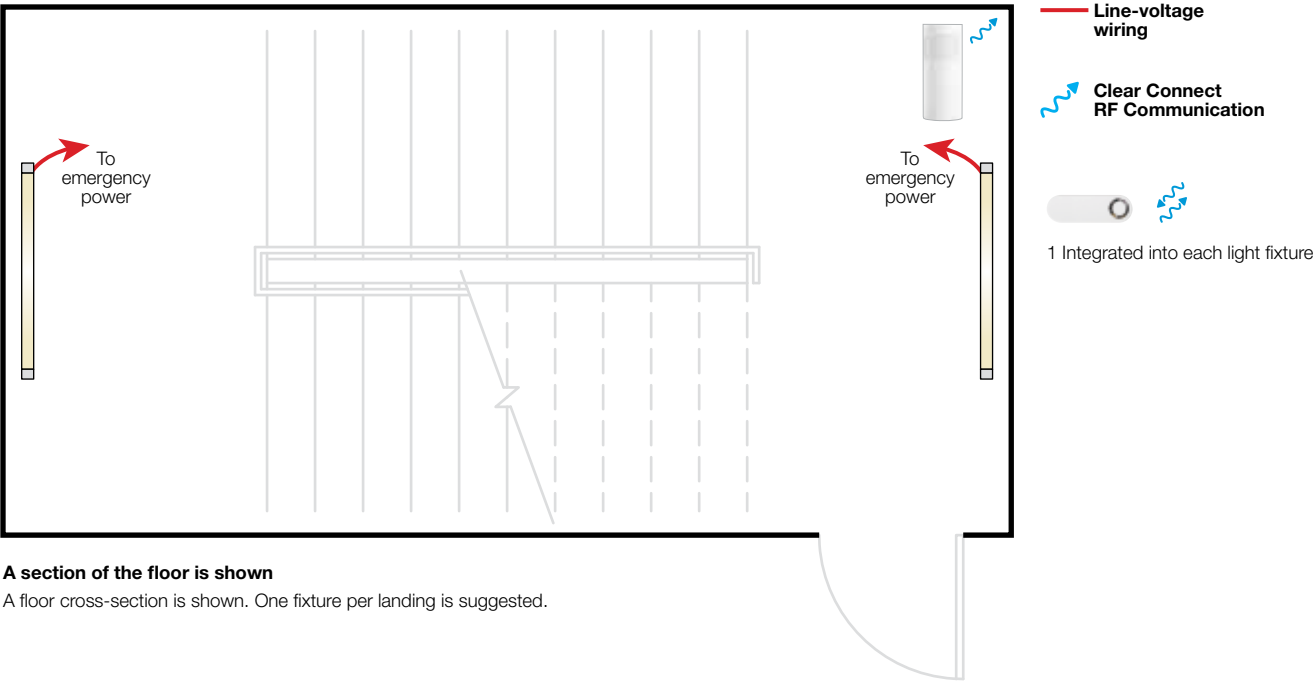\* Go to [lutron.com/references](https://lutron.com/references) for more information.



**A section of the floor is shown**  
A floor cross-section is shown. One fixture per landing is suggested.

Symbol	Model Number	Description	Qty	List Price Each
	Integral to fixture <sup>1</sup>	Integral fixture control	2 (per floor)	\$ 67.00 <sup>2</sup>
	LRF2-OKLB-P-WH	Radio Powr Savr wireless corner-mount occupancy sensor	1 (per floor)	\$ 105.00

1. Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to [lutron.com/findafixture](http://lutron.com/findafixture) for a complete list of compatible fixtures and drivers.  
2. Fixture adder for the control module may vary.



**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for stairwells with daylight zones. This solution requires digitally enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.


**Occupant Exits:**  
All lights dim to the minimum light level 15 minutes after all occupants exit. Minimum light level is set to 10%.

**Emergency Mode:**  
Lighting connected to emergency power turns on to full output.

**Code Notes:** For non-egress stairwells, set the low end to full off.



Control Strategies

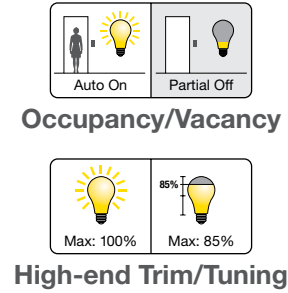

Lighting Energy Savings\*

80%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

Clear Connect, EcoSystem, Hi-Lume, Lutron, Maestro, Pico, PowPak, and Quantum are registered trademarks of Lutron Electronics Co., Inc. Energi Savr Node, Radio Powr Savr, and Vive are trademarks of Lutron Electronics Co., Inc.

#### **Contact Lutron**

[lutron.com](http://lutron.com)

Lutron Electronics Co., Inc., 7200 Suter Road, Coopersburg, PA 18036-1299

#### **Customer Assistance**

Online: [lutron.com/help](http://lutron.com/help)

Email: [support@lutron.com](mailto:support@lutron.com)

Phone: 1.844.LUTRON1 (588.7661) — includes 24/7 technical support

© 07/2022 Lutron Electronics Co., Inc. | P/N 367-2556 REV I

