

Catalog Volume 3

Connection diagrams for LCP128_{TM}




Dimmed

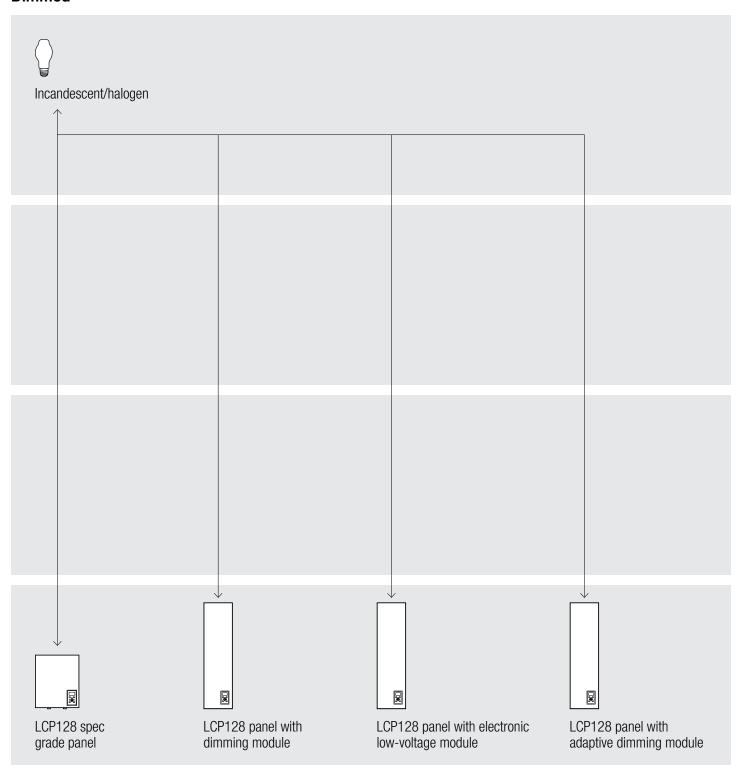

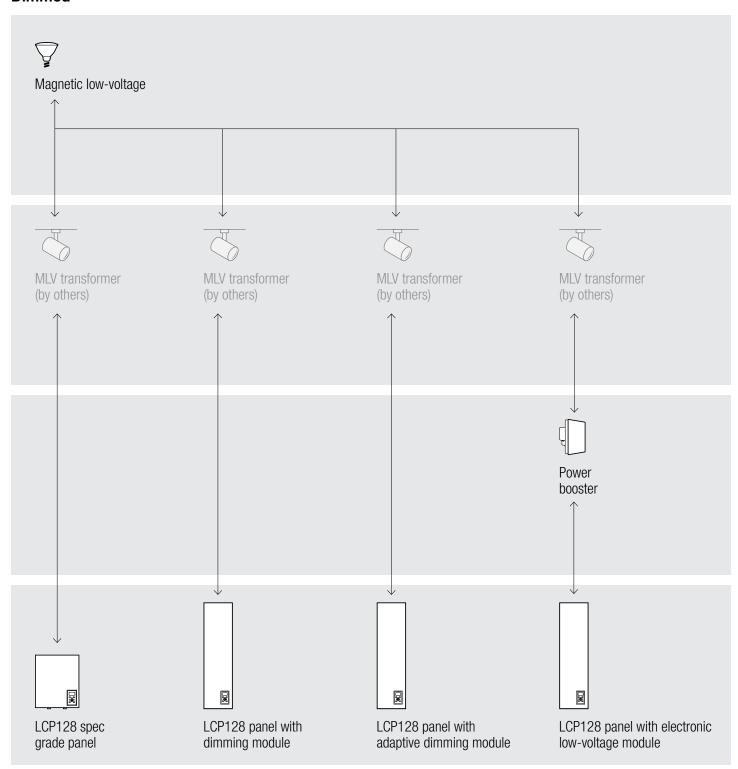


Connection diagrams | LCP128_{TM}


Dimmed

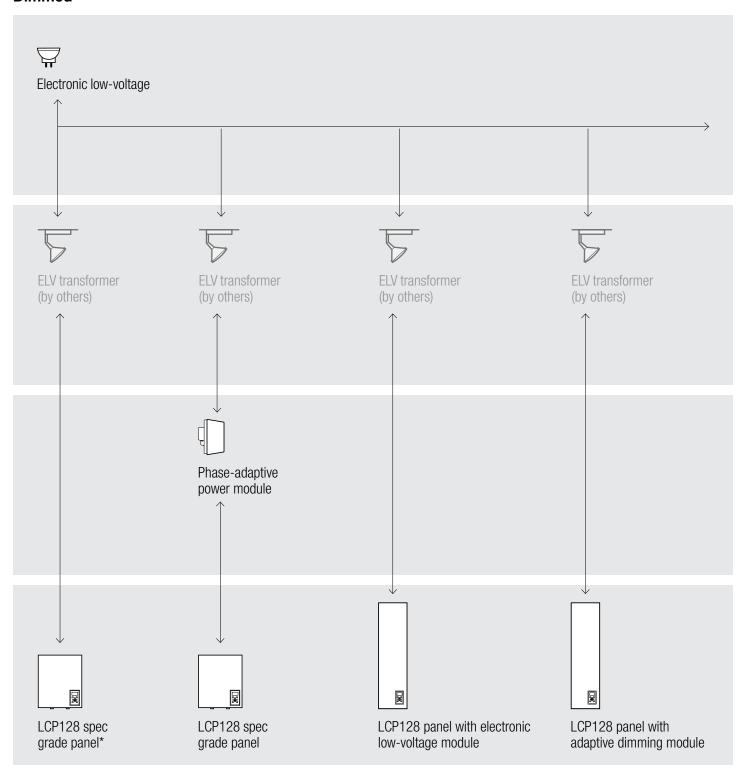


^{*} Forward phase only; reverse phase will require an interface

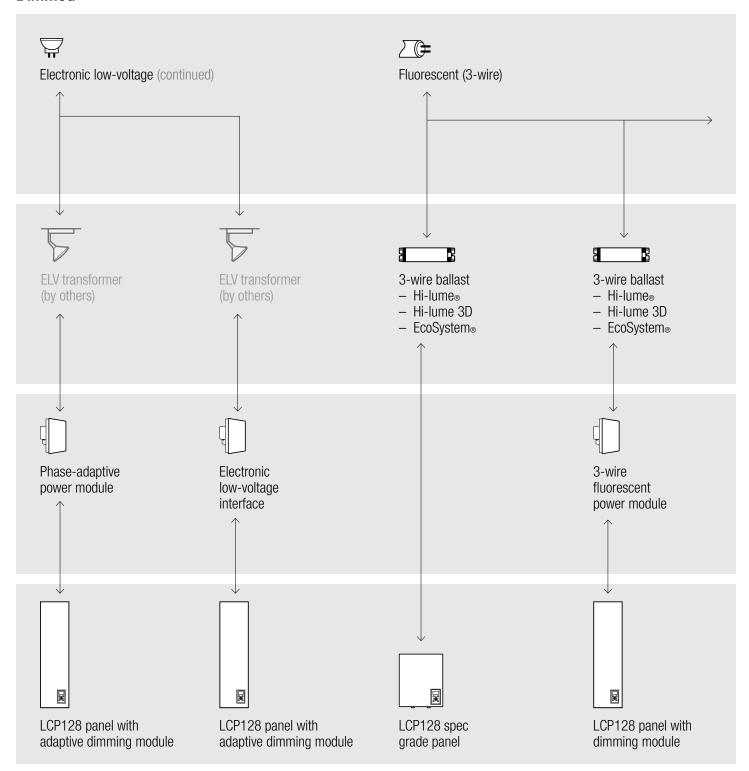



Dimmed

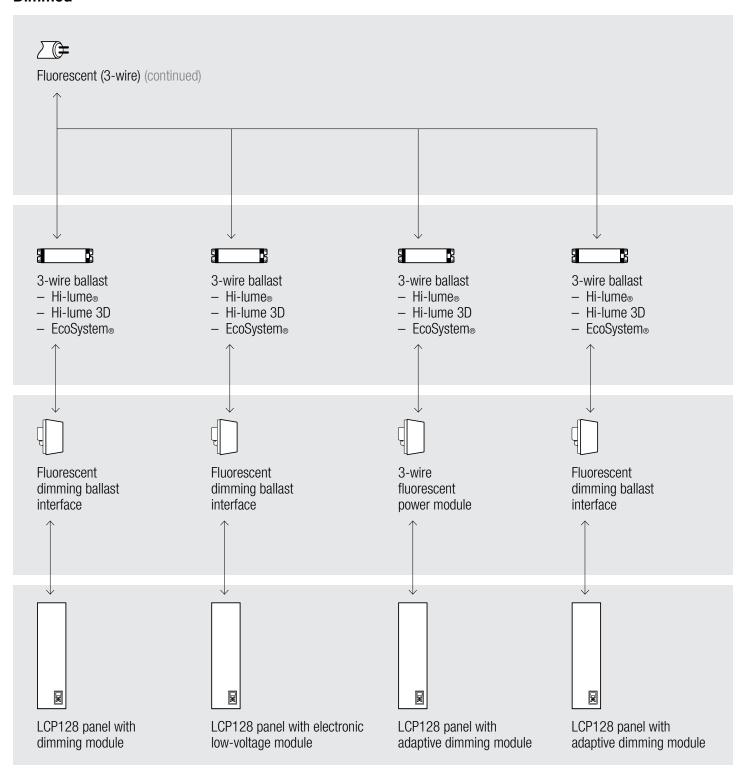

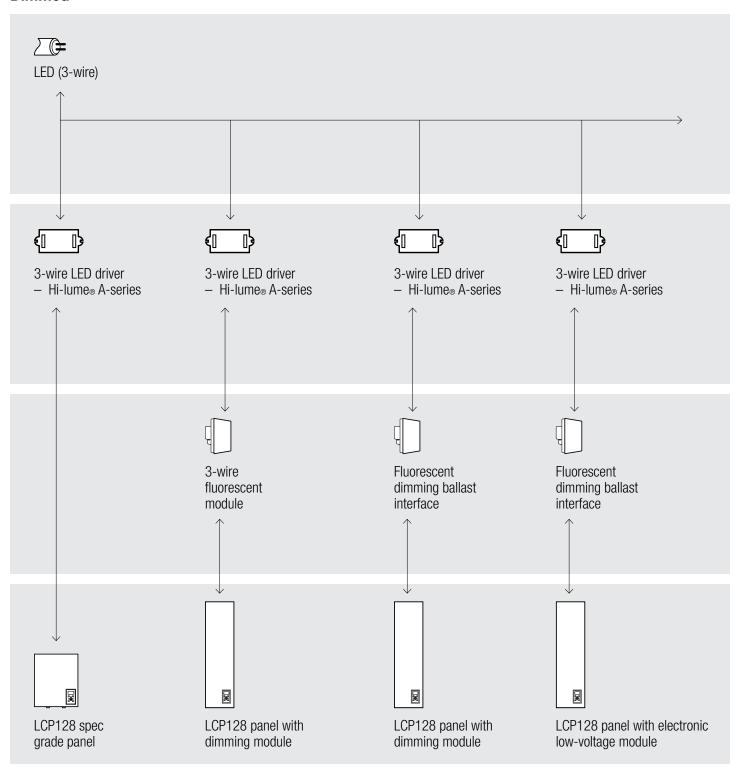


Dimmed

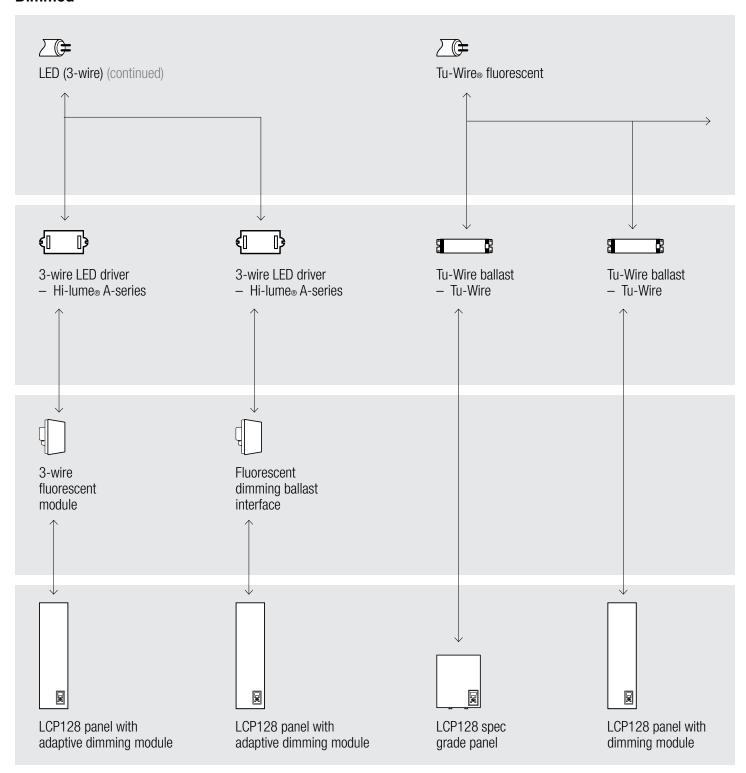


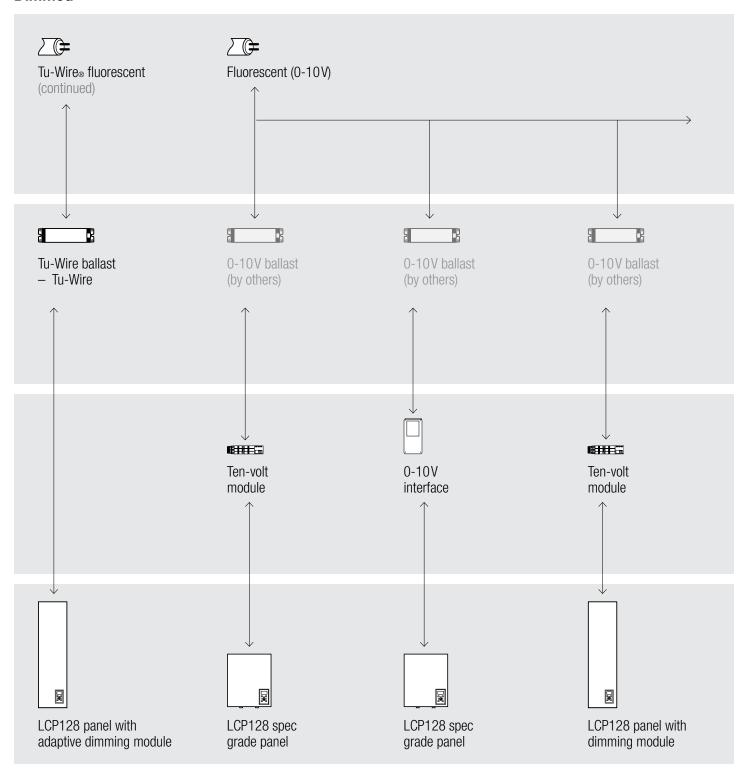


Connection diagrams | LCP128_{TM}


Dimmed

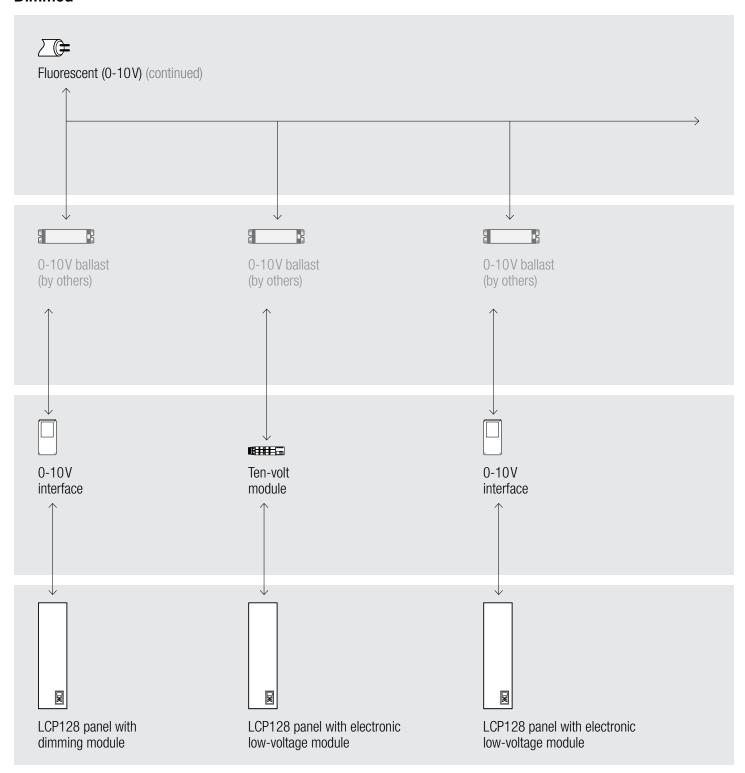

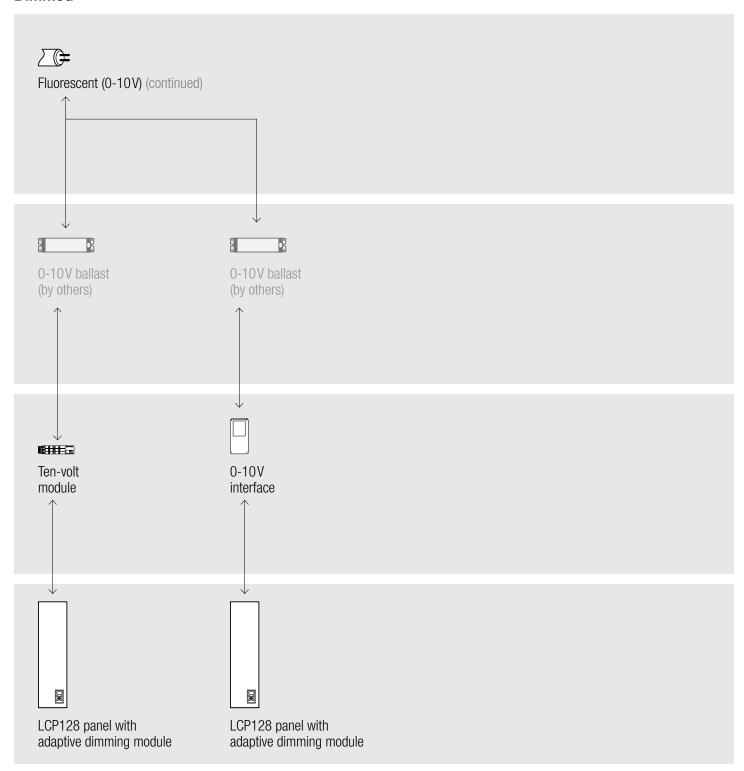



Dimmed

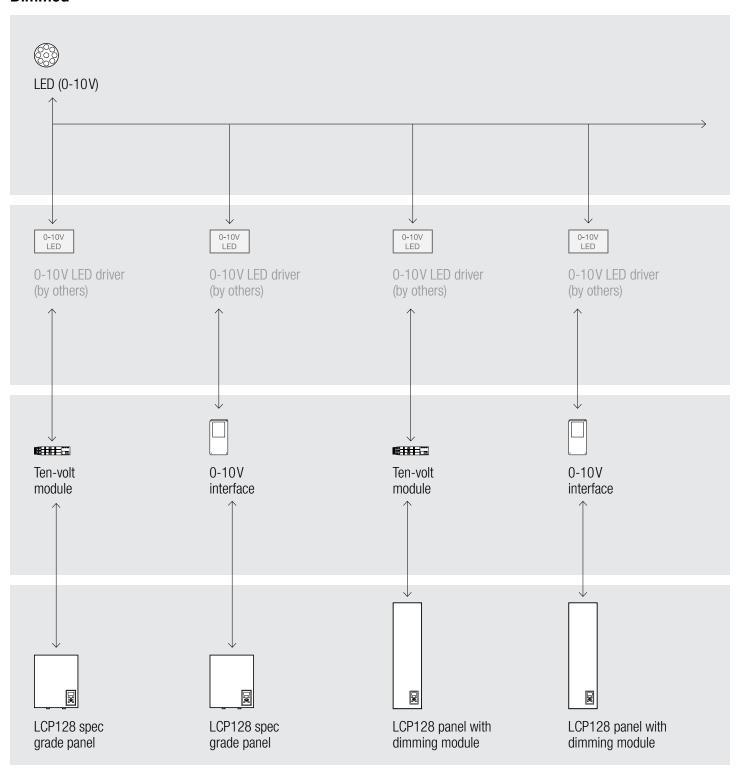

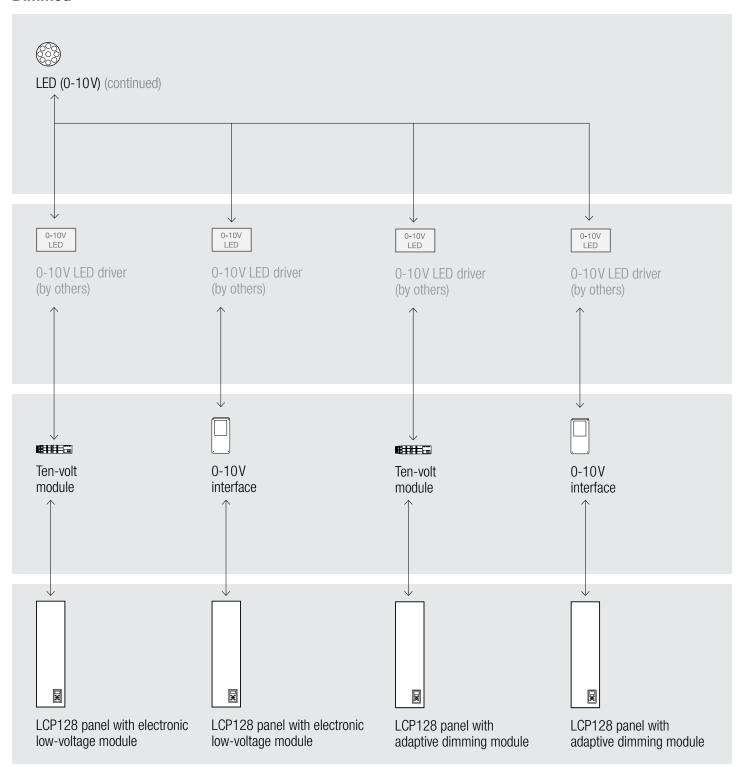



Dimmed

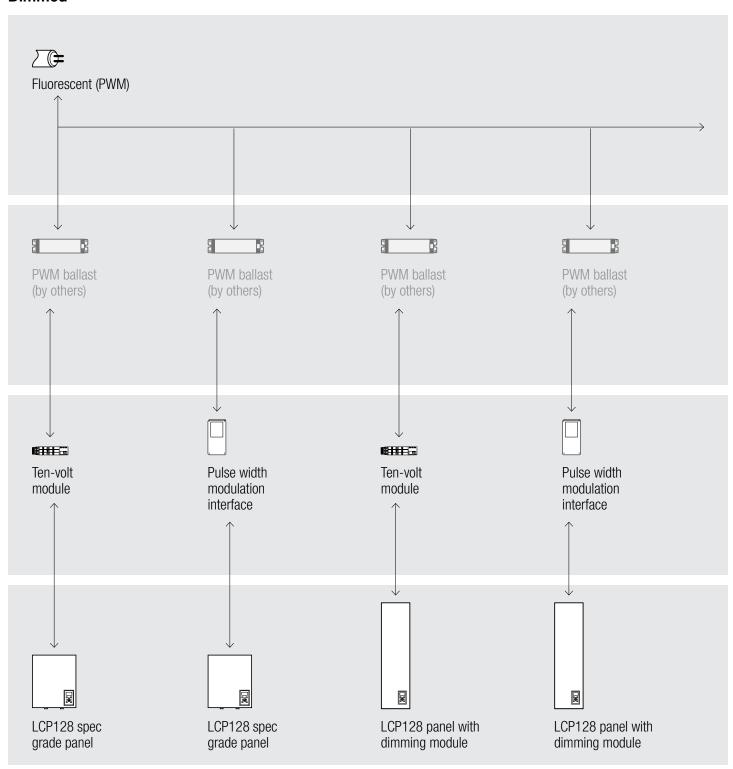


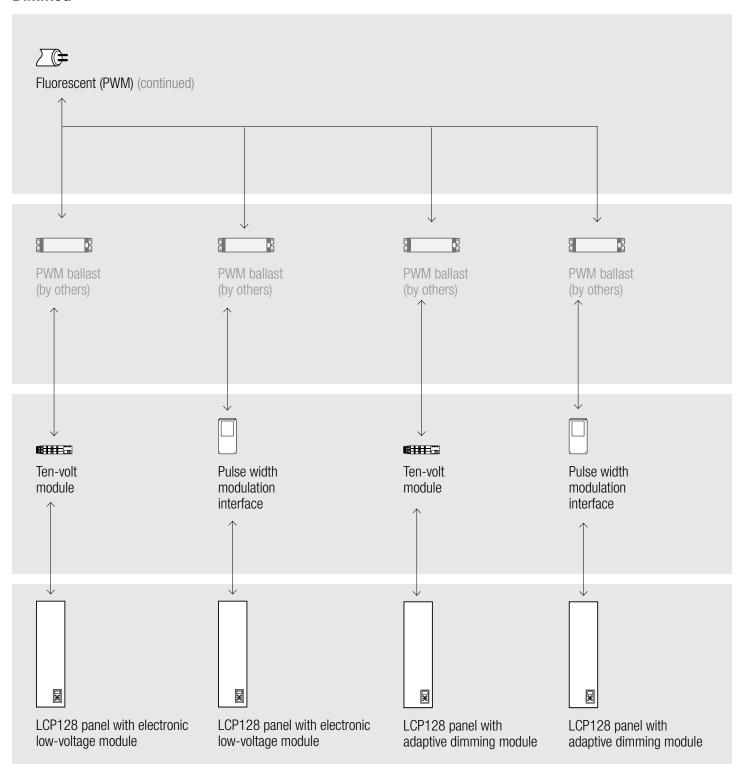


Dimmed

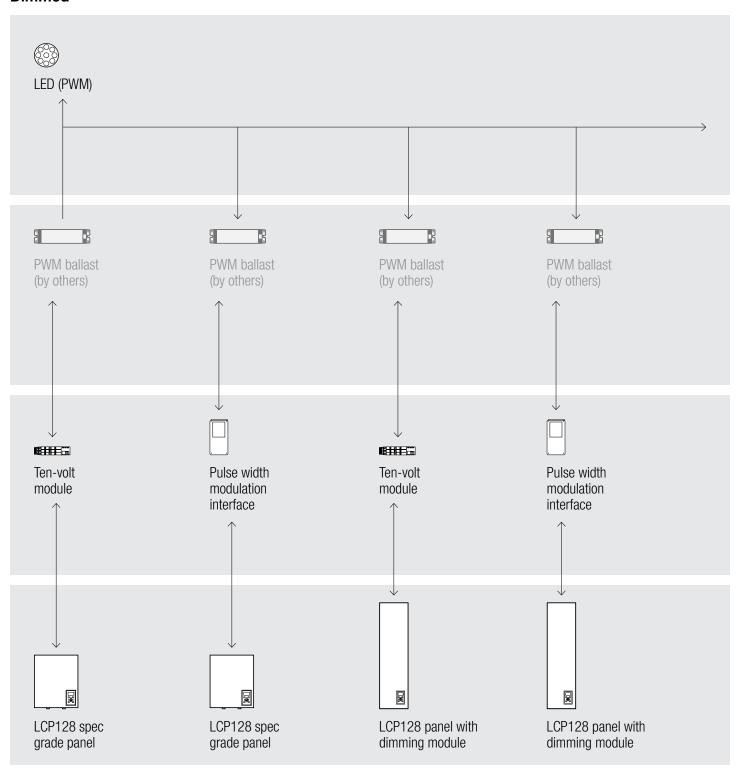

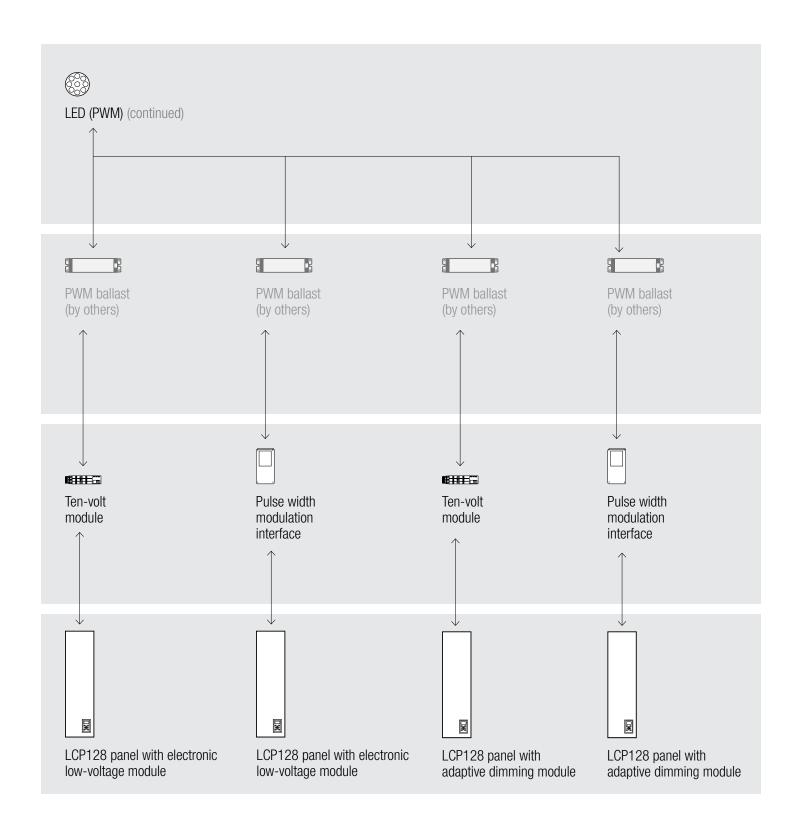

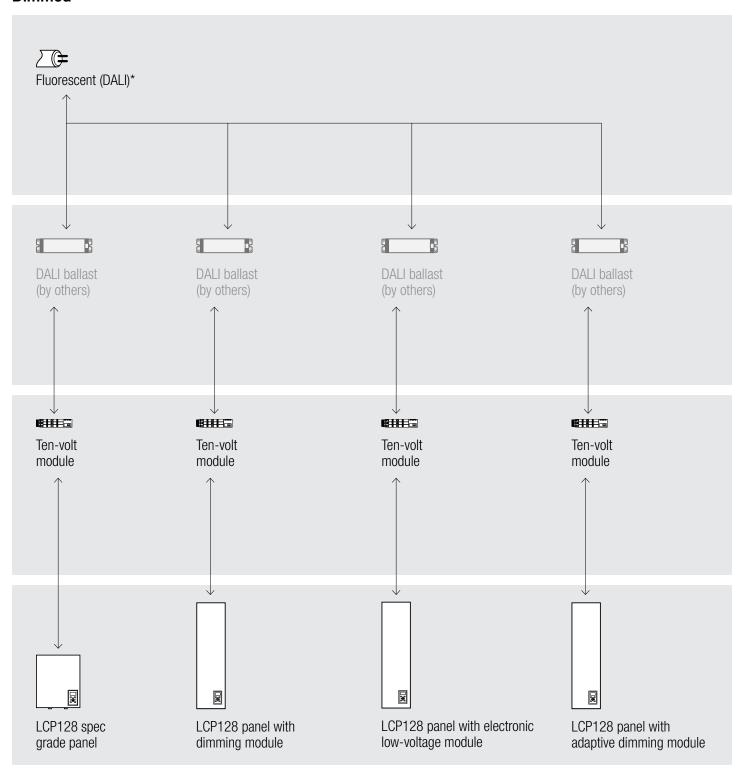



^{*} DALI broadcast only

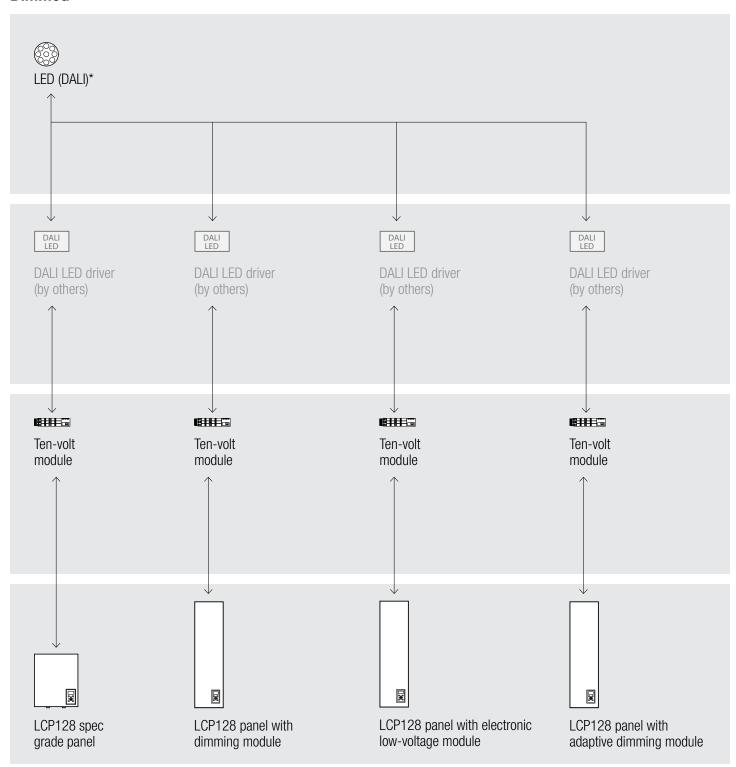

^{*} DALI broadcast only

Dimmed

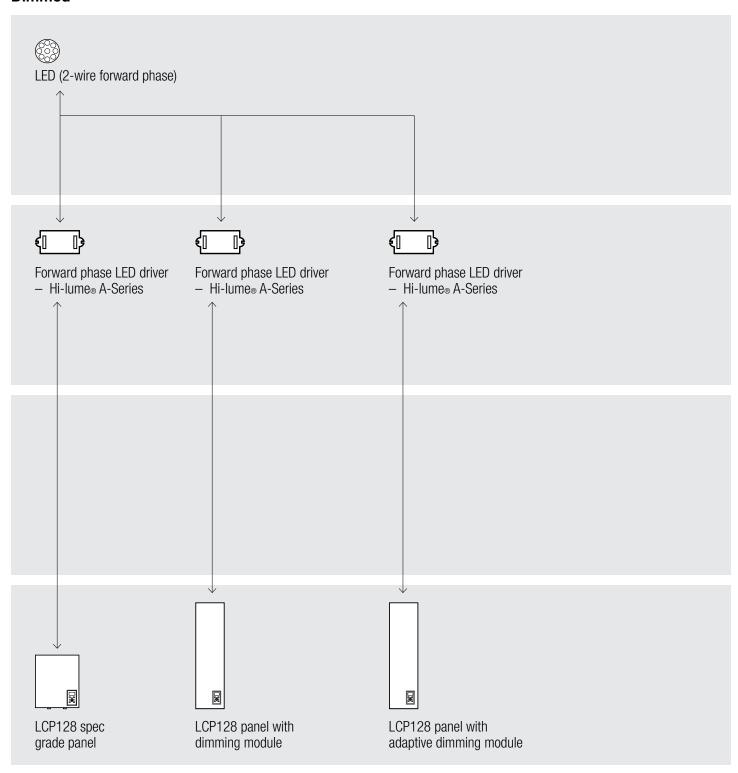


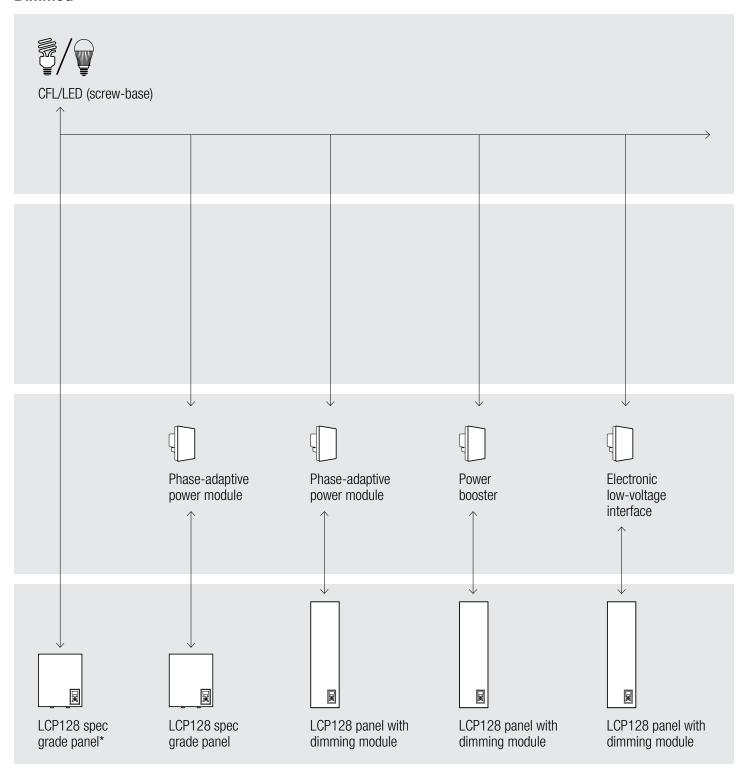


^{*} Forward phase only; reverse phase will require an interface

Connection diagrams | LCP128_{TM}


Dimmed

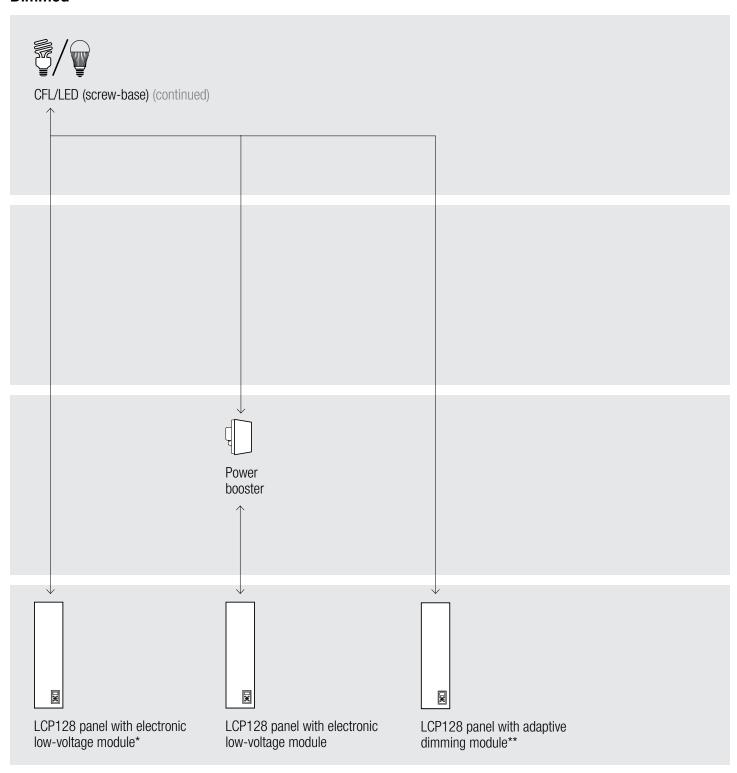


- Reverse phase only; forward phase will require an interface
- Visit www.lutron.com/LEDtool for a complete list of LEDs compatible with this module

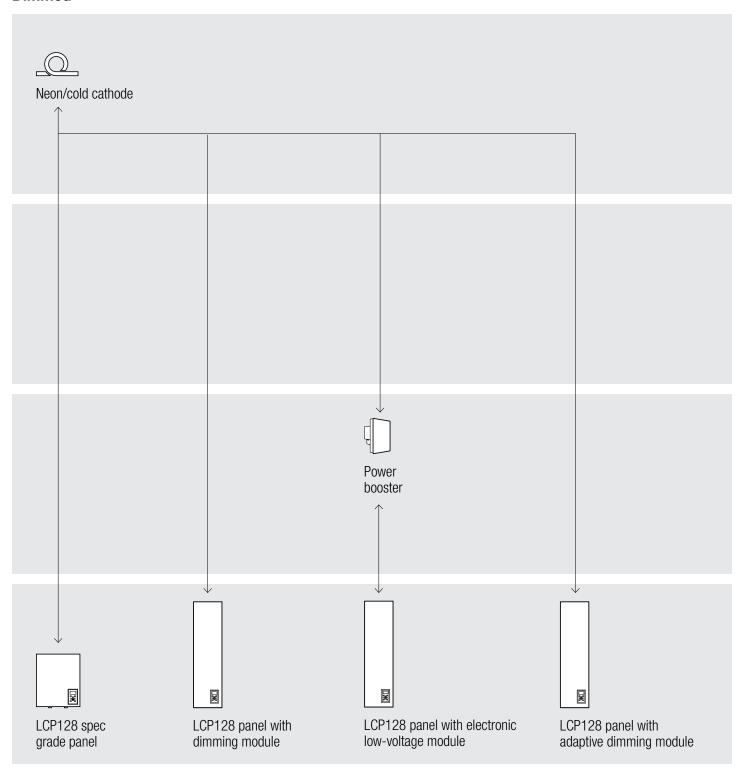



Switched

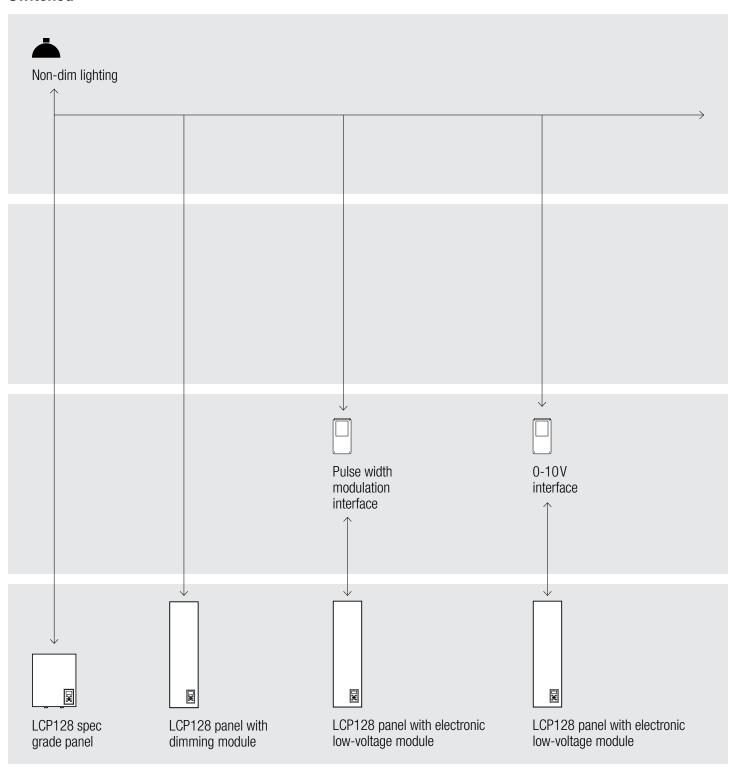

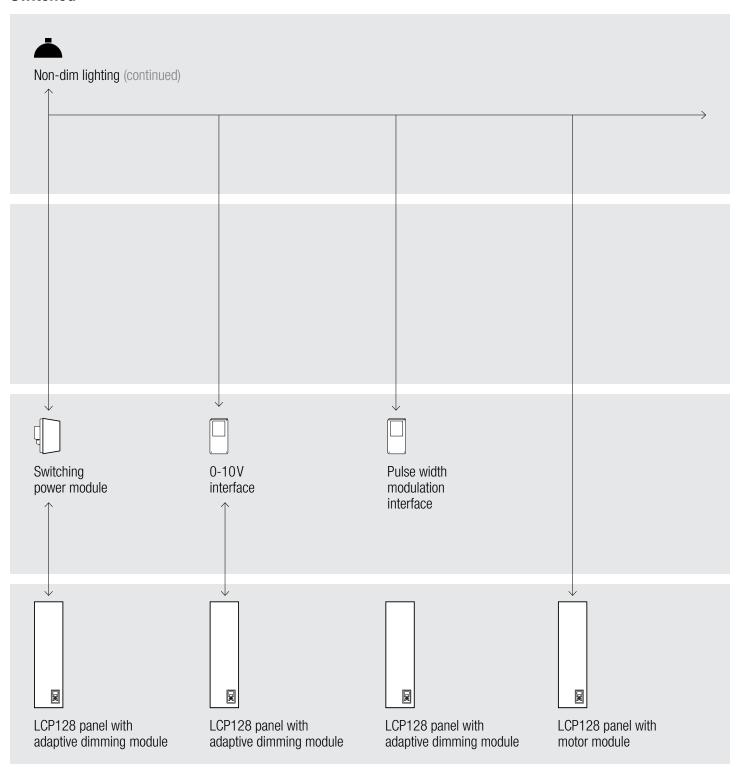



Switched

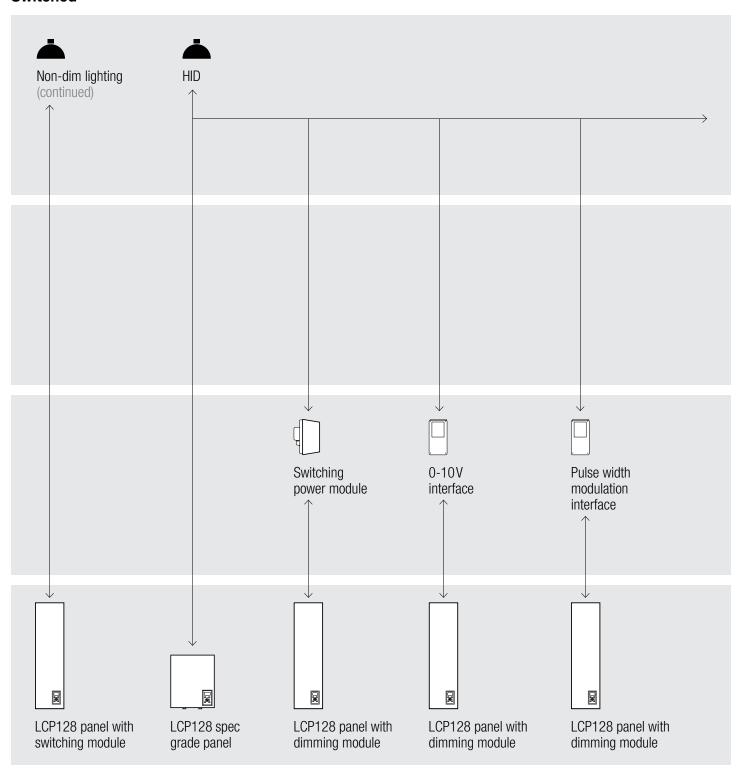

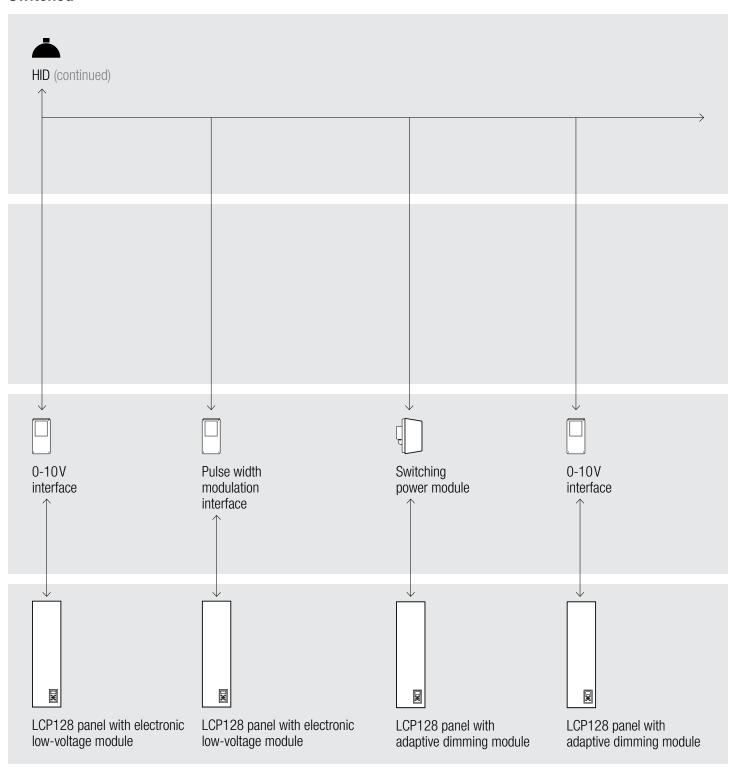



Switched

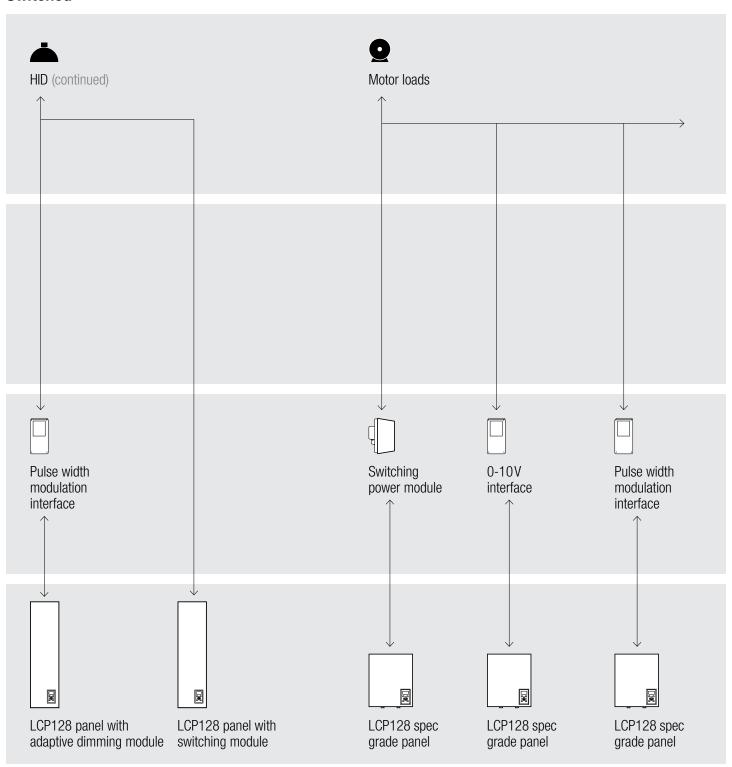


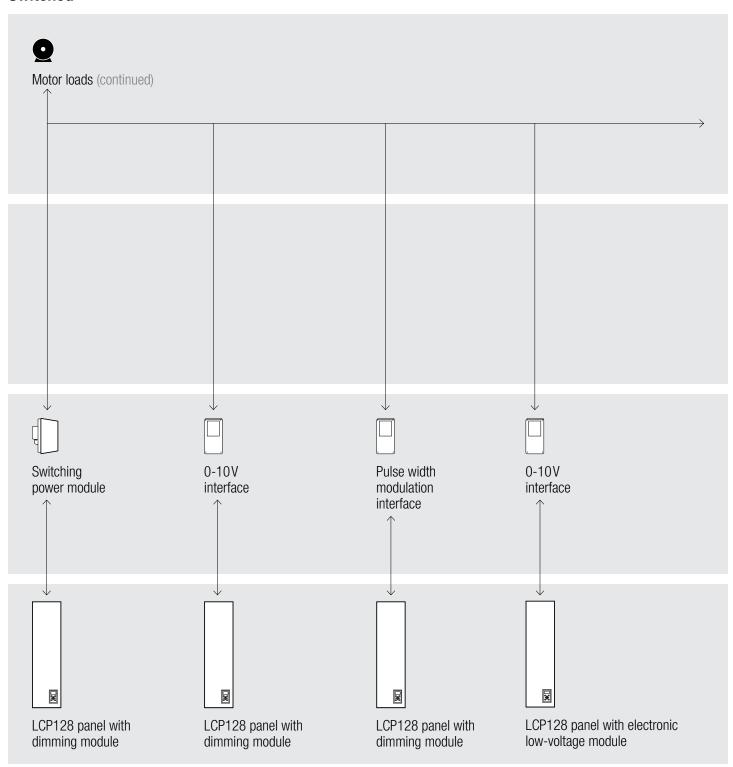



Switched

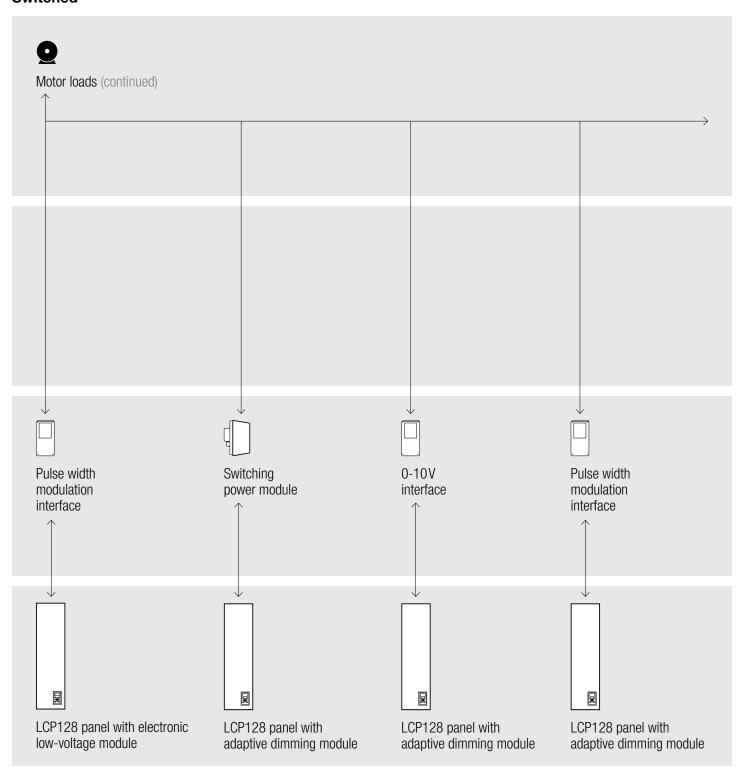

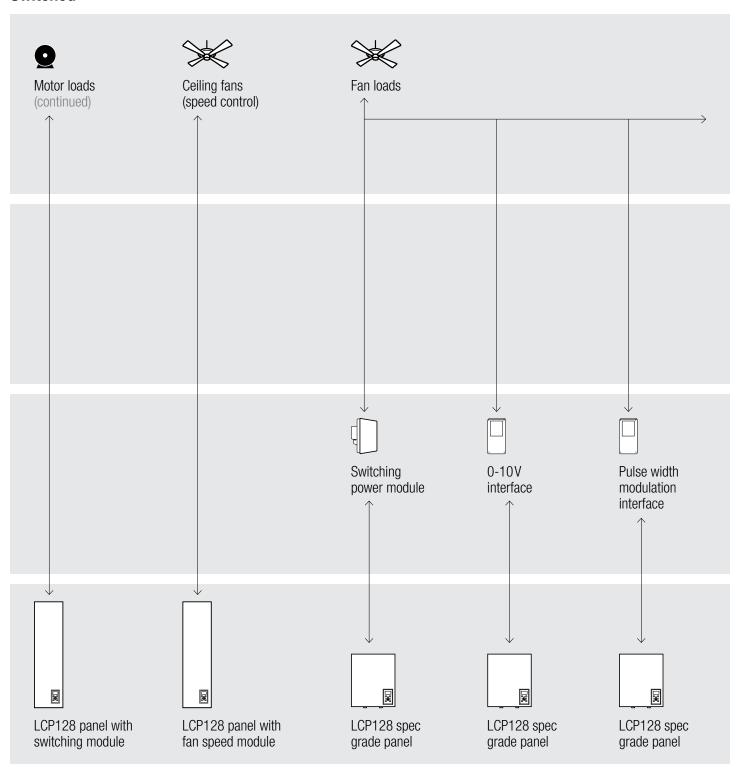


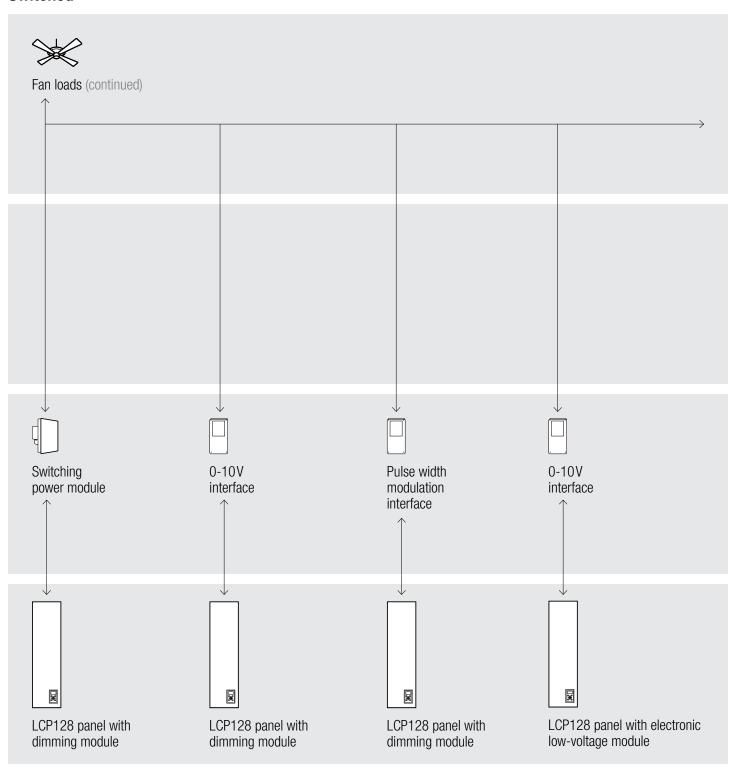

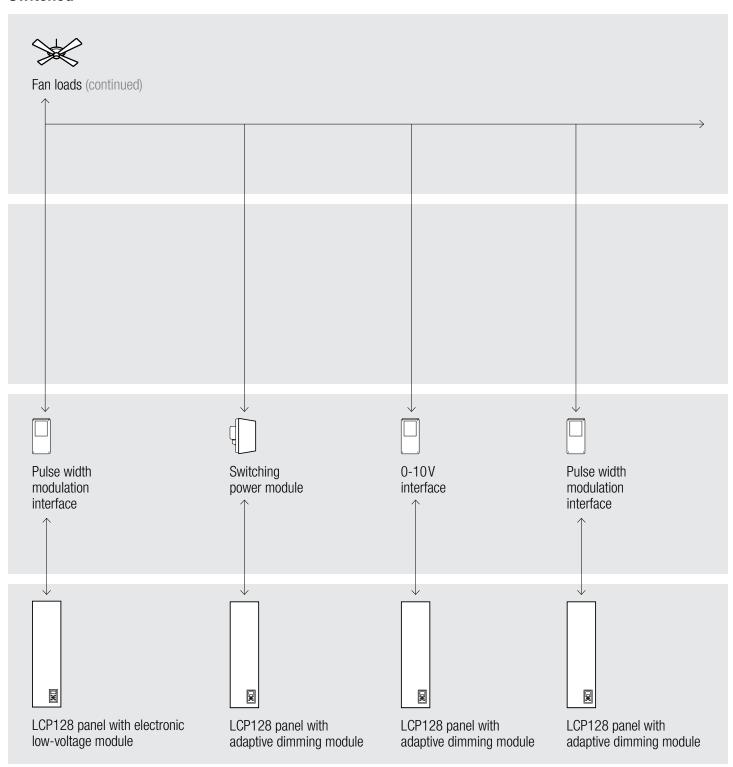


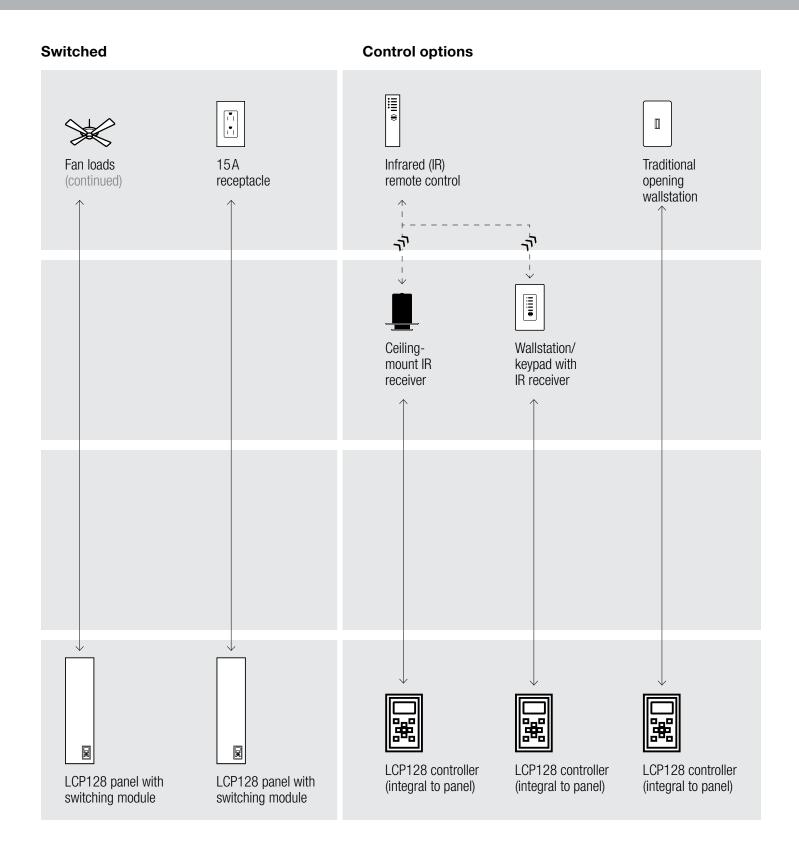



Control options

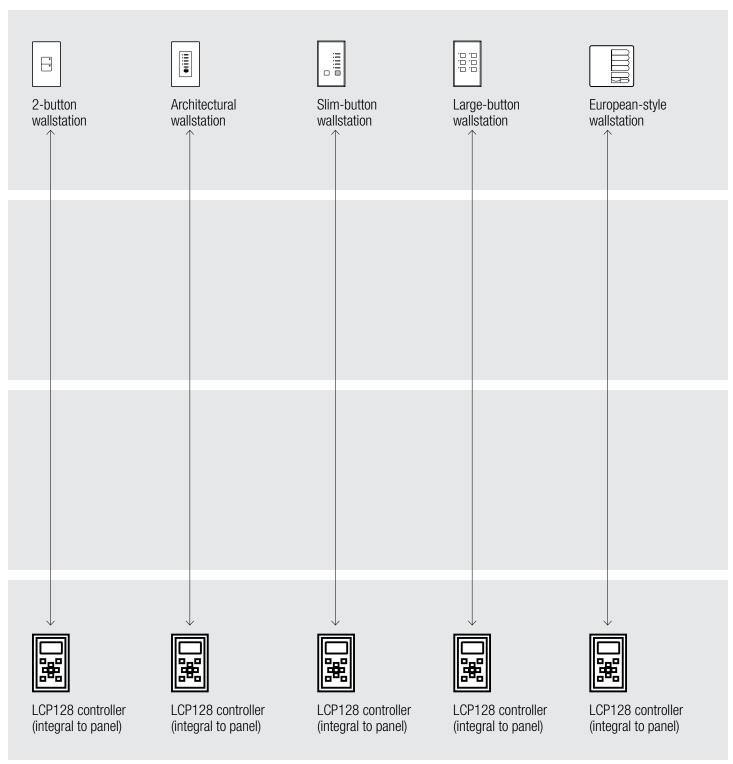

Control options

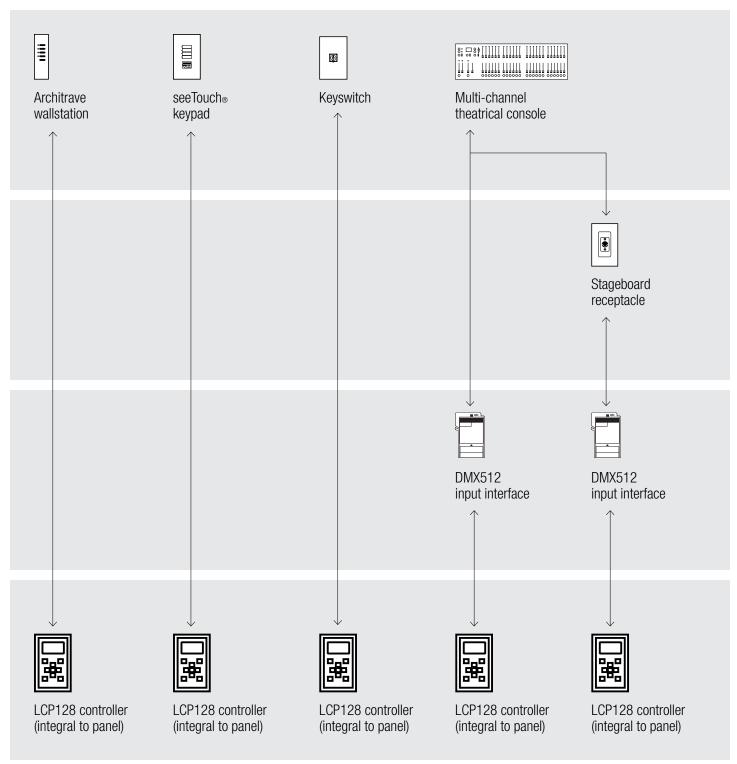

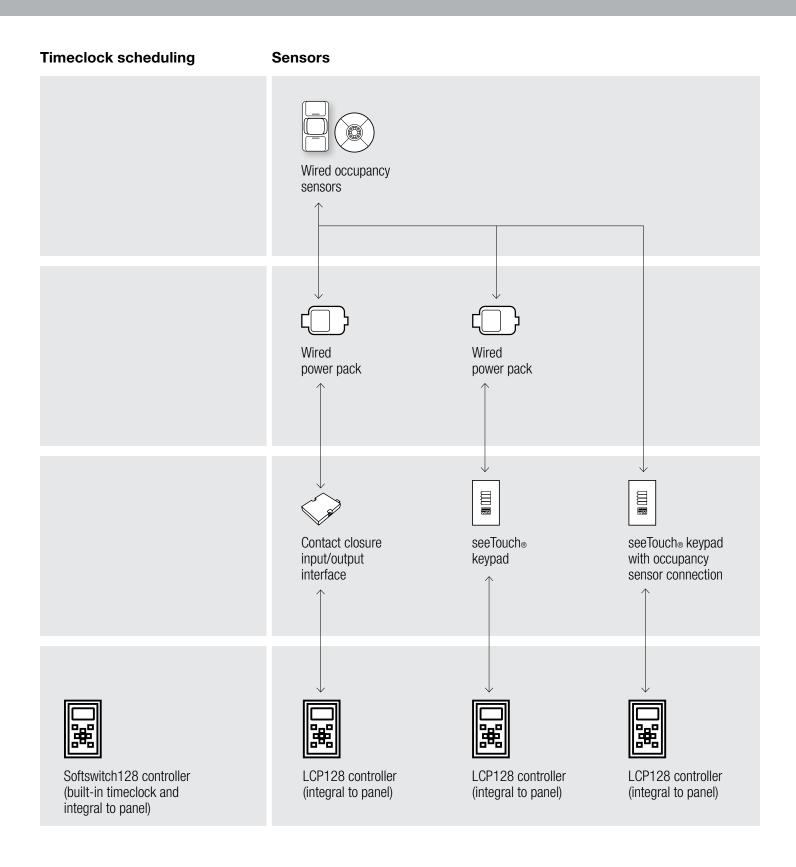

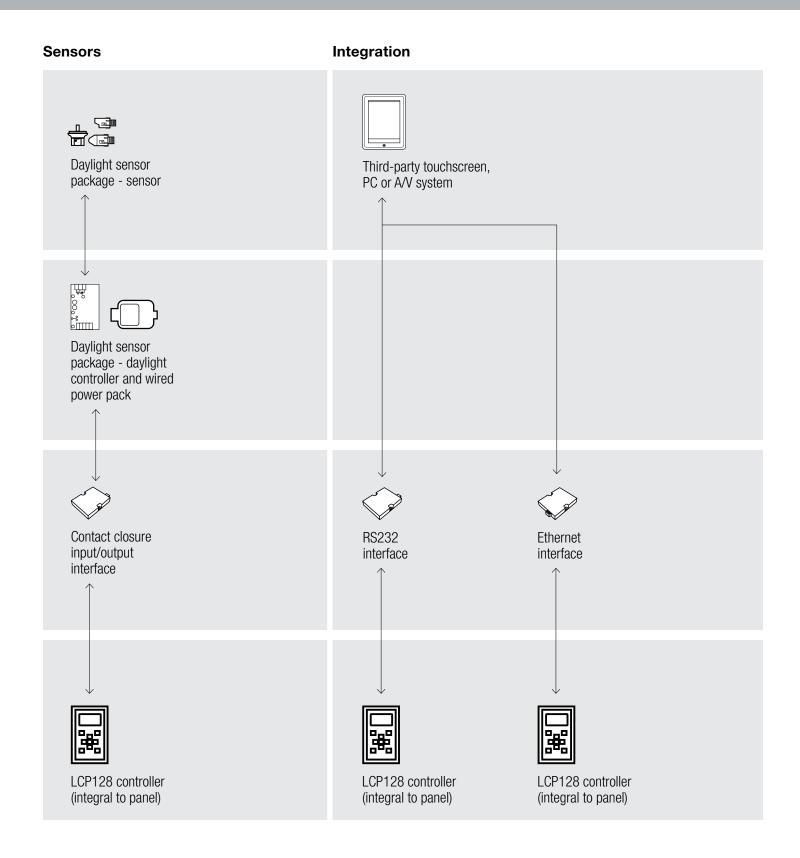

Integration

