


Maestro 0–10 V \sim Dimmer Sensor Applications

This document serves as a supplement to the Maestro 0–10 V \sim Dimmer Sensor Installation Guide for the following model numbers:

- MS-Z101-XX: Occupancy/Vacancy Sensor
- MS-Z101-V-XX: Vacancy Sensor

Note: For performance specifications, including load ratings, see the Maestro 0–10 V \sim Dimmer Sensor spec submittal (Lutron P/N 369833) at www.lutron.com

Maestro 0–10 V \sim Dimmer Sensor User Interface (shown without faceplate)

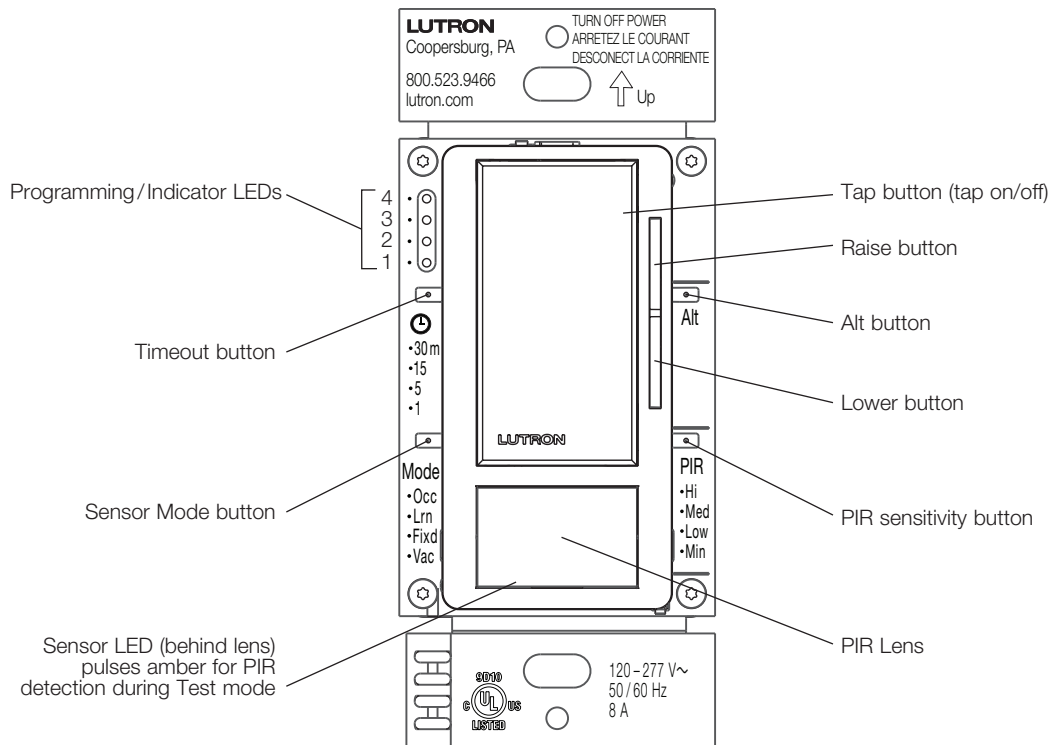

Contents

Glossary	3
Sensor Coverage Area	4
Settings Overview	5
Fade-to-On Rate	6
Fade-to-Off Rate	7
High-End Trim	8
Low-End Trim	9
Occupied Level	10
Preset Level	11
Off-While-Occupied	12
PIR Sensitivity	13
Selectable Dimming Curve	14
Timeout	15
Walk-Thru Mode	16
Sensor Mode	17
Fixed ALD Light Level	18
Learning Ambient Light Detect (ALD)	19
Test Mode	20
Default Settings	20
Wiring Installations with the Maestro 0–10 V $\overline{\text{V}}$ Dimmer Sensor	21
Single-Pole Installation	21
3-Way Installation with Standard Mechanical Switch	22
3-Way Retrofit Installation	23
120 V \sim Multi-Location Installation with Maestro Accessory Switches	24
220–277 V \sim Multi-Location Installation with Maestro Accessory Switches	25
Common Applications and Questions	26
Energy Codes Requiring Daylighting	28
NEMA 410 Inrush Current	29
Troubleshooting	30
Contact Information	32

Glossary

Fade-to-On	The time required for the lights to reach the preset light level when the Tap button is pressed.
Fade-to-Off	The time required for the lights to turn Off (from the On state) when the Tap button is pressed.
Fine Motion	Very small movements (e.g., reading a magazine).
High-End Trim	Highest achievable light level to which the Dimmer Sensor can be adjusted.
Indicator LEDs	LEDs that are used when programming the Dimmer Sensor.
Low-End Trim	Lowest achievable light level to which the Dimmer Sensor can be adjusted.
Major Motion	Large movements (e.g., walking, standing up, sitting down).
Minor Motion	Small movements (e.g., drinking a cup of coffee).
Occupancy	The sensor automatically turns On when you enter the room, and turns Off when you vacate the room.
Occupancy with Fixed ALD	The sensor automatically turns the lights On when you enter a room in which there is not enough ambient light. If there is enough light, it will NOT turn the lights On. The sensor will determine how much ambient light is enough, based on a fixed level you select. The sensor will turn the lights Off when the room is vacated.
Occupancy with Learning ALD	The sensor automatically turns the lights On when you enter a room in which there is not enough ambient light. If there is enough light, it will NOT turn the lights On. If the sensor does not respond as you desired, press the Tap button within 5 seconds of entering the room to change the state of the lights. Based on these interactions, the sensor will learn your preference for how much ambient light is sufficient. The sensor will turn the lights Off when the room is vacated.
Occupied Level	A programmable setting that determines the light level to which the Dimmer Sensor will turn on once occupancy has been detected.
Off-While-Occupied	Setting that determines whether the lights will stay Off when the sensor has been manually turned Off but motion is still detected.
PIR Sensitivity	Setting that adjusts the level of Passive Infrared sensitivity that your sensor will use to detect motion.
Preset Level	The Dimmer Sensor will turn all lights On to the last light level that has been selected by the user (1%–100%).
Selectable Dimming Curve	Choice of two dimming curves to optimize the perceived rate of change for your connected load.
Sensor LEDs	LEDs under the sensor lens that are used to show when motion is detected during Test Mode.
Sensor Mode	Setting that determines how your sensor will respond upon detecting initial occupancy. There are four available settings: Occupancy (Occ), Occupancy with Learning ALD (Lrn), Occupancy with Fixed ALD (Fixd), and Vacancy (Vac).
Tap Button	Large button used for manually turning the load On/Off.
Test Mode	A short Timeout with LED feedback that helps the user determine sensor coverage in the space.
Timeout	Setting that determines how long the lights will remain On after the room has been vacated and motion has not been detected.
Walk-Thru Mode	Setting that turns the lights Off before Timeout has expired if occupancy is detected only for a brief period.
Vacancy	The lights will turn On only if the Tap button is pressed. The sensor will turn the lights Off when the room is vacated.


Sensor Coverage Area

- The ability of the Dimmer Sensor to detect motion requires line-of-sight of room occupants. The Dimmer Sensor must have an unobstructed view of the room.
- Hot objects and moving air currents can affect the performance of the Dimmer Sensor. For best performance, the Dimmer Sensor should be mounted at least 4 ft (1.2 m) away from HVAC vents and light bulbs.
- The performance of the Dimmer Sensor depends on a temperature differential between the ambient room temperature and that of room occupants. Warmer rooms may reduce the ability of the Dimmer Sensor to detect occupants.

NEMA WD7 Test Grid Coverage


Test room dimensions: 37 ft × 38 ft (11.28 m × 11.6 m)
 Test floor surface material: Carpet
 Sensor coverage angle: 180°

Major motion coverage: 900 ft² (81 m²)
 Minor motion coverage: 400 ft² (36 m²)

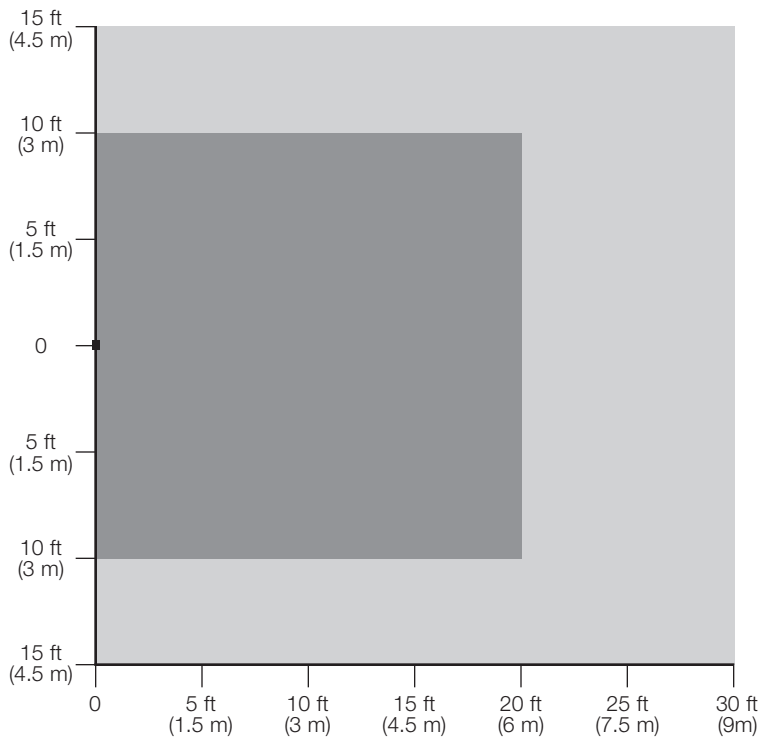


Horizontal Beam Diagram

(For Reference Only)

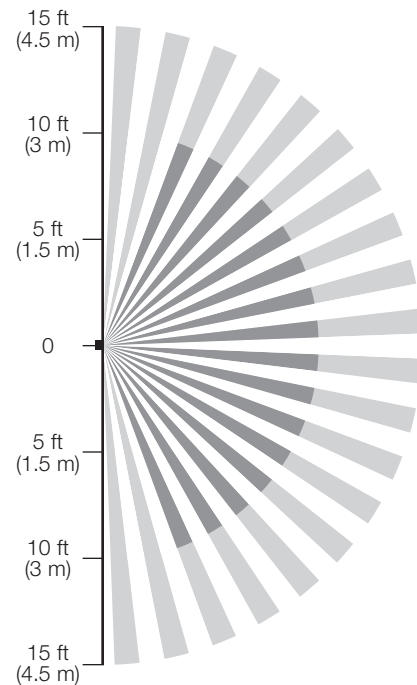

Vertical Beam Diagram

(For Reference Only)

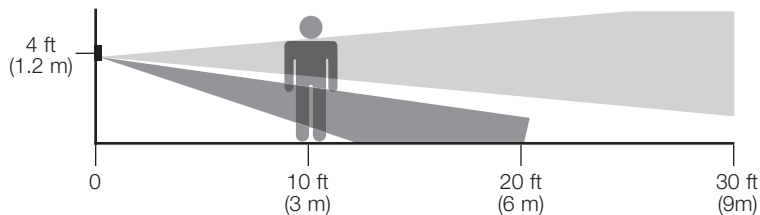

Settings Overview

The Maestro 0–10 V== Dimmer Sensor has many features that allow you to configure the unit to meet your individual needs. This page includes all the button press shortcuts for modifying those features. For detailed information on each setting, please see the corresponding page.

To display the current settings


Tap the Timeout (**T**), Sensor Mode (**M**), or PIR Sensitivity (**P**) button. The indicator LED (**IL**) that corresponds to the current setting will illuminate.

To change the current settings

Press and hold the desired button (**T**, **M**, or **P**) until an **IL** begins to flash (about 3 seconds).

Tap the same button to cycle to your desired setting.

Press and hold the same button until the **IL** turns solid to lock your selection (about 3 seconds).

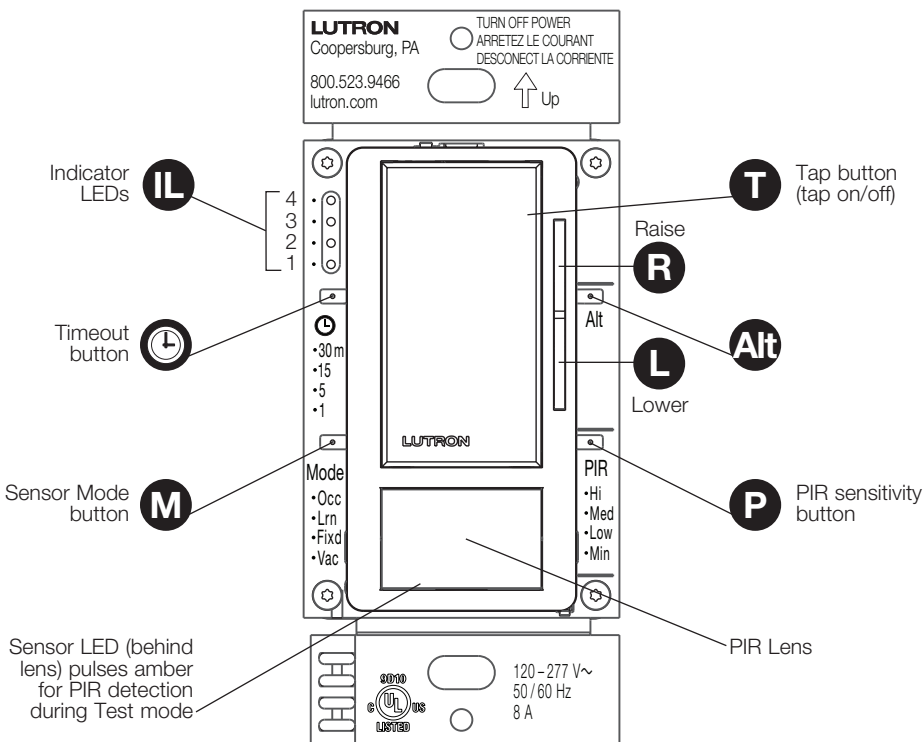

Button Press Shortcuts (default settings are shown in **bold**)

Fade-to-On Rate	page 6
<ul style="list-style-type: none"> 15 sec 5 sec 2.5 sec 0.75 sec 	T + R


Fade-to-Off Rate	page 7
<ul style="list-style-type: none"> 15 sec 5 sec 2.5 sec 0.75 sec 	T + L

High-End Trim	page 8
<ul style="list-style-type: none"> High Range Medium Range Low Range Minimum Range 	T + R

Low-End Trim	page 9
<ul style="list-style-type: none"> High Range Medium Range Low Range Minimum Range 	T + L

Occupied Level	page 10
<ul style="list-style-type: none"> 100% 50% Preset 	M + R

Preset Level	page 11
<ul style="list-style-type: none"> Locked: High Range Locked: Medium Range Locked: Low Range Locked: Minimum Range 	M + L

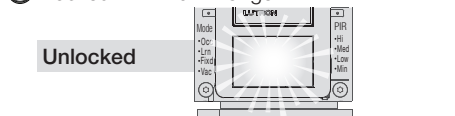

Off-While-Occupied	page 12
<ul style="list-style-type: none"> Disabled Enabled 	T + P

PIR Sensitivity	page 13
<ul style="list-style-type: none"> High Medium Low Minimum 	P

Selectable Dimming Curve	page 14
<ul style="list-style-type: none"> True Square Law Linear 	R + Alt

Timeout	page 15
<ul style="list-style-type: none"> 30 minutes 15 minutes 5 minutes 1 minute 	T

Walk-Thru Mode	page 16
<ul style="list-style-type: none"> Disabled Enabled 	T + Alt

Sensor Mode	page 17
<ul style="list-style-type: none"> Occupancy: Auto-On/Auto-Off Occupancy with Learning ALD Occupancy with Fixed ALD Vacancy: Manual-On/Auto-Off 	M

Fixed ALD Light Level	page 18
<ul style="list-style-type: none"> High Medium Low Minimum 	M + Alt

Fade-to-On Rate

Faster Fade-to-On rates are more practical; slower Fade-to-On rates are thought to be more elegant.


If the light that is controlled by the dimmer is the first or only light that will be turned ON in a particular room, most people find it advantageous to use a faster Fade-to-On rate so that the room is immediately illuminated. Art lighting or other accent lighting is often more pleasing with a slower Fade-to-On rate.

This Fade-to-On rate adjustment applies only to manual actuation of the Tap (T) button. The occupancy based Fade-to-On rate is fixed to 0.5 seconds for Auto-On.

Changing the Fade-to-On Rate

1. **Press and hold** (C) and (R) until an indicator LED (IL) begins to flash (about 3 seconds). **Release** both buttons.
2. **Tap** (C) or (R) **repeatedly to select** desired setting.
3. **Hold** (C) or (R) **to save** setting.

Fade-to-On Rate	
IL	Settings
<input type="radio"/>	15 seconds
<input type="radio"/>	5 seconds
<input type="radio"/>	2.5 seconds
<input checked="" type="radio"/>	0.75 seconds (default)

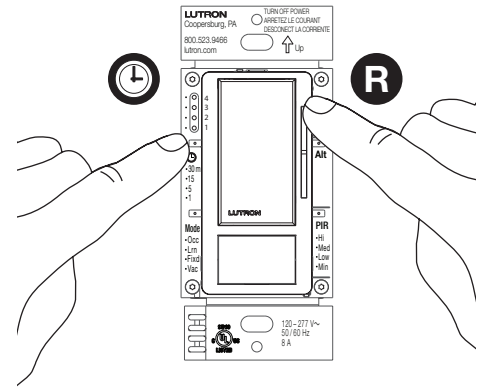

Fade-to-Off Rate


A slower Fade-to-Off rate is suggested for rooms where the user wishes to leave while the lights are still providing illumination. Please be aware that dimming of the light may not be immediately noticeable for settings of 5 seconds or longer.

This Fade-to-Off rate adjustment applies only to manual actuation of the Tap (T) button. The occupancy based Fade-to-Off rate is fixed to 10 seconds for Auto-Off.

Changing the Fade-to-Off Rate

1. **Press and hold** (IL) and (L) until an indicator LED ((IL)) begins to blink or flash (about 3 seconds).
2. **Tap** (IL) or (L) **repeatedly to select** desired setting.
3. **Hold** (IL) or (L) **to save** setting.

Fade-to-Off Rate	
(IL) Settings	
<input type="radio"/>	15 seconds
<input type="radio"/>	5 seconds
<input checked="" type="radio"/>	2.5 seconds (default)
<input type="radio"/>	0.75 seconds

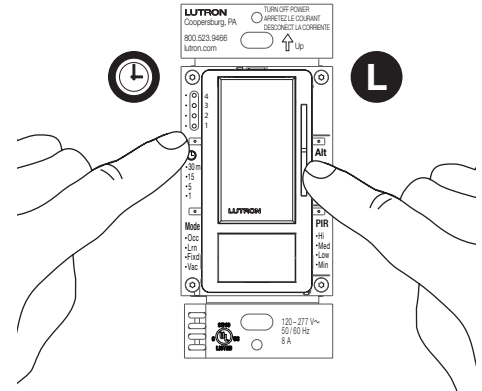


High-End Trim

High-end trim is adjustable from 6–10.5 V. The maximum light output of connected fixtures can be decreased for energy savings in over-lit spaces.

Changing the High-End Trim

1. **Press and hold T** and **R** until the PIR lens flashes (about 7 seconds).
2. **Press and hold R** until the #4 indicator light (**L**) is reached and the lights dim up no further.
3. **Hold L** until the desired light level is achieved.
4. **Single tap T** to save setting.

High-End Trim	
L	Settings
<input checked="" type="radio"/>	High range (default)
<input type="radio"/>	Medium range
<input type="radio"/>	Low range
<input type="radio"/>	Minimum range


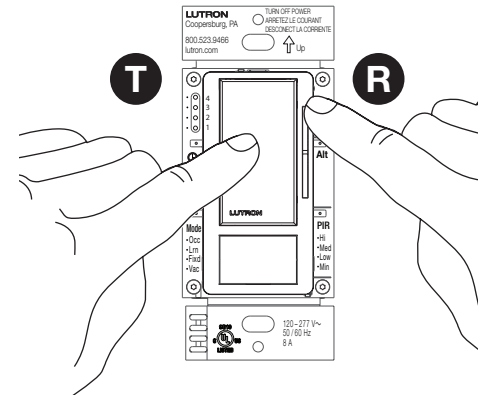


Low-End Trim

Low-end trim is adjustable from 0.6–2 V. Trimmable low-end can ensure a stable light level. Some fixtures will flicker or drop out if trimmed too low.

Changing the Low-End Trim

1. **Press and hold T** and **L** until the PIR lens flashes (about 7 seconds).
2. **Press and hold L** until the #1 indicator light (**L**) is reached and the lights dim down no further.
3. **Hold R** until all bulbs are on and stable (no flickering) or an otherwise desired light level is achieved.
4. **Single tap T** to save setting.

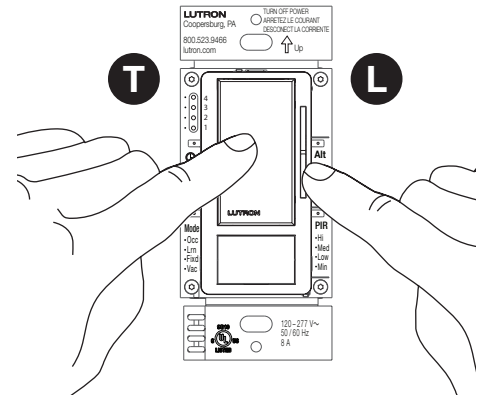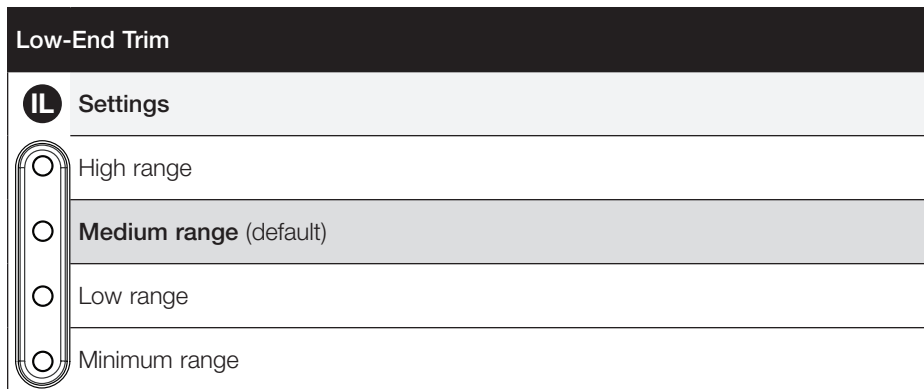

Occupied Level



A programmable setting that determines the light level to which the Dimmer Sensor will turn on once occupancy has been detected.

Which do I want?

- 100% will ensure that the lights are turned on to the brightest available level upon entering a room. If you want the most light possible upon entering a room, this is the best choice.
- If you would like the default level to match the default level of other Maestro products in your house, 50% is the default light level for manual operation of Maestro products.
- Preset Level allows for full customization of your preferred light level.
 - When the Occupied Level is set to the Preset Level, the Dimmer Sensor will automatically and manually turn on to the selected Preset Level (see page 11 for information on Changing the Preset Level).

Changing the Occupied Level

1. **Press and hold **M** and **R** simultaneously** until an indicator LED (**IL**) begins to flash (about 3 seconds).
Release both buttons.
2. **Tap **R** repeatedly to select** desired setting.
3. **Press and hold **R**** until the **IL** stays on solid **to lock** your selection.

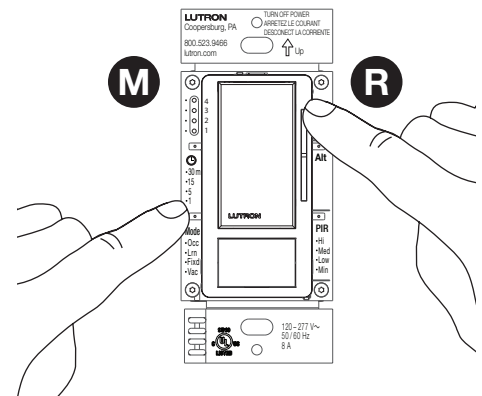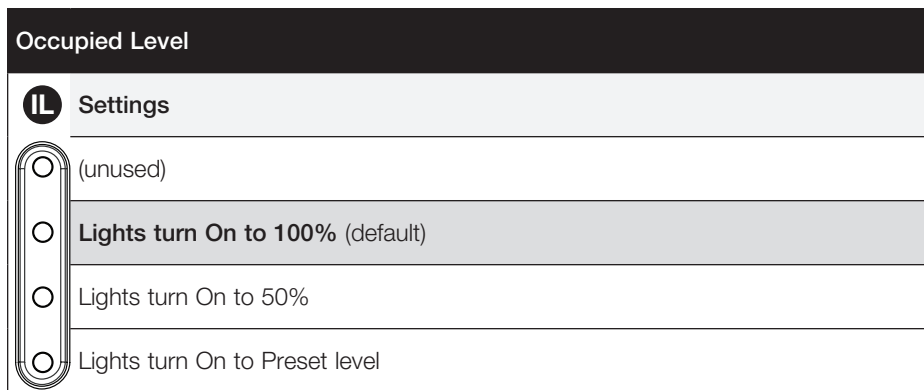

Off-While-Occupied

This setting determines how the sensor will respond when the lights are turned off, and the room remains occupied. Changing this setting will modify the behavior of all sensor modes, except for Vacancy mode.



- **Enabled:** If the lights are manually turned off, the sensor will keep those lights off for as long as the room is occupied and the timeout has not expired. This is the default setting of the Off-While-Occupied mode.
- **Disabled:** If the lights are manually turned off, the sensor will wait for 25 seconds before trying to detect occupancy again. This 25-second period is designed to allow occupants to exit a room without re-triggering the lights, while still providing the necessary Auto-On functionality for high-traffic areas. If the lights are turned Off and someone remains in the room, the lights will turn back On when motion is detected after about 25 seconds.

Which do I want?

- If you want the lights to turn On automatically when someone enters the room, and your application is a high-traffic area (e.g., bathroom, hallway), “Off-While-Occupied Disabled” is recommended to keep the sensor as responsive to brief occupancy as is possible.
- If you want the lights to turn ON automatically when someone enters the room, but you would also like to be able to turn the lights Off and have them stay off while the room is occupied (e.g., conference room presentations, movies), “Off-While-Occupied Enabled” is recommended. It is also likely that your timeout for this application will be greater than 5 minutes in situations where movement is minimal.

Changing the Off-While-Occupied Setting

1. Press and hold **⏸** and **P** simultaneously until an indicator LED (**IL**) begins to flash (about 3 seconds).
2. Tap **P** to cycle to your desired setting.
3. Press and hold **P** until the **IL** turns solid to lock your selection (about 3 seconds).

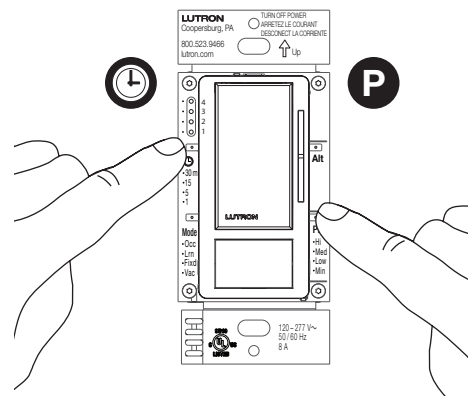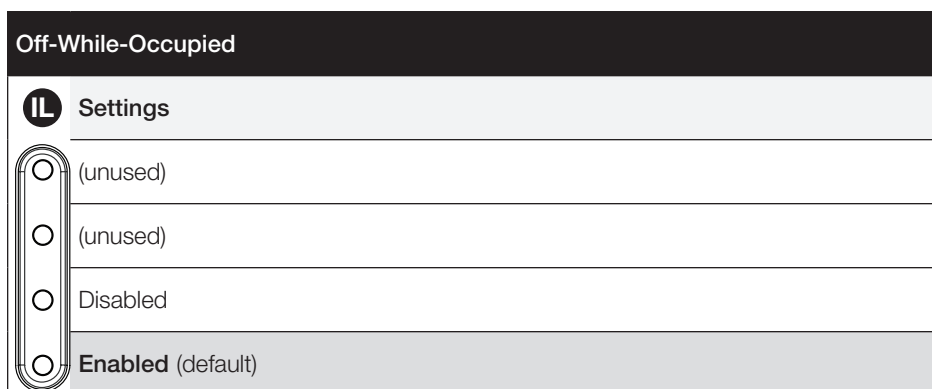

PIR Sensitivity

The PIR sensitivity of the sensor can be adjusted based on the expected level of activity in the room. The default setting is “High Sensitivity” which will perform best for most applications. Rarely, if the sensor is placed near external noise sources (e.g., heating and cooling vents), it may turn the lights On without occupancy. If this occurs, lowering the sensitivity to Medium, Low, or Minimum may resolve the problem.

Which do I want?



The type of activity and amount of foot traffic will help dictate at which setting the sensor should be set.

- **High Sensitivity:** Recommended for spaces in which the occupants will often be seated for long periods of time and performing fine motions (e.g., turning a page).
- **Low Sensitivity:** Recommended for spaces that generally experience only large motions (e.g., as foot traffic).

Additionally, if the sensor sees a specific area that is not desired (e.g., a hallway outside of the room in which the sensor is installed), Lutron offers a lens mask kit (Lutron P/N 50013614) that can be ordered through Customer Assistance (1.844.LUTRON1). Alternatively, selectively placing opaque tape (e.g., painters’ tape, electrical tape, masking tape) over certain parts of the lens can limit its field of vision to block undesired detection areas. Masking the lens may affect ALD performance.

Changing the PIR Sensitivity

1. **Press and hold P** until an indicator LED (IL) begins to flash (about 3 seconds).
2. **Tap P to cycle** to your desired setting.
3. **Press and hold P** until the IL turns solid **to lock** your selection (about 3 seconds).

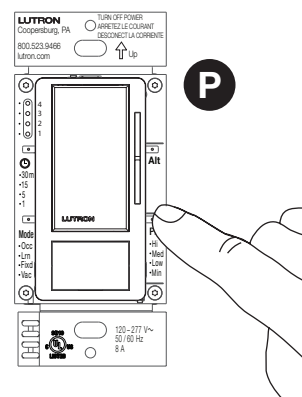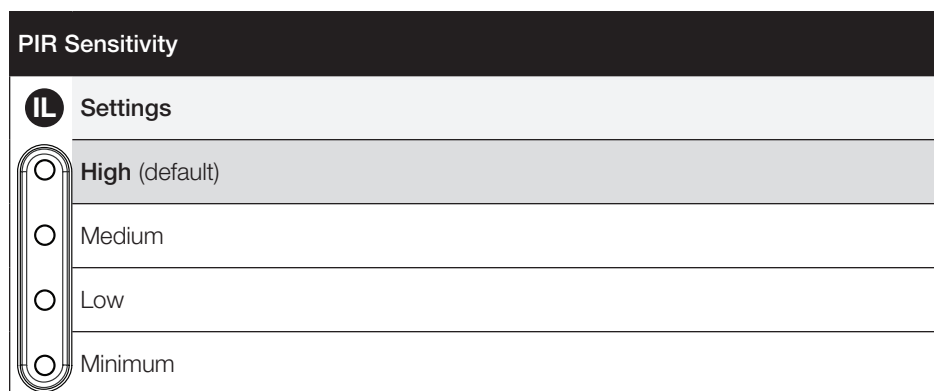

Selectable Dimming Curve

Our eyes do not perceive light in a linear fashion; the eye is more sensitive to changes in low intensities of light than in high. Square Law dimming provides a smoother, larger dimming range. To achieve square law dimming, the control and the fixtures must be configured properly as a pair. The option enables the user to match the fixture type in the field to achieve optimal dimming.

Which do I want?

- Selecting the Square Law dimmer curve can provide finer control at the low-end of the dimmable range. This may be beneficial if you notice less of a difference in the light level when dimming at the low-end of the dimmable range.

Smooth, balanced dimming is always preferred. In most cases, no changes are required to achieve this. Use the chart below to identify if the Dimmer Sensor's dimming curve needs to be adjusted.

Control	Driver/Ballast	What end-user might notice
Linear	Linear	The lights will dim from low-end to 80% quickly and then 80% to 100% slowly
Linear (default)	Square	Balanced dimming
Square	Linear	Balanced dimming
Square	Square	The lights will dim slowly from low end to 20% and then quickly from 20% to 100%

Changing the Selectable Dimming Curve

1. **Press and hold** **R** and **Alt** until an indicator LED (**IL**) begins to blink or flash (about 3 seconds). **Release** both buttons.
2. **Tap** **Alt** to cycle to your desired setting.
3. **Press and hold** **Alt** until the **IL** turns solid to **lock** your selection (about 3 seconds).

Selectable Dimming Curve


IL Settings

(unused)

(unused)

Square Law

Linear (default)

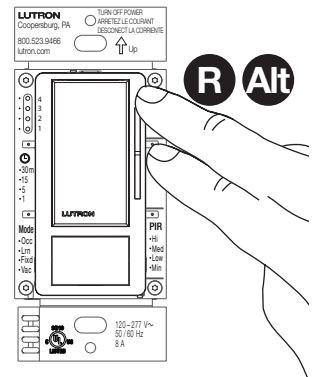

Walk-Thru Mode





Walk-Thru Mode is a setting that allows lights set with a long timeout to shut off after a short duration when the space is occupied only momentarily. After initial occupancy, this mode allows the sensor to turn the lights in the room Off if the space is occupied for a very brief amount of time (less than 3 minutes). If motion is detected consistently within 3 minutes of initial occupancy, the sensor will keep the lights On for the normal timeout setting.



- **Walk-Thru Mode Enabled:** If the space is occupied momentarily, the lights will turn off after 3 minutes instead of the normal timeout setting.
- **Walk-Thru Mode Disabled:** The lights will always remain On for the full timeout duration.

Which do I want?

- If you would like the lights in your space to turn off quickly when the space is only briefly occupied, select “Enabled”. This setting is ideal for conference rooms with long timeouts that may experience periodic brief occupancy events, such as a second-shift cleaning crew or a security guard checking the campus of a commercial building.
- If you prefer consistent sensor behavior or use CFL or fluorescent lights in your application, Walk-Thru Mode should be “Disabled”.

Changing the Walk-Thru Mode

1. **Press and hold**  and **Alt** until the indicator LED () begins to flash.
2. The Walk-Thru Mode setting will now be displayed on the . **Tap Alt** to cycle to your desired setting.
3. **Press and hold Alt** until the  turns solid to **lock** your selection (about 3 seconds).

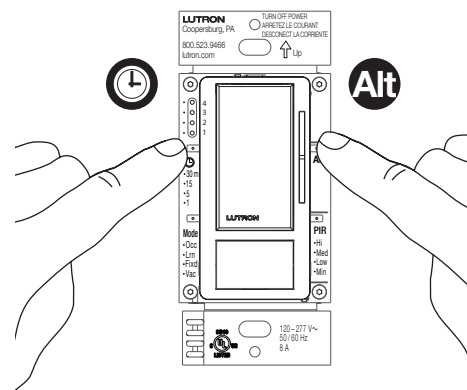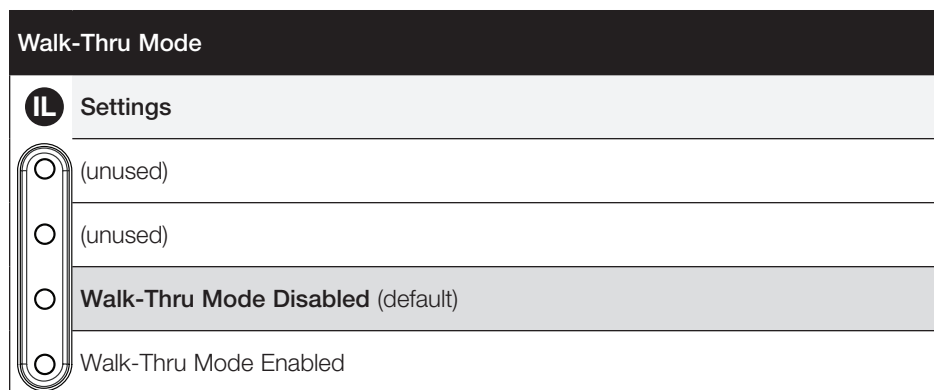

Notes:

- To maintain bulb life, the recommended minimum timeout for fluorescent bulbs is 15 minutes. Walk-Thru Mode is not recommended for applications with CFL or fluorescent lights.
- If Walk-Thru Mode is enabled, that setting will override a 1-minute timeout setting if that setting is also selected. The lights will remain On for a minimum of 3 minutes if Walk-Thru Mode is enabled.

Sensor Mode

The automatic functionality of the sensor can be adjusted to change how the lights respond upon initial occupancy. All sensor modes will turn the lights Off when no motion has been detected and the timeout has expired.


- **Occupancy (Auto-On/Auto-Off):** The lights will always turn On when motion is detected.
- **Occupancy with Learning ALD:** The lights will turn On when motion is detected and ambient light is too low. The lights will remain Off if there is sufficient ambient light in the room. For more information, see “Learning ALD: How it Works” on page 19.
- **Occupancy with Fixed ALD:** The lights will turn On when motion is detected and ambient light is too low. The lights will remain Off if there is sufficient ambient light in the room. The default fixed level is “Low”. To change your fixed light level, see “Changing the Fixed ALD Light Level” on page 18).
- **Vacancy (Manual-On/Auto-Off):** The lights will NOT turn On automatically. Lights will turn On only when **T** has been pressed.

Which do I want?


- If you want the lights to always turn On automatically when someone enters the room, choose “Occupancy (Auto-On/Auto-Off)”.
- If you want the lights to turn On only when **T** is pressed, choose Vacancy (Manual-On/Auto-Off). The unit will turn off automatically only when occupancy is no longer detected. For most users, bedrooms are a typical application where Manual-On mode would work better than Auto-On mode.
- If you want the lights to turn On, but want to keep the lights Off when there’s plenty of daylight, choose “Occupancy with Learning ALD” to teach the sensor your preferred light level for when lights should remain Off.
- If you want the lights to turn On, but want to keep the lights Off when there’s plenty of daylight, and you’d like to Lock the setting that determines how much light is needed to keep lights off, choose “Occupancy with Fixed ALD”. This setting is ideal for conference rooms with many different users and plenty of natural light. In a busy conference room, this setting will provide consistent, convenient energy savings and ambiance.

Changing the Sensor Mode:

1. **Press and hold M** until an indicator LED (**IL**) begins to flash (about 3 seconds).
2. **Tap M to cycle** to your desired Sensor Mode.
3. **Press and hold M** until the **IL** turns solid **to lock** your selection (about 3 seconds).

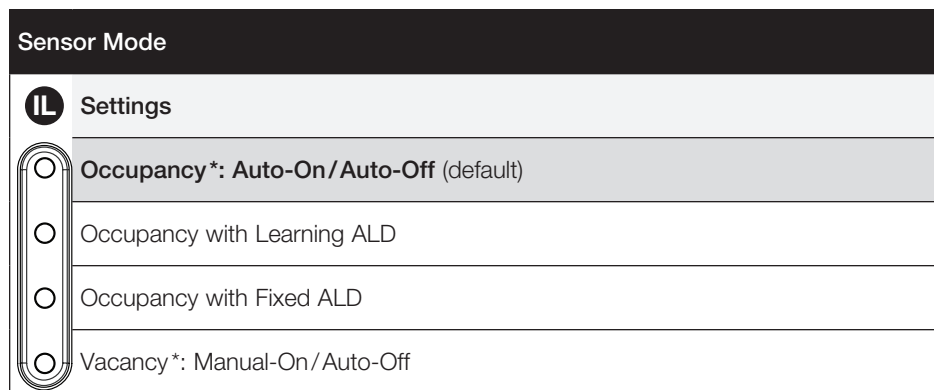

* Sensor Mode is locked as “Vacancy” in the MS-Z101-V and cannot be changed.

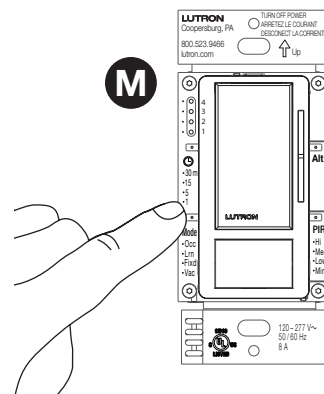

Fixed ALD Light Level


When a unit is set to “Occupancy with Fixed ALD” mode, the light level at which the lights will remain Off when the space is occupied can be adjusted. If the light level in the room is higher than the level set by the user, the lights will remain Off. If the light level in the room is lower than the light level set, the lights will turn On.

Which do I want?


- **High:** The lights will almost always turn On when motion is detected. The only time the lights will not turn On when motion is detected is when it is extremely bright in the room.
- **Minimum:** The lights will almost always remain Off. The lights will turn On only when motion is detected and there is very little ambient light in the room.

Changing the Fixed ALD Light Level

1. **Press and hold** **M** and **Alt** until the indicator LED (**IL**) begins to flash (about 3 seconds).
2. The Ambient Light Detect light level will now be displayed on the **IL**. **Tap M** to cycle to your desired setting.
3. **Press and hold M** until the **IL** turns solid to **lock** your selection (about 3 seconds).

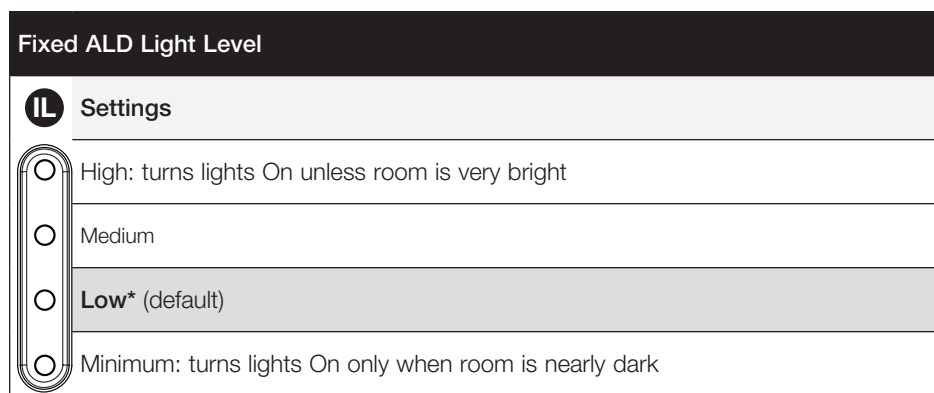

* Applies only when Fixed ALD Mode has been selected as the active Sensor Mode (see page 17).

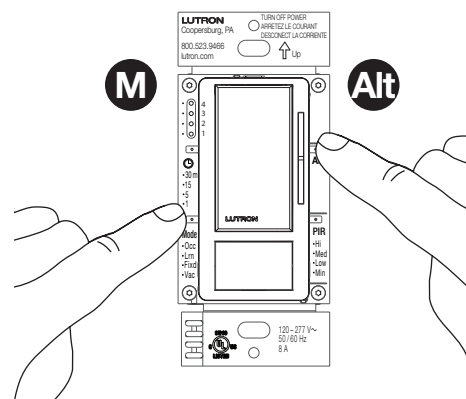

Learning Ambient Light Detect (ALD)

How it Works

Ambient Light Detect (ALD) is a feature that allows you to maximize savings by keeping lights Off when there is enough natural light in a space to fulfill your lighting requirements.

The Lutron Learning ALD feature learns your preference as you live with the product in your space. The learning algorithm employs user inputs to determine when ambient light is sufficient.

Will my sensor use Learning ALD?

Your sensor will use Learning ALD if you've selected "Occupancy with Learning ALD" (Lrn) mode while programming your unit.

How does the sensor learn my preference?

Whenever you enter a room with a Dimmer Sensor using the Learning ALD feature, the sensor will either turn the lights On or keep the lights Off, based on its current ALD light level threshold. If you enter the room and the lights do not respond as you'd like, press the **T** button on your unit to turn the lights On (or Off, if that was your preference) within 5 seconds of entering the room. The sensor will now begin learning your preferred ALD threshold. It may take multiple interactions for the sensor's adjustments to match your preferred ALD threshold. Here is an example to illustrate the learning process:

1. You enter the room and the lights stay Off, but you decide you want the lights On because there is not enough ambient light in the space.
2. You press the **T** button (within 5 seconds of entering the room).
3. The unit has learned from this, and has begun to adjust its ALD light threshold towards your preference.

FAQs

If I press a button AFTER 5 seconds of being in a room, will my unit "learn" that preference?

No, you must interact within the first 5 seconds of entering the room.

How many times do I have to interact with the sensor to get it to remember my settings?

The sensor typically learns the appropriate threshold within 6–10 consistent interactions.

I'm using the Learning ALD feature, but when I enter the room and turn the lights Off, they turn back On. What's happening?

If you have "Off-While-Occupied" set to "Disabled", you may experience the lights turning back On while in ALD mode if you turn the lights Off and continue to occupy the space. This means that the sensor is getting closer to your preferred light level, but has not learned it yet. After a few more interactions with the unit, the lights will stay Off at the desired light level, even if the space remains occupied.

I believe I'm using Learning ALD correctly, but I'm still not getting the response I expect. What could be happening?

- You may have multiple users with widely different preferences. If multiple users continue to "teach" the unit separate preferences, it will continue to try to adjust to meet the threshold, but may be stuck somewhere in between the preferences of the two users. Consider using "Occupancy with Fixed ALD" at one of the four light level thresholds.
- You may not be able to reach your unit within 5 seconds. If your interactions do not happen within 5 seconds, you may not be teaching the unit a new threshold. This lack of interaction may be reinforcing the current threshold (because the sensor thinks you like the current setting).

Many people use the room in which the sensor is located. How can I "lock" an ALD light level so it doesn't change daily?

Use the "Occupancy with Fixed ALD" feature. The Fixed ALD light level threshold you choose will not change based on user interactions.

Test Mode


Test Mode is a short timeout (less than 15 seconds) that will test the coverage area of the sensor with the current settings.

Enabling Test Mode

1. **Press and hold T** until the PIR lens flashes (about 7 seconds).
2. The device will exit Test Mode automatically after 5 minutes of inactivity, or when **T** is pressed.

Notes:

- An amber sensor LED flashes to indicate PIR detection. If no motion is detected for the entire duration of the shorter Timeout (15 seconds), the load(s) being controlled by the Dimmer Sensor will turn Off. The load(s) will turn back On when motion is detected.
- If Test Mode is entered within 2 minutes of power-up, sensor LED will blink twice quickly and repeat every 2 seconds until the sensor is ready.

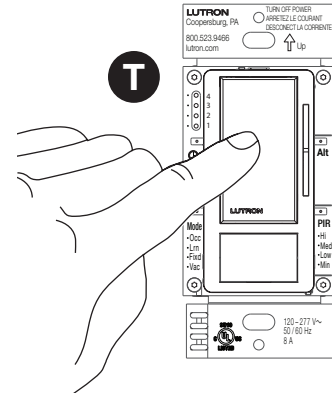

Default Settings


The Dimmer Sensor has the ability to be returned to its original default settings. This ability allows the programmer a risk-free experience to try multiple setting configurations.

Restoring Default Settings

Press and hold **Alt** and **P** until all **IL**s blink slowly (about 7 seconds). This will restore ALL of the settings back to the default settings.

Default settings

Fade-to-On Rate	0.75 seconds
Fade-to-Off Rate	2.5 seconds
Fixed ALD Light Level	Low
High-End Trim	High range
Low-End Trim.	Medium range
Occupied Level.	100%
Off-While-Occupied.	Off-While-Occupied Enabled
PIR Sensitivity	High
Preset Level	Unlocked
Timeout.	15 minutes
Selectable Dimming Curve	Linear
Sensor Mode	Occupancy (Auto-ON/Auto-OFF)
Walk-Thru Mode	Walk-Thru Mode Disabled

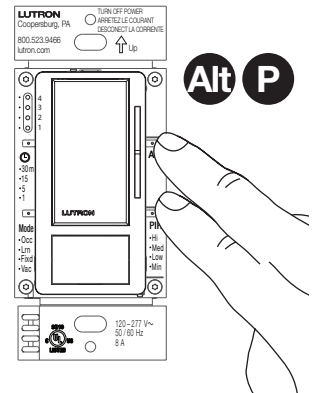


Note: After restoring the default settings, the Dimmer Sensor will reset. This will take about 10 seconds. During this time, the Dimmer Sensor will not respond to motion or button presses.


Wiring Installations with the Maestro 0–10 V \sim Dimmer Sensor

In order to function, connect the green-sleeved wire to ground only in retrofit and replacement applications. When a neutral connection is available, remove the green sleeve and connect the white wire to neutral. If neither wire is present, consult a licensed electrician.

Before installing wallplate, program all desired settings.

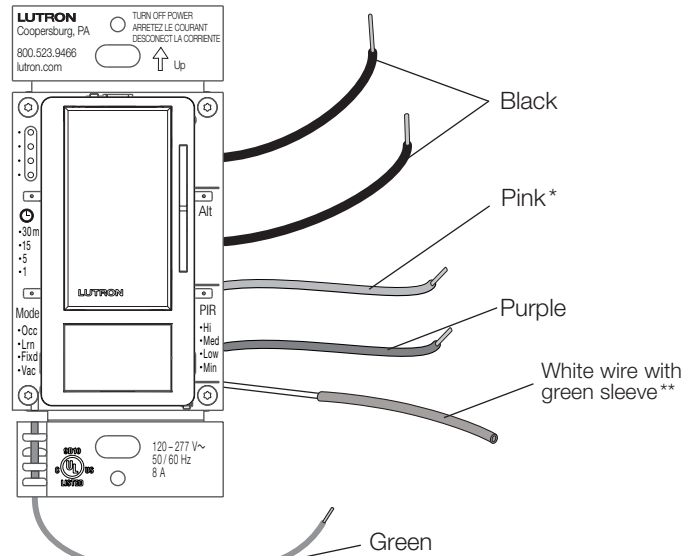


Single-Pole Installation With Neutral

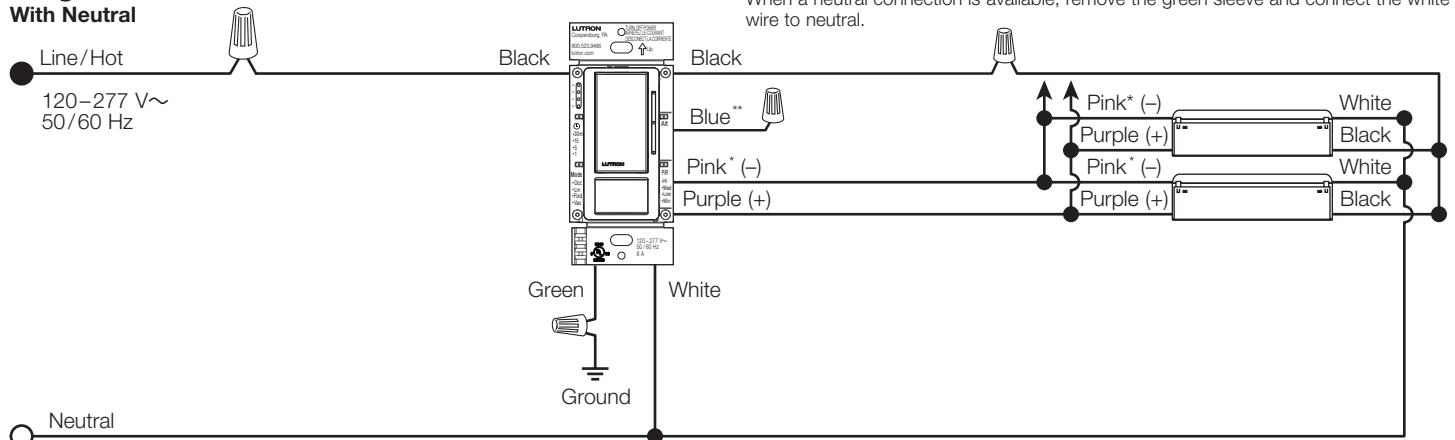

Note: When a neutral connection is available, remove the green-sleeve and connect the white wire to neutral.

Without Neutral

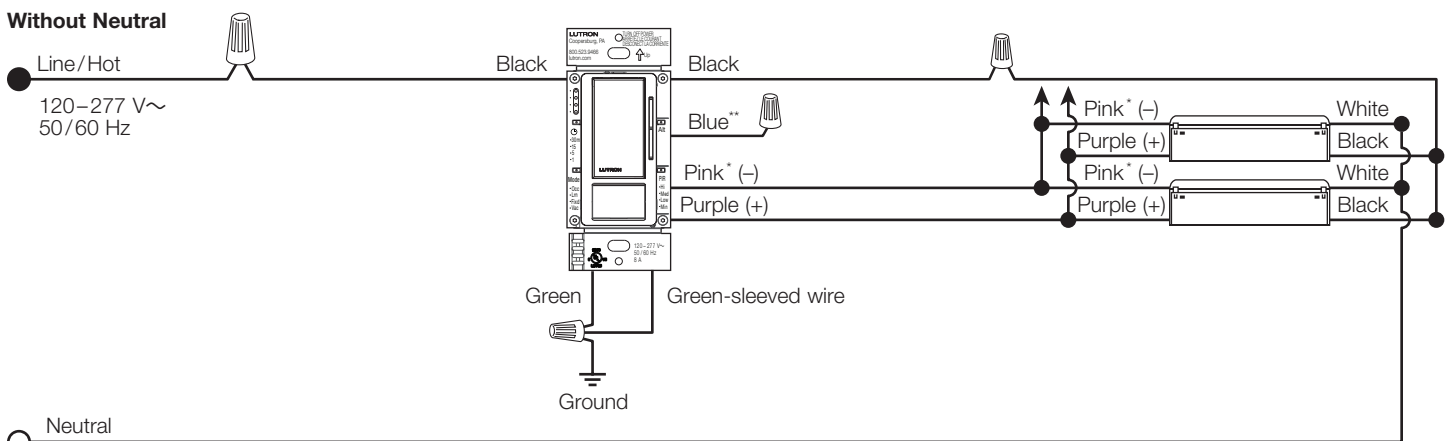

Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.


* This wire/terminal may be gray on older products or in retrofit applications.

** When using controls in single location installations, cap the blue wire. Do not connect the blue wire to any other wiring or to ground.

Wiring Installations with the Maestro 0–10 V $\overline{\text{V}}$ Dimmer Sensor (continued)


3-Way Installation¹ with Standard Mechanical Switch²

With Neutral

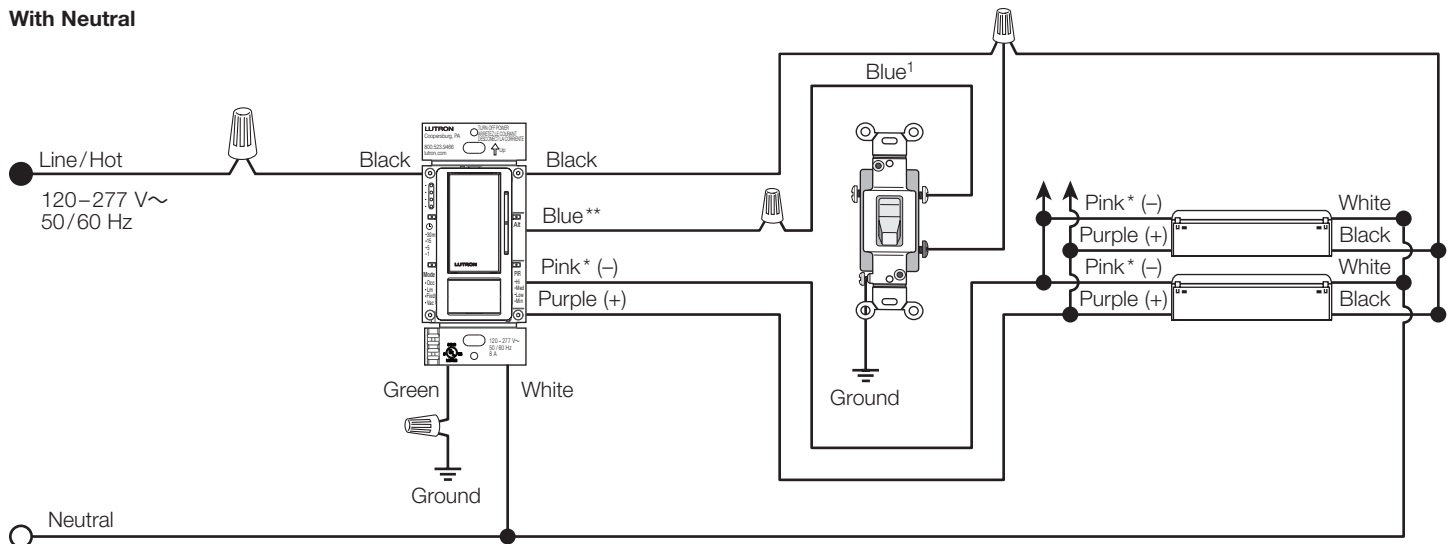

Note: When a neutral connection is available, remove the green-sleeve and connect the white wire to neutral.

Without Neutral

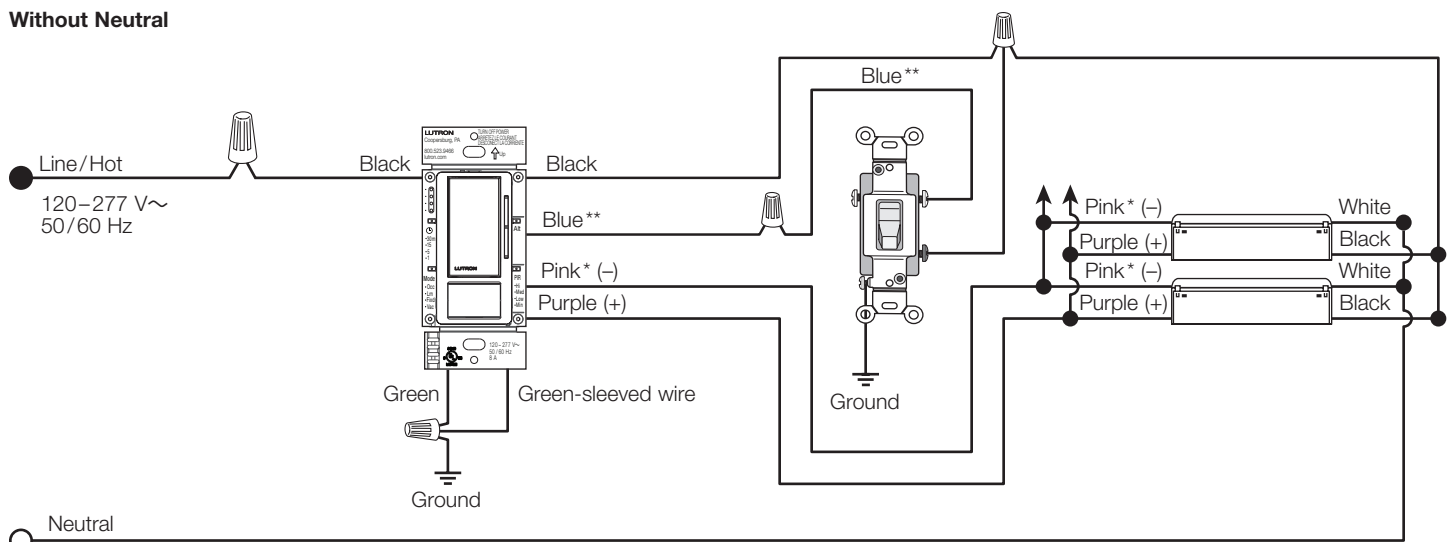

Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

¹ Only one Dimmer Sensor can be used to control a single load, but it can be installed in any of the available locations within the circuit.

² **Important:** Some rewiring of 3-way mechanical switch is required. See page 23 for instructions.

* This wire/terminal may be gray on older products or in retrofit applications.

** The length of the Blue wire (3-way wire) must not exceed 150 ft (45.72 m).

Wiring Installations with the Maestro 0–10 V $\overline{\text{AC}}$ Dimmer Sensor (continued)

3-Way Retrofit Installation

For retrofit 3-way installations, the mechanical switch needs to be rewired after wiring the Dimmer Sensor (see the diagram below). Otherwise, the 3-way installation will not work as expected. Single-pole mechanical switches may also be used in a 3-way installation.


1. Turn Power Off.

⚠ WARNING! Shock Hazard. May result in serious injury or death. Turn power OFF at circuit breaker before installing the unit.


2. Connect Ground: Ensure that the bare copper or green ground wire from the wallbox is connected to the green ground screw of the mechanical switch.
3. Tag circuit Common: Your 3-way mechanical switch should have three screw terminals, two of the same color, and one of a different color. Tag the wire that is connected to the screw terminal of a different color.
4. Identify the wire that matches the color of the wire you connected to the blue wire of the Maestro® Dimmer Sensor. Connect this wire to one of the two terminals of the same color.
5. Combine the tagged wire, the remaining wire, and the yellow jumper wire (included) using a wire connector. Connect the other end of jumper wire to the different color screw.

Note: If the 0–10 V $\overline{\text{AC}}$ Dimmer Sensor is first installed with a traditional 3-way mechanical switch and the mechanical switch is later replaced with a Maestro® Accessory Switch, the 0–10 V $\overline{\text{AC}}$ Dimmer Sensor will need to be returned to factory default settings in order to function correctly (refer to instructions on page 20).

Traditional 3-Way Mechanical Switch Wiring

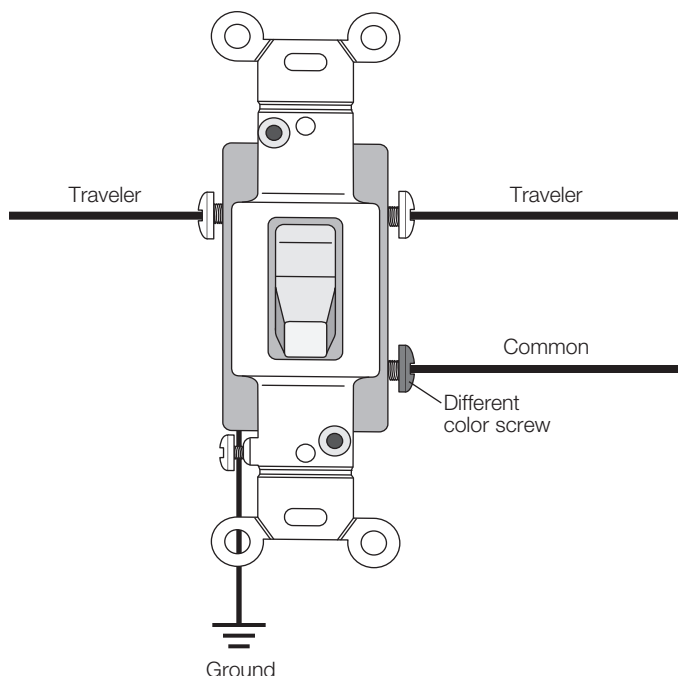

3-Way Mechanical Switch Wiring with Dimmer Sensor

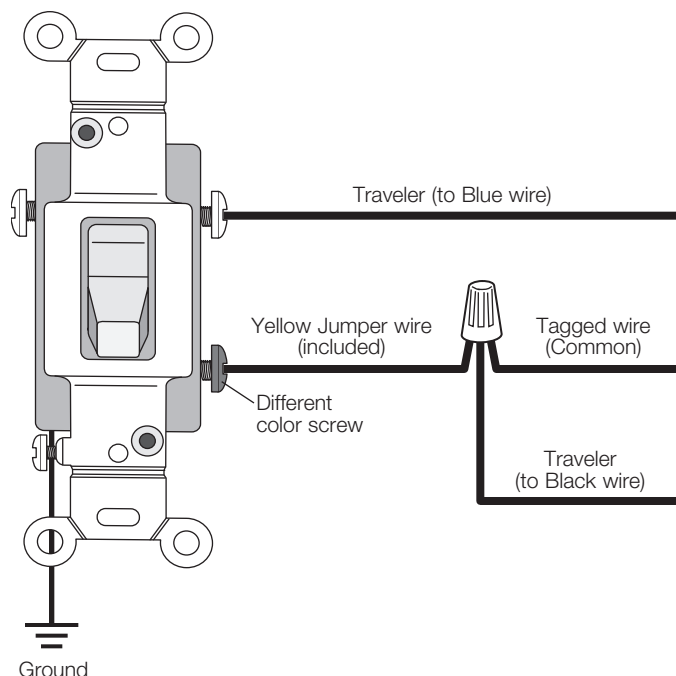


Wiring Installations with the Maestro 0–10 V $\overline{\text{DC}}$ Dimmer Sensor (continued)

220–277 V \sim Multi-Location Installation¹ with Maestro Accessory Switches


If the 0–10 V $\overline{\text{DC}}$ Dimmer Sensor is first installed with a traditional 3-way mechanical switch and the mechanical switch is later replaced with a Maestro Accessory Switch, the 0–10 V $\overline{\text{DC}}$ Dimmer Sensor will need to be returned to factory default settings in order to function correctly (refer to instructions on page 20).

With Neutral

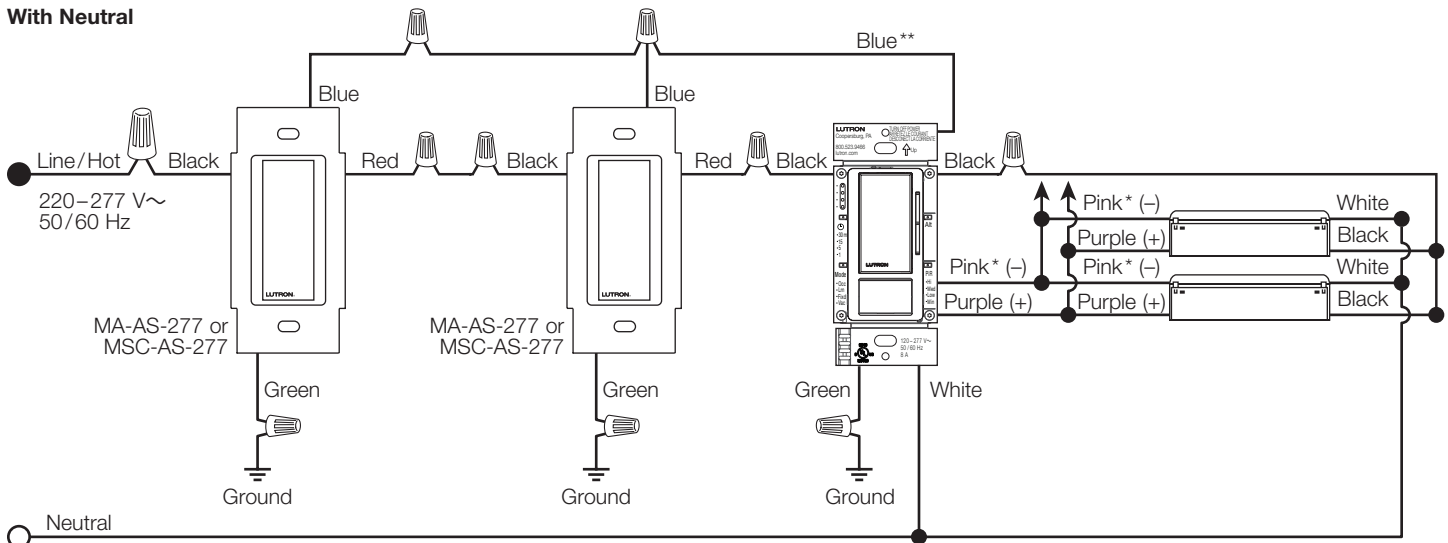

Note: When a neutral connection is available, remove the green-sleeve and connect the white wire to neutral.

Without Neutral

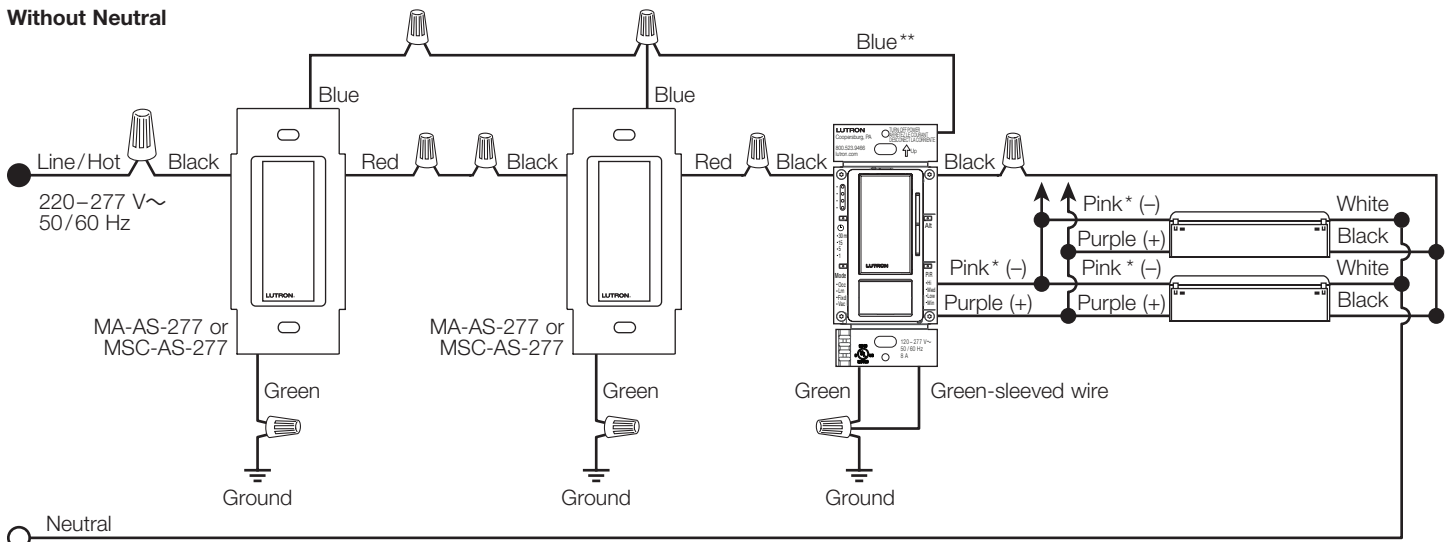

Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

¹ Only one Dimmer Sensor can be used to control a single load, but it can be installed in any of the available locations within the circuit.

* This wire/terminal may be gray on older products or in retrofit applications.

** The length of the Blue wire (3-way wire) must not exceed 150 ft (45.72 m).

Wiring Installations with the Maestro 0–10 V $\overline{\text{V}}$ Dimmer Sensor (continued)

Common Applications and Questions

Sink vs. Source


MS-Z101 is a “sink-only” device (see www.lutron.com/TechnicalDocumentLibrary/048442.pdf for more information). This type of device requires the ballast or driver to supply the power necessary to drive the 0–10 V $\overline{\text{V}}$ control wires.

MS-Z101 works with all ballasts and drivers that provide a 0–10 V $\overline{\text{V}}$ control signal that is compliant with IEC 60629 Annex E.2. Note that some LED drivers are sink-only (they require the lighting control to provide the power to drive the 0–10 V $\overline{\text{V}}$ control wires). These will be incompatible with MS-Z101 alone. See below for methods to control sink-only fixtures.

Miswire and incompatible load

Alert

The user will receive a visual alert when the product’s 0–10 V $\overline{\text{V}}$ control wires (pink* and purple) are incorrectly connected or when an incompatible load—one that is not compliant with IEC 60629 Annex E.2—is detected. The product will still function as a switch in these instances.

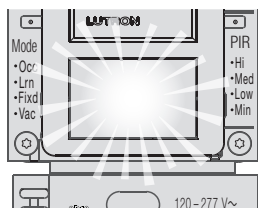

- Approximately 9 seconds after initial power-up, the PIR lens will flash 3 times. Approximately 2 seconds after that, the lens will flash 3 additional times, indicating that the device has detected an error in the 0–10 V $\overline{\text{V}}$ wiring.
- During operation, the product will disable the fade rate so that the device will essentially function only as a switch. If the user presses the Raise or Lower button, the lens will flash 3 times and no dimming will occur. This will happen every time Raise/Lower is pressed until the miswiring is corrected or a compatible load is connected.

Solution


To provide an occupancy sensor solution for drivers or ballasts that require power from the control (not compliant with IEC 60629 Annex E.2):

- Use a Radio Powr Savr occupancy sensor and a 0–10 V $\overline{\text{V}}$ PowPak module (e.g., LRF2-OCR2B-P and RMJ-5T-DV-B). See www.lutron.com/en-US/Products/Pages/SingleRoomControls/Energi_TriPak/Overview.aspx for more information.
- Use a plug-in supply to supply power to the 0–10 V $\overline{\text{V}}$ control wires. See www.lutron.com/TechnicalDocumentLibrary/048442.pdf. Lutron model number GRX-15VDC-330-CPN6058 has a 10 mA capacity, with the capability to operate a minimum of 5 ballasts (drivers) if they are compliant with ESTA E1.3. Note that this requires 120 V \sim to be available as the power source for the GRX-15VDC-330-CPN6058.

* This wire/terminal may be gray on older products or in retrofit applications.


Wiring Installations with the Maestro 0–10 V $\overline{\text{DC}}$ Dimmer Sensor (continued)

With Neutral

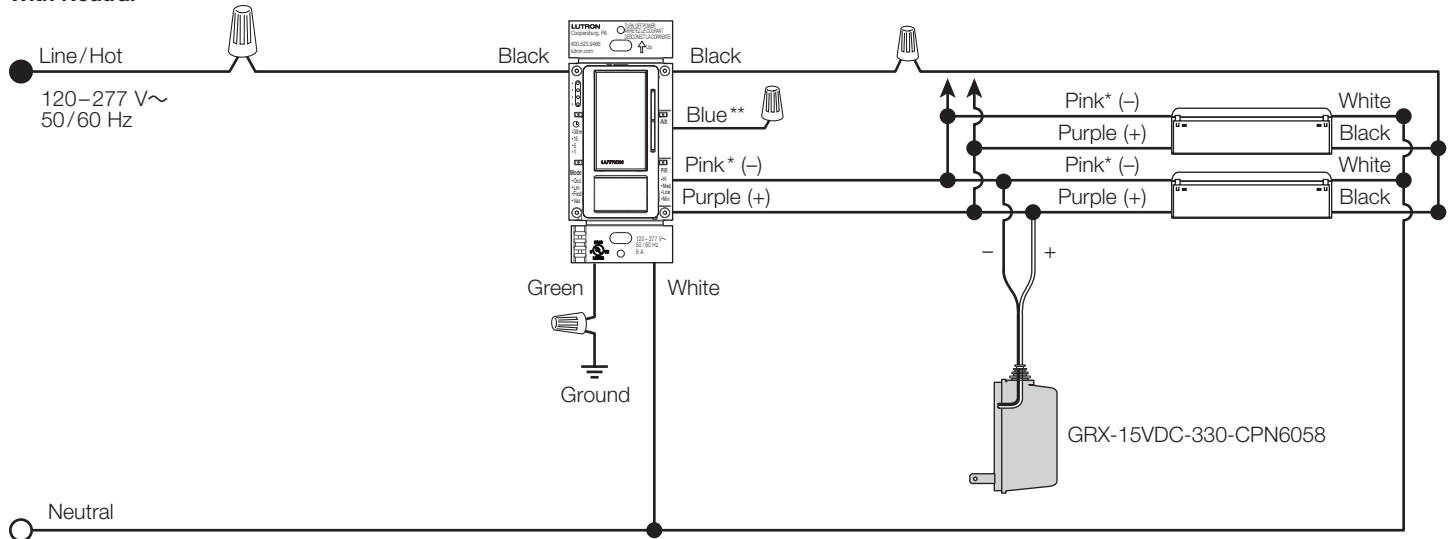

Note: When a neutral connection is available, remove the green-sleeve and connect the white wire to neutral.

Without Neutral

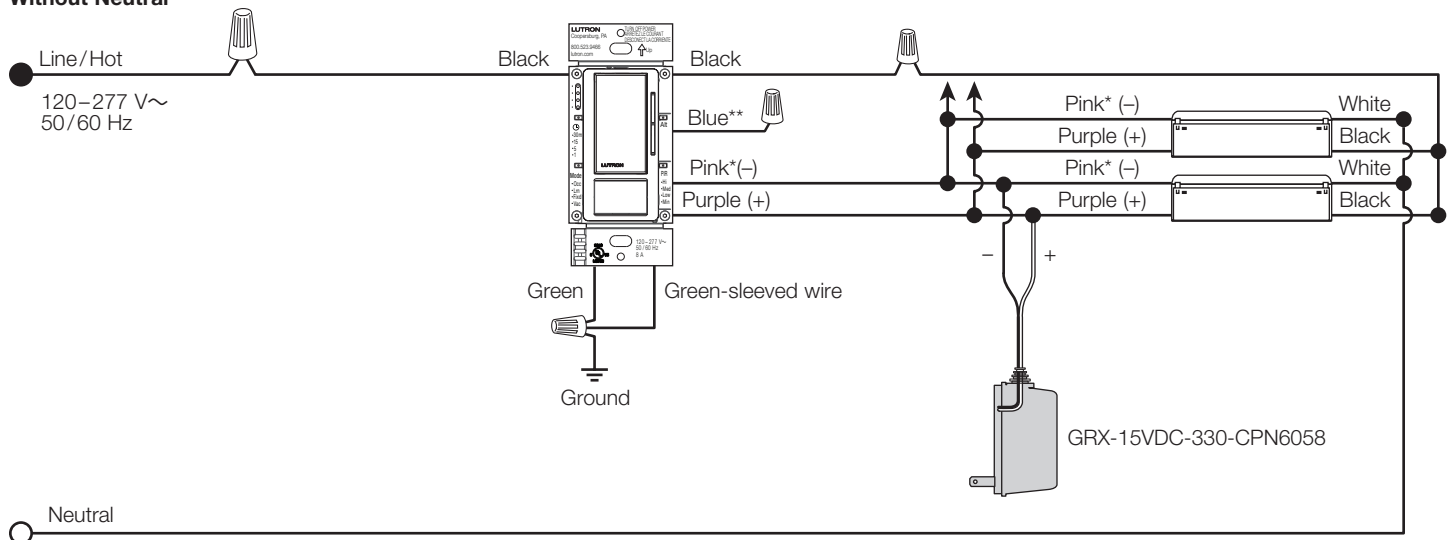

Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

* This wire/terminal may be gray on older products or in retrofit applications.

** When using controls in single location installations, cap the blue wire. Do not connect the blue wire to any other wiring or to ground.

Wiring Installations with the Maestro 0–10 V_{DC} Dimmer Sensor (continued)


Energy Codes Requiring Daylighting (e.g., ASHRAE 90.1)

Certain codes require the presence of daylighting sensing/control. MS-Z101 contains ambient light detection, which is not a solution to ASHRAE 90.1. The two options below will help the installer comply with ASHRAE 90.1 and other energy codes requiring daylighting:

- Use MS-Z101 in conjunction with a daylight sensor, such as the EDS Sensor from PLC sensors (www.plcsensors.com/pdf/301%20EDS%20Rev4.pdf). The MS-Z101 and the EDS sensor connect together on the 0–10 V_{DC} control link as shown in the diagram below. This setup works as long as the ballast or driver provides a current source compliant to IEC 60629 Annex E.2.*
- When using this daylight control with the MS-Z101, one of the controls will dominate the link. This means that whichever control dims the 0–10 V_{DC} link will dominate the link.


* Daylighting can also be accomplished by using a Lutron PowPak 0–10 V_{DC} module (RMJ-5T-DV-B), Radio Powr Savr occupancy sensor (ceiling or wall mount), Pico wireless control, and a Radio Powr Savr daylight sensor. See www.lutron.com/en-US/Products/Pages/SingleRoomControls/Energi_TriPak/Overview.aspx for more information.

With Neutral

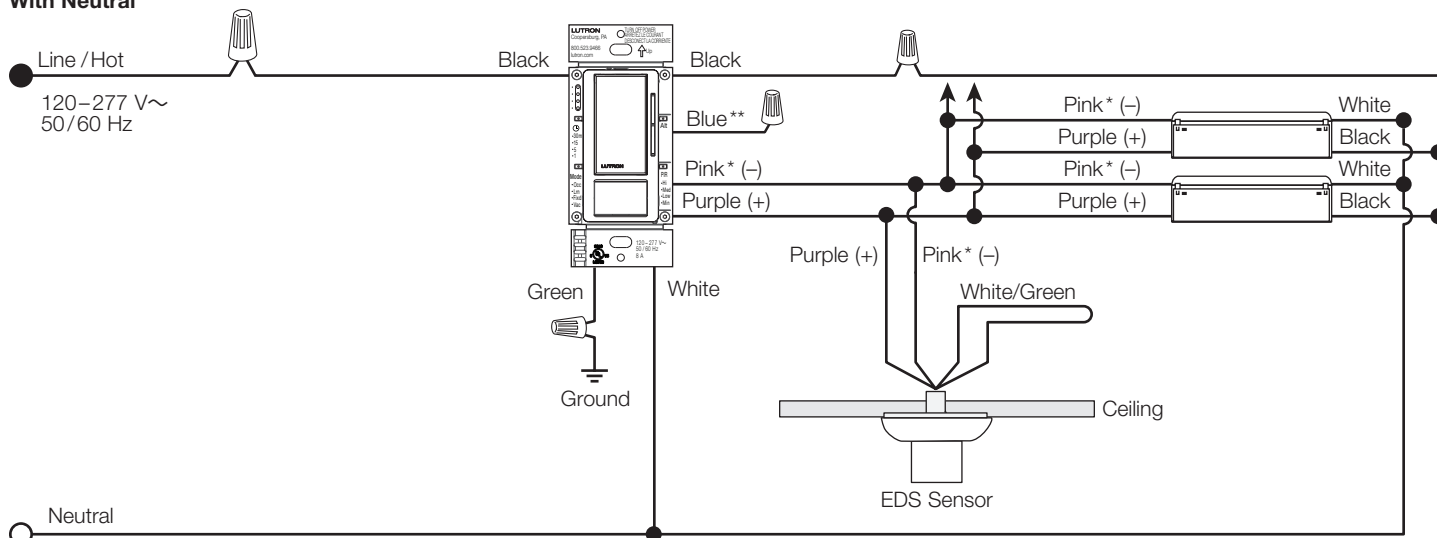

Note: When a neutral connection is available, remove the green-sleeve and connect the white wire to neutral.

Without Neutral

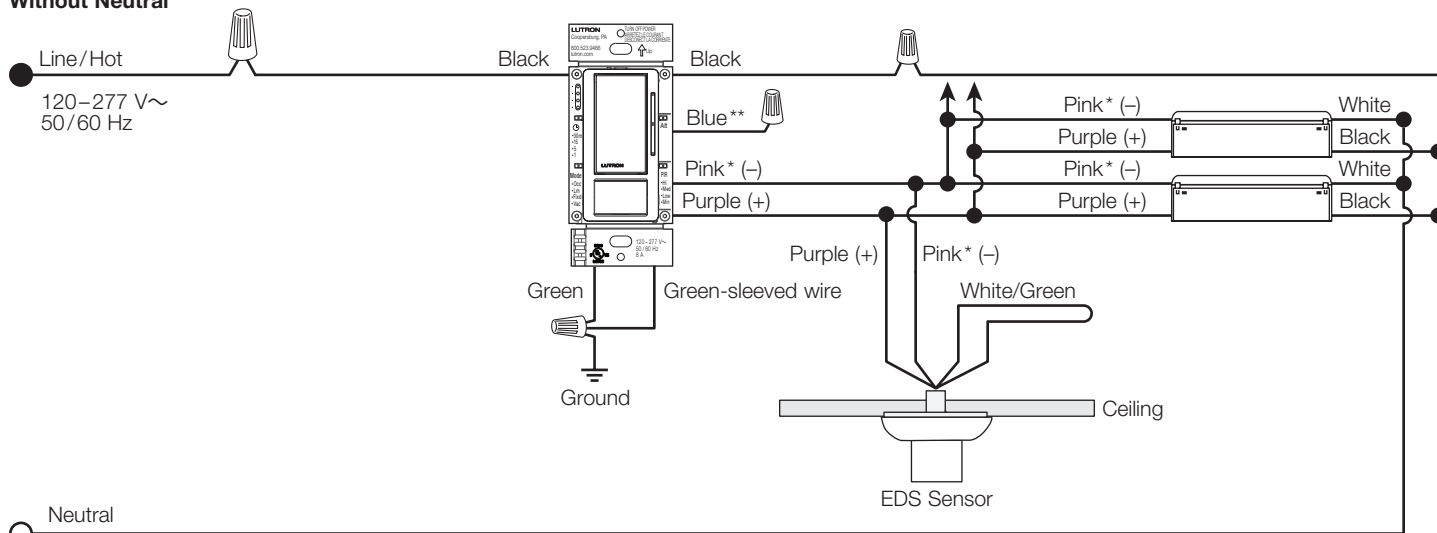

Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

* This wire/terminal may be gray on older products or in retrofit applications.

** When using controls in single location installations, cap the blue wire. Do not connect the blue wire to any other wiring or to ground.

NEMA 410 Inrush Current

MS-Z101 is intended to work with electronic ballasts and drivers that comply with IEC 60629 Annex E.2. These of load typically exhibit a high amplitude (short duration) inrush current the moment power is applied. That inrush current can be many times larger than the steady state current.

There exist electronic drivers and ballasts whose inrush current is significantly greater than that specified in NEMA 410. In some circumstances, manufacturers of these devices recommend switching them on one at a time because they may trip the breaker. The MS-Z101 has been tested only with devices that comply with NEMA 410 standards and is not recommended for use in conjunction with devices that do not comply.

This product has been tested to NEMA 410 standards for inrush current, per the chart below.

Peak Current Requirements

Steady state current (A)	Peak current (A) 120 V~	I ² t* (A ² sec) 120 V~	Peak current (A) 277 V~	I ² t* (A ² sec) 277 V~
0.5	75	11	77	11
1	107	24	131	27
2	144	41	205	76
3	166	51	258	111
5	192	74	320	205
8	221	98	370	274
10	230	106	430	370
12	235	110	440	387
15	239	114	458	420
16	242	117	480	461

* I²t values based on peak current with a 2 ms duration.

Troubleshooting

Symptom	Possible Cause	Likely Solution
<ul style="list-style-type: none"> After installation, unit does not respond to button presses. After installation, unit worked only once or doesn't work at all. 	Dimmer will not be active for first 10 seconds after installation.	Wait for longer than 10 seconds.
	Check wiring: ground or neutral must be connected for product to function.	<ul style="list-style-type: none"> Refer to wiring diagrams on instruction sheet or at www.lutron.com/TechnicalDocumentLibrary/369833.pdf
	Junction box is miswired: hot wire (black) is actually neutral; device cannot function when switching neutral.	Consult an electrician.
After installation, sensor does not seem to function.	Sensor will not be active for first 2 minutes after installation.	Wait 2 minutes after restoring power for sensor to become operational.
	Check wiring: ground or neutral must be connected for product to function.	Refer to wiring diagrams on instruction sheet or at www.lutron.com/TechnicalDocumentLibrary/369833.pdf
After installation or following power failure, lights will turn ON suddenly after lights are manually turned OFF.	Sensor takes up to 2 minutes to perform a calibration following a power cycle. If lights are OFF and the calibration completes while the space is occupied, lights will turn ON.	Wait at least 2 minutes for calibration to complete.
Lights do not turn ON when space is occupied.	Sensor mode is set to "Vacancy" (Vac) mode.	Refer to "Selecting Custom Settings" on instruction sheet to set Sensor Mode to "Occupancy" (Occ) mode.
	Sensor mode is set to "Occupancy with Learning ALD" (Lrn) mode and light level in room is too bright.	Turn lights ON within 5 seconds of entering room to teach sensor that it should turn ON at current light level.
	Sensor mode is set to "Occupancy with Fixed ALD" (Fixd) mode and light level in room is too bright.	Raise Fixed ALD Light level until lights turn ON in current light level (Default level is "Low").
	Sensor does not have full view of room and its occupants. Room may be too large for this application.	Move objects blocking sensor's line-of-sight; you must be able to see sensor for sensor to "see" you.
	"Off-While-Occupied" is enabled and unit was recently turned off manually.	Refer to "Off-While-Occupied" on instruction sheet to set "Off-While-Occupied" to "Disabled" or exit room and wait for sensor to Timeout, or manually turn light back ON with Tap button.
	Wiring may be incorrect.	Refer to wiring diagrams on instruction sheet or at www.lutron.com/TechnicalDocumentLibrary/369833.pdf for directions.
Lights turn back ON after they are turned OFF manually.	"Off-While-Occupied" is disabled. Lights will continue to turn back ON 25 seconds after they are turned off manually, even if space is still occupied.	Refer to instruction sheet "Off-While-Occupied" section to enable "Off-While-Occupied".
Lights turn OFF while space is occupied.	Sensor's Timeout is too short for this application: if Timeout is set to 1 minute and you are not moving much for 1 minute, sensor may Timeout without motion.	Refer to "Selecting Custom Settings" on instruction sheet to increase Timeout duration.
	Sensor does not have full view of room and its occupants.	Move objects blocking sensor's line-of-sight. Sensor will perform better if it has line-of-sight to "see" you.
	PIR sensitivity is set too low.	Refer to "Selecting Custom Settings" on instruction sheet to increase PIR Sensitivity.
Lights never turn OFF, or stay ON longer than desired.	Sensor's Timeout has not yet expired.	Refer to "Custom Settings" on instruction sheet to reduce "Timeout" setting if current setting lasts too long.
	Sensors mounted close to doorways can respond to motion outside of room.	<ul style="list-style-type: none"> Use "Test Mode" to determine which areas are triggering sensor to respond when not desired. Selectively cover parts of the lens with electrical tape, or with a lens mask (Lutron P/N 50013614), which can be ordered through Customer Assistance (1.844.LUTRON1).
		Refer to "Selecting Custom Settings" on instruction sheet to lower PIR sensitivity.
	Motion is being detected from an external noise source such as an HVAC vent. Some unintended environmental vibrations may trigger sensor, keeping lights ON.	Use "Test Mode" to determine which areas are triggering sensor to respond when not desired. Test Mode will respond based on current sensitivity settings of each sensor.
		Refer to "Selecting Custom Settings" on instruction sheet to lower PIR sensitivity.

Continued on the next page...

Troubleshooting (continued)

Symptom	Possible Cause	Likely Solution
Lights turn ON in Vacancy mode.	Lights can turn ON in 15 second grace period following Timeout.	Grace period is intended to allow user to move after lights go OFF, if you want lights to come back ON. If you want to check that unit is functioning properly, wait 30 seconds AFTER Timeout has expired before re-entering the room to verify that lights do NOT turn ON.
	Sensor mode may be set to something other than Vacancy mode.	Refer to "Selecting Custom Settings" on instruction sheet to change sensor mode.
Lights turn ON when space is unoccupied.	Motion is being detected from an external noise source such as an HVAC vent.	Refer to "Selecting Custom Settings" on instruction sheet to lower PIR sensitivity.
		<ul style="list-style-type: none"> • Use "Test Mode" to determine which areas are triggering sensor to respond when not desired. • Selectively cover parts of the lens with electrical tape, or with a lens mask (Lutron P/N 50013614), which can be ordered through Customer Assistance (1.844.LUTRON1). Masking the lens may affect ALD performance.
While using "Occupancy with Learning ALD" modes, lights do NOT stay OFF when unit is turned OFF.	"Off-While-Occupied" is disabled, and Dimmer Sensor has not yet learned your light level preference.	Continue to turn lights OFF as needed, until unit learns your preference and keeps lights OFF.
While using "Occupancy with Fixed ALD" mode, lights do NOT stay OFF when unit is turned OFF.	"Off-While-Occupied" is disabled and light level is currently set too high.	Lower "Fixed ALD" light level using instruction sheet, or find instructions at www.lutron.com/TechnicalDocumentLibrary/369833.pdf
Lights are stuck ON.	<ul style="list-style-type: none"> • White wire covered by green sleeve may be connected to black wire that goes to load. • Both black wires may be connected together. 	Rewire; check wiring diagrams on instruction sheet or at www.lutron.com/TechnicalDocumentLibrary/369833.pdf
3-way installation is not working as expected. Sensor and/or Tap switch do not control load.	3-way mechanical switch was not rewired to work with sensor (wiring is different from conventional 3-way wiring).	Check wiring of 3-way mechanical switch; rewire if necessary using instruction sheet or diagrams at www.lutron.com/TechnicalDocumentLibrary/369833.pdf
Lights turn ON to full, then dim back down.	Dimmer Sensor has "Fade to On" feature that transitions lights from OFF to preset ON level over a period of time up to 2 seconds (adjustable; see Lutron P/N 369833). Some 0–10 V _{ac} drivers exist which may negate this behavior and make the lights turn ON immediately to 100% before ballast or driver detects control signal and then dims lights down to proper level.	<p>This is a symptom of a problem with ballast or driver:</p> <ul style="list-style-type: none"> • Make sure the Fade-to-On rate is set to lowest (default) value of 0.75 seconds (refer to Lutron P/N 369833). • Try a different ballast/driver.
Lights cannot be dimmed.	Ballast or driver being used requires power on control wires from another source.	See "Sink vs. Source" section on page 26.
	Pink* and purple wires are miswired.	Refer to wiring diagram on instruction sheet, "Sink vs. Source" section on page 26, or at www.lutron.com/TechnicalDocumentLibrary/369833.pdf
PIR lens LED flashes after power is applied and when attempting to dim-up or dim-down.	Ballast or driver being used requires power on control wires from another source.	See "Sink vs. Source" section on page 26.
	Pink* and purple wires are miswired.	Refer to wiring diagram on instruction sheet, "Sink vs. Source" section on page 26, or at www.lutron.com/TechnicalDocumentLibrary/369833.pdf

* This wire/terminal may be gray on older products or in retrofit applications.

☼Lutron, Lutron, Maestro, Pico, PowPak, and Radio Powr Savr are trademarks or registered trademarks of Lutron Electronics Co., Inc. in the US and/or other countries.

Contact Information

WORLD HEADQUARTERS USA

Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299

TEL: +1.610.282.3800
FAX: +1.610.282.1243
support@lutron.com

North and South America Technical Hotlines

USA, Canada, Caribbean:

1.844.LUTRON1 (1.844.588.7661)

Mexico:

+1.888.235.2910

Central/South America:

+1.610.282.6701

EUROPEAN HEADQUARTERS

United Kingdom

Lutron EA Limited
125 Finsbury Pavement
4th floor, London EC2A 1NQ
United Kingdom

TEL: +44.(0)20.7702.0657
FAX: +44.(0)20.7480.6899
FREEPHONE (UK): 0800.282.107
Technical Support: +44.(0)20.7680.4481
lutronlondon@lutron.com

ASIAN HEADQUARTERS

Singapore

Lutron GL Ltd.
390 Havelock Road
#07-04, King's Centre
Singapore 169662

TEL: +65.6220.4666
FAX: +65.6220.4333
Technical Support: 800.120.4491
lutronsea@lutron.com

Asia Technical Hotlines

Northern China: 10.800.712.1536

Southern China: 10.800.120.1536

Hong Kong: 800.901.849

Indonesia: 001.803.011.3994

Japan: +81.3.5575.8411

Macau: 0800.401

Taiwan: 00.801.137.737

Thailand: 001.800.120.665853

Other Countries: +65.6220.4666