Sivoia QS Drapery System

Installation Guide—Please Read Before Installing

Important Notes - Please Read Before Installing

A. Lutron systems are intended for use with only Lutron hardware and power supplies.

B. **Codes:** Install in accordance with all local and national electrical codes.

C. **Environment:** Ambient operating temperature: 32 °F - 104 °F (0 °C - 40 °C), 0 - 90% humidity, non-condensing. Indoor use only.

D. Plan the installation to maintain sufficient clearance between the moving drapery and any object, including window hardware, cranks, lock levers, and stationary drapery.

⚠ **CAUTION:** RISK OF FALLING OBJECTS. Securely install the shade system per the mounting instructions.
Failure to do so could result in minor or moderate injury.

Contents

Tools required:

- Tape measure
- Small flat-blade screwdriver
- #1 Phillips screwdriver
- #2 Phillips screwdriver
- Power drill and drill bits
- Level
- Pliers
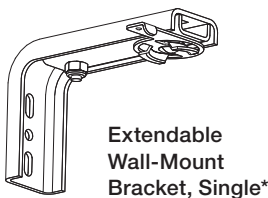- 3/32 in (2.4 mm) hex key (included w/recess-mount system)
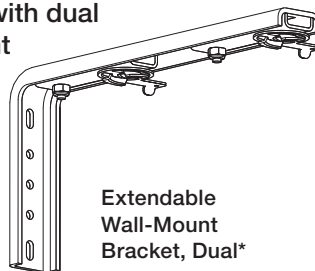
System Components:

Drapery Track

Single-track, right-draw, pinch pleat system shown; dual systems will include additional track(s) and EDU(s)

Included with wall-mount tracks:

Extendable Wall-Mount Bracket, Single*

Included with dual wall-mount tracks:

Extendable Wall-Mount Bracket, Dual*

Terminal Block

Included with ceiling-mount tracks:

Ceiling-Mount Cam-Lock with Washer*

Included with recess-mount tracks:

Recess-Mount Bracket*

#8 x 1½ in Wood Screw*
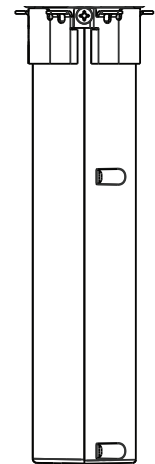
Electronic Drive Unit (EDU) with end motor bracket attached†

†EDU Models:

ALAC-EDU-D105-PT 24-36 V⎓ 41 W

*Quantity varies with system width

Customer Assistance

USA and Canada: 1.844.LUTRON1 (588-7661) | UK: +44.(0)20.7702.0657 | lutron.com/help | support@lutron.com

For product warranty information, please see: www.lutron.com/warranty or call 1.844.LUTRON1 for a printed copy.

1 Wall-Mount

1.1 Mount the brackets:

**IMPORTANT:** The drapery track must be level to operate properly, so all brackets must be aligned along a level horizontal line. Each wall-mount bracket must be installed into a wall stud or other structural member using appropriate fasteners. Ensure brackets are mounted firmly enough to support the combined weight of the drapery track, EDU, and fabric.

If no appropriate structural member is available at the mounting location, it is the responsibility of the installer to add blocking as necessary to safely support the operating load of the system, including tugging that may occur during manual or attempted manual operation.

A.   Bracket height: Mount the brackets at a height that will leave 1/2 in (13 mm) to 1 in (25 mm) clearance between the bottom of the drapery panel and the floor. Refer to sections 5 and 6 for fabric installation information that will help determine the correct bracket mounting height.

Bracket Spacing
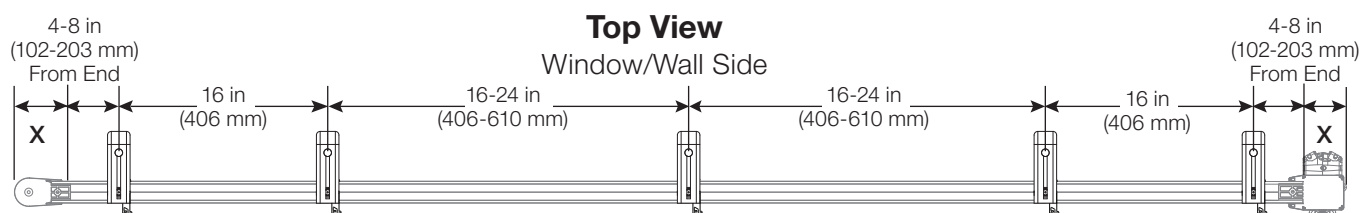
B.   Position a bracket 4-8 in (102-203 mm) from each end of the track.

C.   Position the next bracket a distance of 16 in (406 mm) inward from the brackets mounted in the previous step.

D.   Space the remaining brackets evenly between 16 in (406 mm) - 24 in (610 mm) apart.

1.2 Attach the track to the brackets:

A.   Move all the cam-locks to the unlocked position.

B.   Position the track under and against the cam-locks. Starting at the bracket nearest the center of the track, rotate the cam-lock lever arm to the locked position.

C.   Rotate the lever arm of the cam-locks on either side of the center one to the locked position.

IMPORTANT: The drapery track must be fully supported by at least two people until all of the cam-locks are securely engaged.

Top View

1.2A
Unlocked

1.2B
Locked
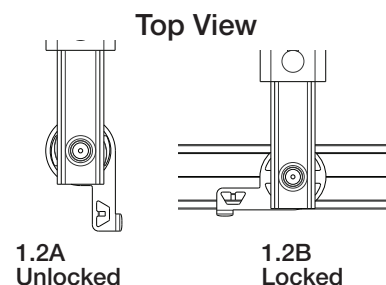
1.2D

D.   Continue working toward the ends of the track, alternating directions (see sequence example above), until all the cam-locks are rotated to the locked position.

NOTE: Both tabs of all cam-locks must be fully engaged. If a cam-lock does not line up with the track, loosen the bracket adjusting nut and adjust the position of the cam-lock to properly engage it in the track. Re-tighten the bracket adjusting nut.

E.   Proceed to section 3: Electronic Drive Unit (EDU) Installation.

Bracket
Adjusting Nut
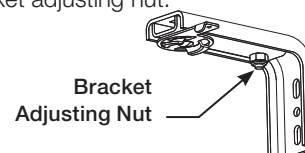
2 Ceiling-Mount

IMPORTANT: Each ceiling-mount cam-lock must be installed into a structural member using an appropriate fastener. Ensure the structural member is of sufficient strength to support the combined weight of the drapery track, EDU, and fabric.

If no appropriate structural member is available at the mounting location, it is the responsibility of the installer to add blocking as necessary to safely support the operating load of the system, including tugging that may occur during manual or attempted manual operation.

Top View
Window/Wall Side

| 4-8 in (102-203 mm) From End | 16 in (406 mm) | 16-24 in (406-610 mm) | 16-24 in (406-610 mm) | 16 in (406 mm) | 4-8 in (102-203 mm) From End |

A   B   C   D   C   B   A

2.1 Fasten the ceiling-mount cam-locks to the ceiling:

A. Hold the drapery track up to the ceiling, and position it where it will be installed.

Verify it is parallel to the window or wall, and use a pencil to make a mark on the ceiling at each end.

B. Mount a cam-lock within 4-8 in (102-203 mm) of each end-mark made in Step 2.1A.

C. Mount the next cam-locks 16 in (406 mm) inward from those mounted in Step 2.1B.

D. Space the remaining cam-locks 16-24 in (406-610 mm) apart. For non-sheer drapery panels, a 16 in (406 mm) spacing is recommended between brackets at stackback location(s).

IMPORTANT: Each cam-lock must be installed with a washer as shown. The cam-locks must be mounted in a straight and level line. If the contour of the ceiling is not straight and level, use shims (not included) between the cam-lock washers and the ceiling to compensate for irregularities.

Cam-Lock Mounting

Ceiling

Washer

Cam-Lock

Mounting Screw

(not included; use a #8 screw of appropriate length and thread type for the supporting structure)

2.2 Mount the drapery track in the cam-locks:

A. Rotate all of the cam-lock lever arms to the unlocked position.

B. Position the track up against the cam-locks. Starting from the center of the track and working toward the ends, rotate each cam-lock lever arm to the locked position until its tab is against the track.

IMPORTANT: The drapery track must be fully supported by at least two people until all of the cam-locks are securely engaged.

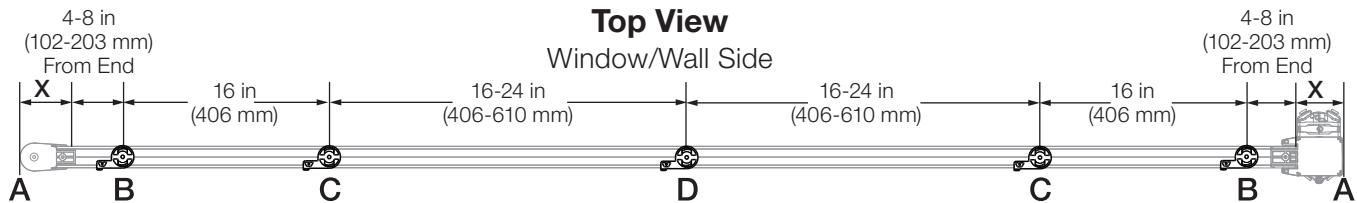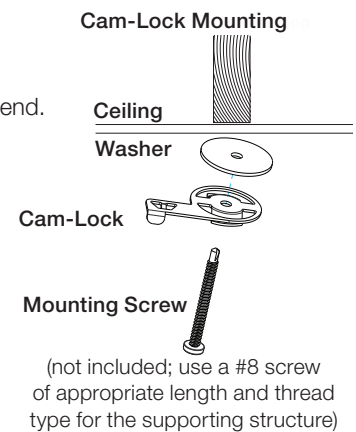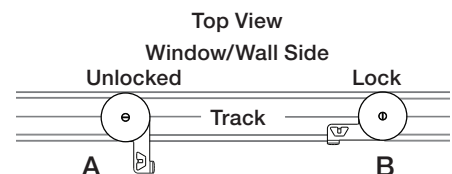C. Proceed to section 3: Electronic Drive Unit (EDU) Installation.

Top View
Window/Wall Side
Unlocked   Lock
Track
A   B

3 Recess-Mount: Prepare the Drapery Track

IMPORTANT: A drapery track with recess-mount brackets must be installed into a structural member using wood screws. Ensure the structural member is of sufficient strength to support the combined weight of the drapery track, EDU, and fabric.

If no appropriate structural member is available at the mounting location, it is the responsibility of the installer to add blocking as necessary to safely support the operating load of the system, including tugging that may occur during manual or attempted manual operation.

3.1 Prepare the drapery track for mounting:

The drapery track is pre-drilled with mounting holes spaced as indicated below:

| 7 1/4 in (184 mm) | 16 in (406 mm) | 16 in (406 mm) | 18 3/8 in (467 mm) | 7 3/8 in (187 mm) |
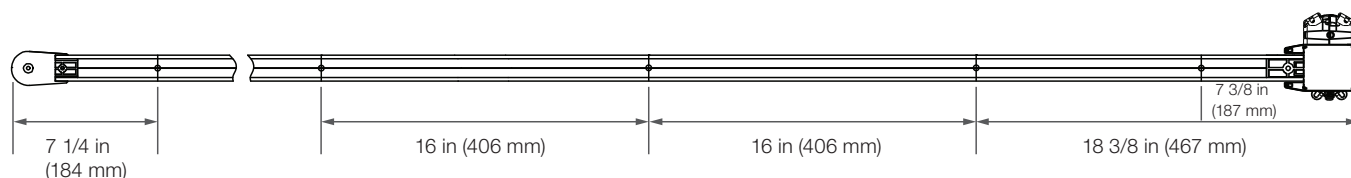
A. Insert a recess-mount bracket into the track's upper channel.

B. Align its center hole with a mounting hole in the drapery track. Temporarily insert a mounting screw through both holes to maintain their alignment.

C. Rotate the recess-mount bracket 90°.

D. Secure the recess-mount bracket using the 3⁄32 in (2.4 mm) Allen key provided to tighten both set screws.Remove the mounting screw from the center hole.

Top View

E. Repeat steps 3.1A through 3.1D to install a recess-mount bracket at each mounting hole location along the entire length of the drapery track.
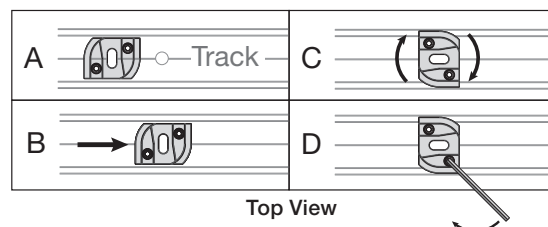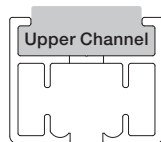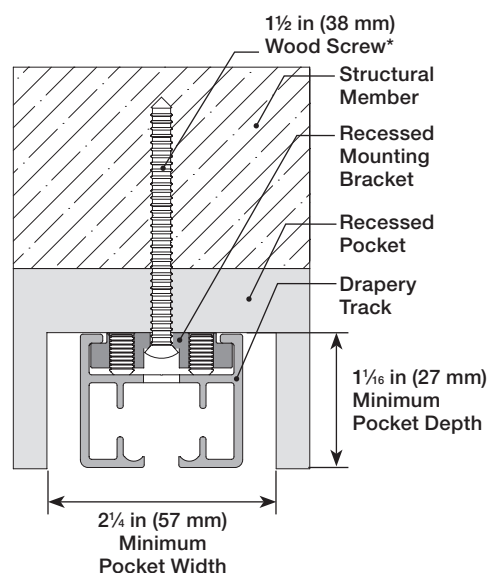
4 Recess-Mount

4.1 Recess-Mount with Wood Screw

A. Position the drapery track in the desired location.

B. Insert the 1½ in (38 mm) wood screw provided through the hole in the track and recessed mounting bracket, and into a structural member in the ceiling, as shown.

IMPORTANT: The drapery track must be fully supported by at least two people until all of the mounting screws are installed.

C. Repeat for all mounting holes in the drapery track.

NOTE: Ensure the pocket dimensions allow sufficient clearance for fabric movement and stackback throughout the operating range of the system.
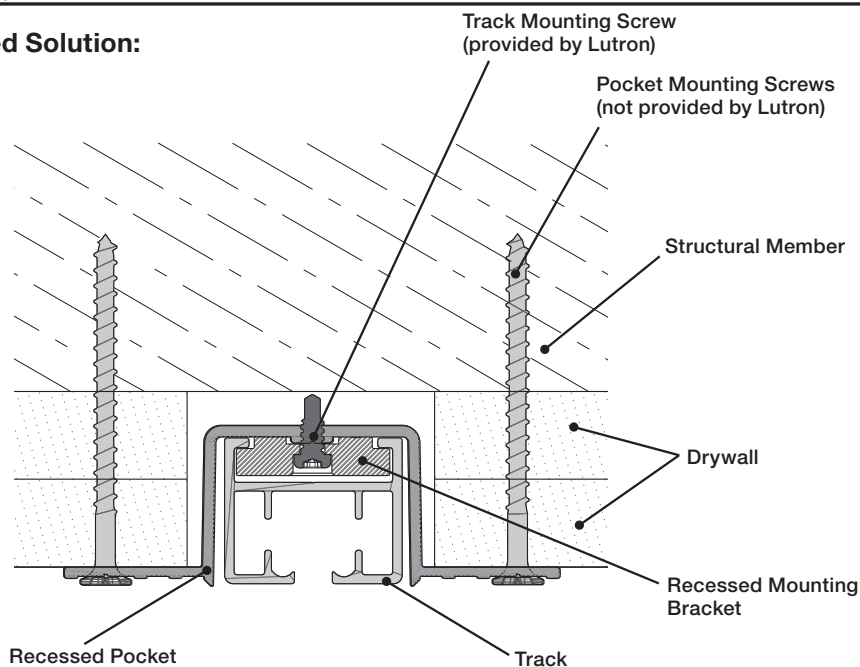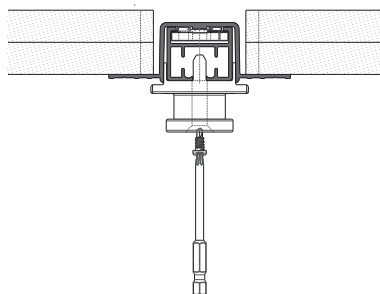

1½ in (38 mm) Wood Screw*
Structural Member
Recessed Mounting Bracket
Recessed Pocket
Drapery Track
1¹⁄₁₆ in (27 mm) Minimum Pocket Depth
2¼ in (57 mm) Minimum Pocket Width

*The wood screws provided are appropriate for driving into wooden structural members only. It is the responsibility of the installer to select and install fasteners that are appropriate for the supporting structure.

4 Recess-Mount *(continued)*

4.2 Recess-Mount with Recessed Solution:

A. Position the drapery track in the desired location.

B. Insert the provided ½ in (12.7 mm) track mounting screw through the hole in the track and the recessed mounting bracket into a structural member in the ceiling, as shown.

C. Repeat for all mounting holes in the drapery track.

Track Mounting Screw (provided by Lutron)

Pocket Mounting Screws (not provided by Lutron)

Structural Member

Drywall

Recessed Mounting Bracket

Recessed Pocket

Track

(WIN-DREC-TOOL)

NOTE: Lutron recommends using the Recessed Drapery Installation tool to space the track evenly in the pocket.

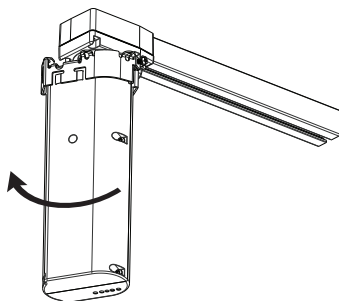## 5a Installing the EDU in Slim Orientation (Recommended for Fold Style Drapery)

5.1 Insert:

A. Insert the EDU mounting flange into the rail box by aligning the mounting tabs and drive shafts.

B. Push the EDU into the railbox until the mounting tabs are fully inserted.

Drive Shaft

Rail Box

Mounting Tabs

Slim Orientation Securing Holes
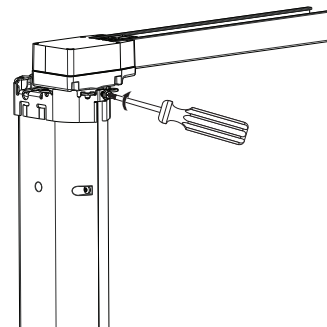
EDU
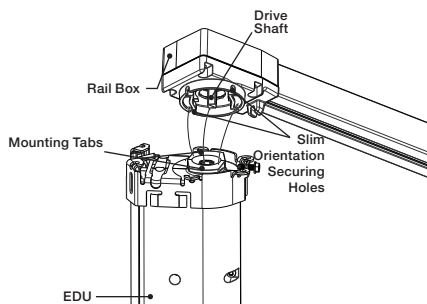
5.2 Rotate:

Rotate the EDU inside the mounting flange and align the desired holes for the securing screw on the motor bracket. Ensure the wire harness is not pinched.

5.3 Secure:
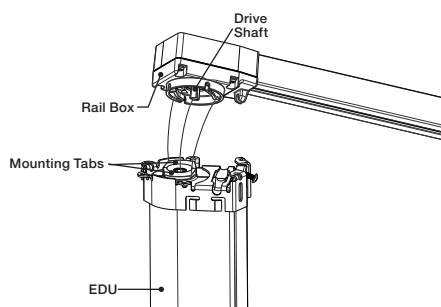
Install the securing screw.

NOTE: The securing screw is necessary to safely secure the EDU. Verify that it is installed and tightened before operating the drapery.

5b Installing the EDU in Original Orientation

5.1 Insert:

A. Insert the EDU mounting flange into the rail box by aligning the mounting tabs and drive shafts.

B. Push the EDU into the railbox until the mounting tabs are fully inserted.
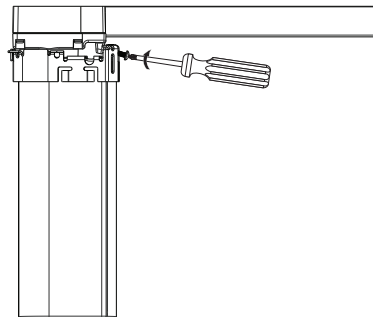

5.2 Rotate:

Rotate the EDU inside the mounting flange and align the desired holes for the securing screw on the motor bracket. Ensure the wire harness is not pinched.
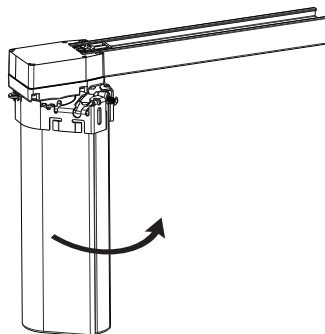
5.3 Secure:

Install the securing screw.

NOTE: The securing screw is necessary to safely secure the EDU. Verify that it is installed and tightened before operating the drapery.


5.4 Basic Wiring:

- For basic wiring instructions, please refer to the included wiring and setup guide: **045520 Sivoia QS Basic Wiring & Setup**

- For wireless receiver installation and setup, if applicable, please refer to the setup guide packaged with the wireless receiver: **045588 Sivoia QS Wireless RF Wireless Receiver**

6 Pinch Pleat Fabric Installation
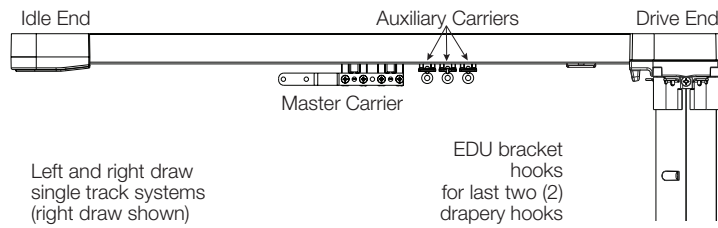
6.1 Attaching hooks:

Lutron recommends a drapery hook setting of 1/2 in (13 mm) from the top of the drapery to the top of the hook (hooks not included). This locates the drapes just below the track and prevents it from rubbing on the track. It is recommended that a distance of 1/2-1 in (13-25 mm) be maintained between the bottom of drapery panel and the floor.
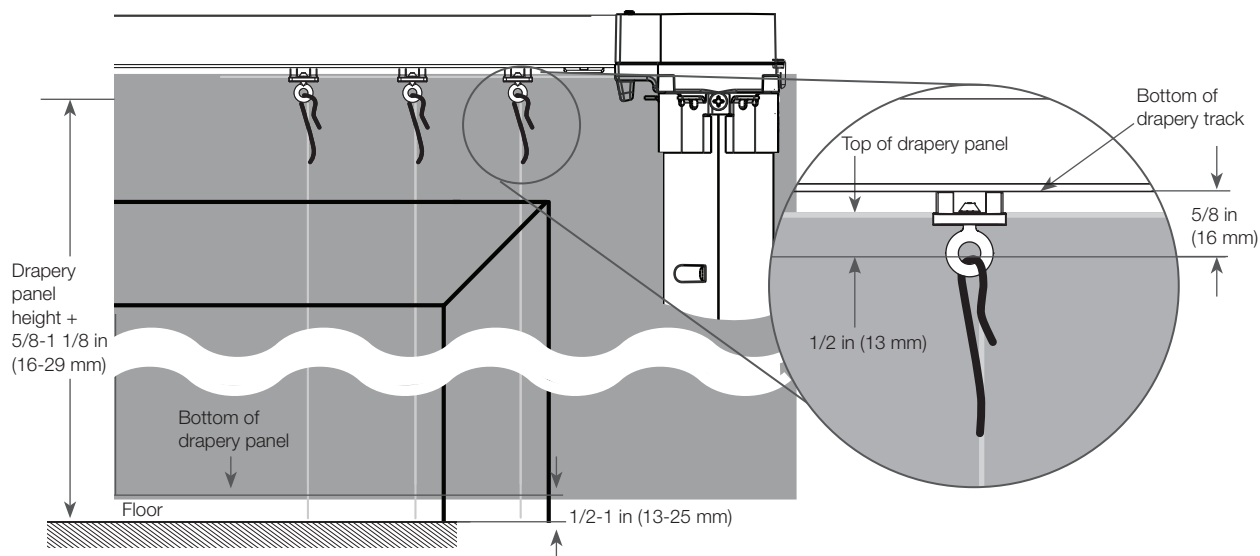
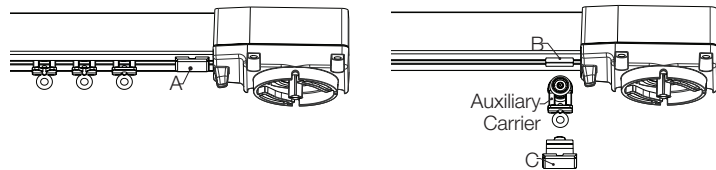## 6 Pinch Pleat Fabric Installation *(continued)*

6.2 Hang the drapery - left and right draw systems:

Attach the drapery to the drapery track starting with the Master Carrier, attaching the last two hooks of the drapery to the EDU bracket hooks.
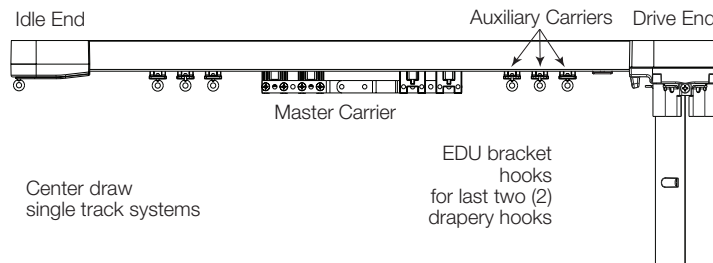

Idle End   Auxiliary Carriers   Drive End

Master Carrier

Left and right draw single track systems (right draw shown)

EDU bracket hooks for last two (2) drapery hooks

6.3 Add or remove auxiliary carriers - left and right draw systems:

A. Remove square plug on the drive end of the track, using a flat blade screw driver (EDU may need to be removed prior to removing the square plug).

B. Insert or remove auxiliary carriers through the square hole in the track until the correct number of carriers are installed.

C. Replace the square plastic plug by pushing it into the square hole until it snaps into place.

Auxiliary Carrier

6.4 Hang the drapery - center draw systems:

A. **Drive End:** Attach the drapery to the drapery track starting with the Master Carrier. Finish by attaching the last two hooks of the drapery to the EDU bracket hooks.

B. **Idle End:** Attach the drapery to the drapery track starting with the Master Carrier. Finish by attaching the last hook of the drapery to the idler end hook. Remove any unused auxiliary carriers as shown in the following section.


Idle End   Auxiliary Carriers Drive End

Master Carrier

Center draw single track systems

EDU bracket hooks for last two (2) drapery hooks

6.5 Add or remove auxiliary carriers - center draw systems:

A. Follow the instructions in section 5.3 for the drive end plug removal, and installation of the auxiliary carriers.

B. Remove the screw that retains the idler end cover. Remove the idler end cover and the hook eye.

C. Insert or remove auxiliary carriers through the square hole in the idler end cap until the desired number of carriers is installed.

D. Install the idler end hook eye and replace the idler end cover using the screw removed in step B.

Idler End Cover
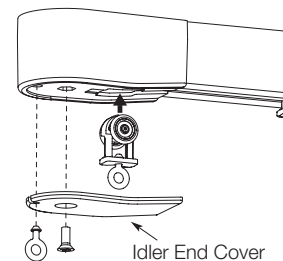
6.6 Dressing the drapery around the drive end:
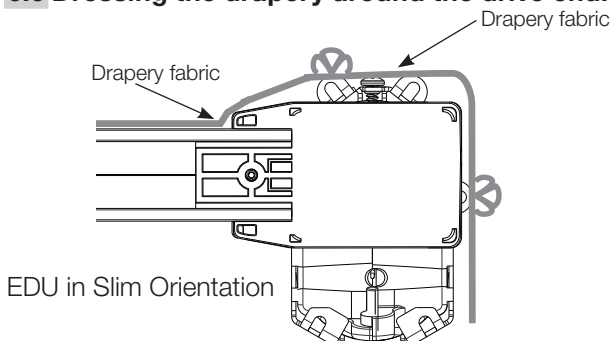
Adjustment of the drapery pin height may be necessary to align these pleats with the other pleats on the drapery panel.

Drapery fabric

Drapery fabric

EDU in Slim Orientation
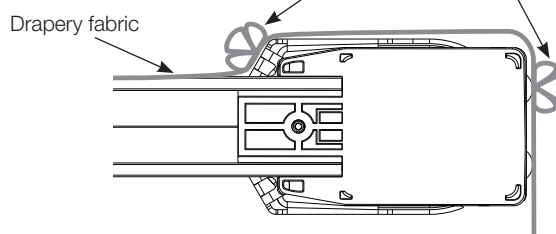
Drapery fabric

7 Ripplefold Fabric Installation
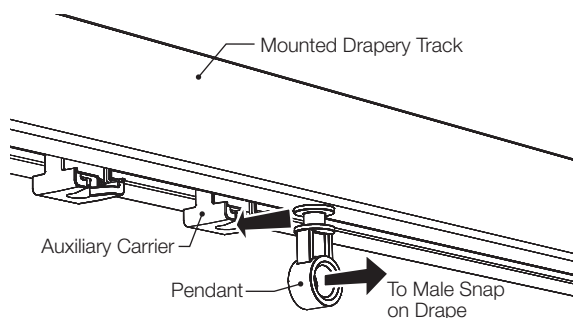
7.1 Drapery Panel Height

Drapes are typically sized so the bottom of the drapery track and top of the drapery panel are located 4 in (101 mm) above the window casing. Location may need to be adjusted to accommodate the specific drapery panel height and application. It is recommended that a space of 1⁄2-1 in (13-25 mm) be maintained between the bottom of drapery panel and the floor.
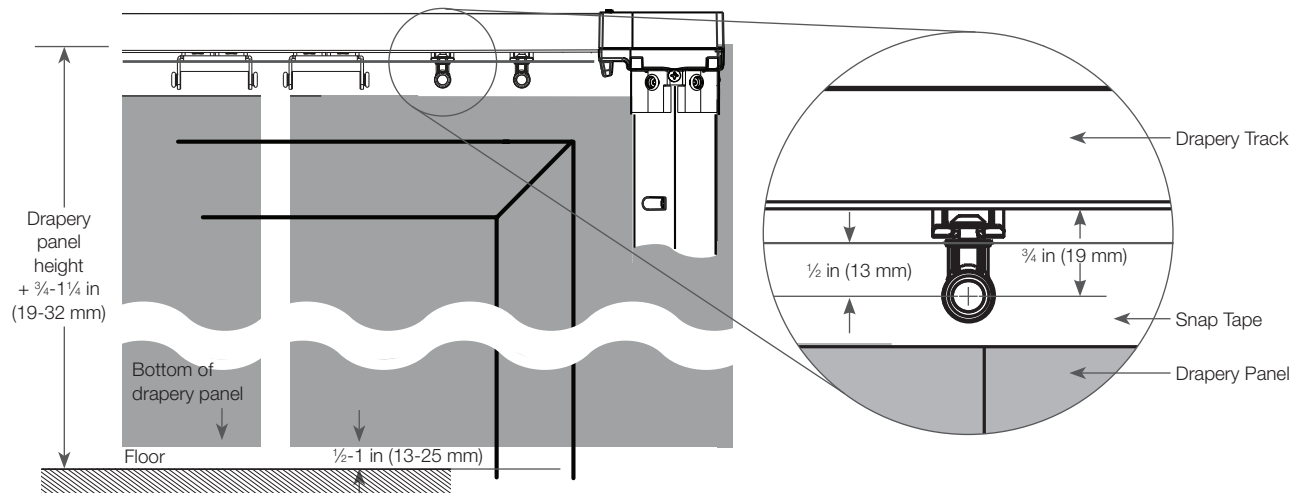
7.2 Attach the Drapery Panel

A. Attach a pendant to each male auxiliary snap on the drape, leaving 3 at each end open for attachment to the drive/idler snap bracket and/or the master carrier.

B. Hang the pendant in the corresponding auxiliary carrier as shown.

C. Fasten the remaining snaps (3 at each end) to the drive/idler snap brackets and master carrier(s) according to the drapery configuration, following the appropriate configuration example below.

NOTE: Master carriers for pull-to-start drapery tracks with ripplefold fabrics accept female snaps. Non-pull-to-start master carriers accept male snaps.
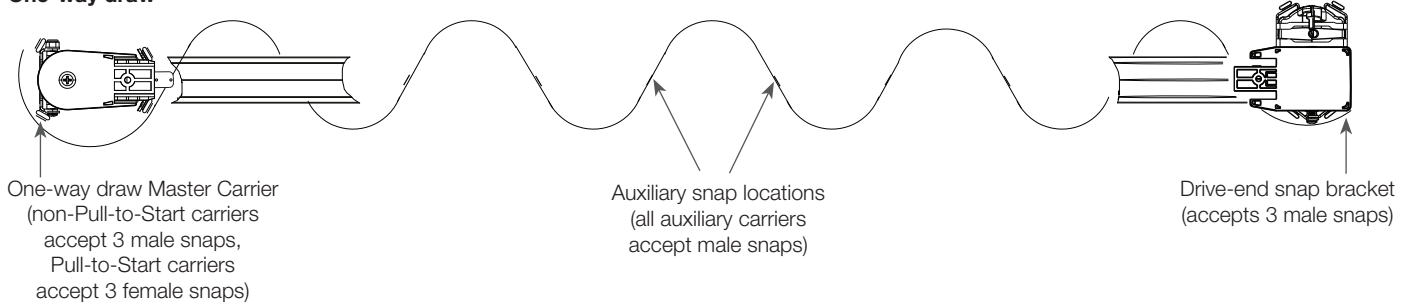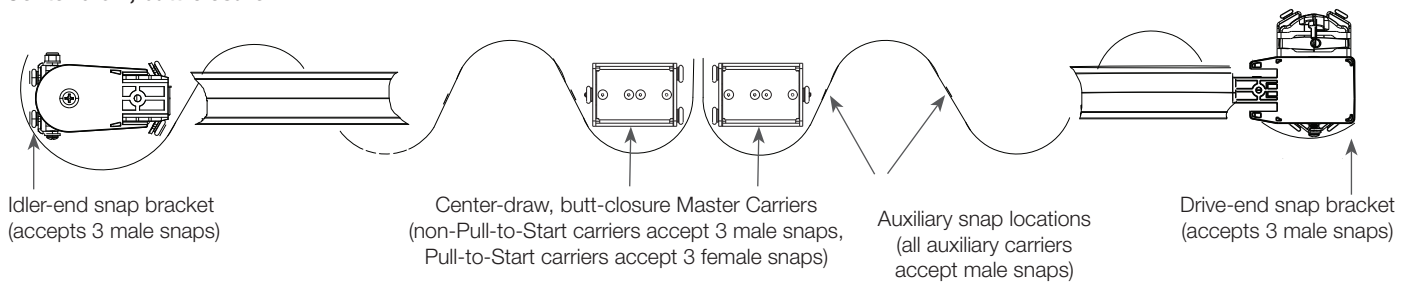
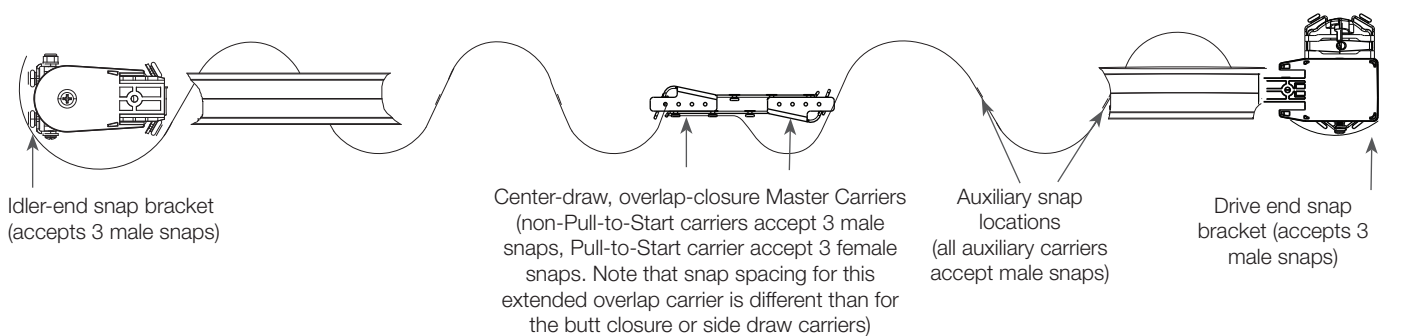# 7 Ripplefold Fabric Installation *(Continued)*

7.3 Configurations

One-way draw

One-way draw Master Carrier
(non-Pull-to-Start carriers
accept 3 male snaps,
Pull-to-Start carriers
accept 3 female snaps)

Auxiliary snap locations
(all auxiliary carriers
accept male snaps)

Drive-end snap bracket
(accepts 3 male snaps)

Center draw, butt-closure

Idler-end snap bracket
(accepts 3 male snaps)

Center-draw, butt-closure Master Carriers
(non-Pull-to-Start carriers accept 3 male snaps,
Pull-to-Start carriers accept 3 female snaps)

Auxiliary snap locations
(all auxiliary carriers
accept male snaps)

Drive-end snap bracket
(accepts 3 male snaps)

Overlap-closure

Idler-end snap bracket
(accepts 3 male snaps)

Center-draw, overlap-closure Master Carriers
(non-Pull-to-Start carriers accept 3 male
snaps, Pull-to-Start carrier accept 3 female
snaps. Note that snap spacing for this
extended overlap carrier is different than for
the butt closure or side draw carriers)

Auxiliary snap
locations
(all auxiliary carriers
accept male snaps)

Drive end snap
bracket (accepts 3
male snaps)

8 Ripplefold | Drapery Tape Assembly (without Pull-to-Start)

The ripplefold drapery snap tape is attached to the top of the fabric panel by the drapery manufacturer. The number of snaps required is based on the track width, draw type and fullness of the drapery. Refer to myProjects for the number of snaps required per panel for the given specifications. Left draw and right draw configurations require one fabric panel. Center draw and tandem center draw configurations require two fabric panels. The Lutron ripplefold drapery system is compatible with Graber snap tape, which has a spacing of 4.25 in (108 mm) between snaps. The Buttmaster Carriers and the End Snap Brackets require the outermost snap on both ends of the snap tape to be spaced 1 in (25 mm) from the adjacent snaps.

8.1 Configurations

**Left Draw and Right Configurations**
Number of Panels — 1
Snap Tape Type — Graber
Inner Snap Spacing — 4 1/4 in (108 mm) typical
End Snap Spacing — 1 in (25 mm)
Snaps Per Panel — Varies based on track width, draw type and fullness

Refer to myProjects for exact snap quantity.
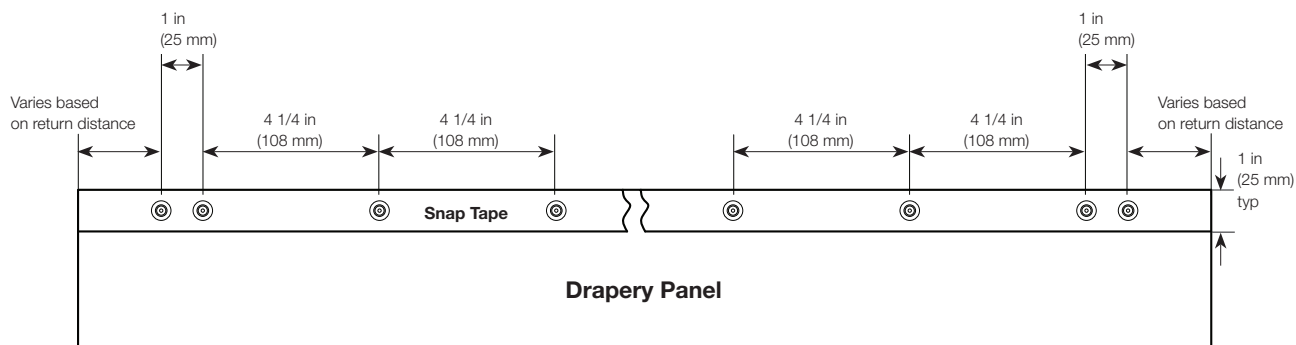
8.2 Configurations

Center Draw and Tandem Center Draw Configurations
Number of Panels — 2
Snap Tape Type — Graber
Inner Snap Spacing — 4 1/4 in (108 mm) typical
End Snap Spacing — 1 in (25 mm)
Snaps Per Panel — Varies based on track width, draw type, and fullness

Refer to myProjects for exact snap quantity.
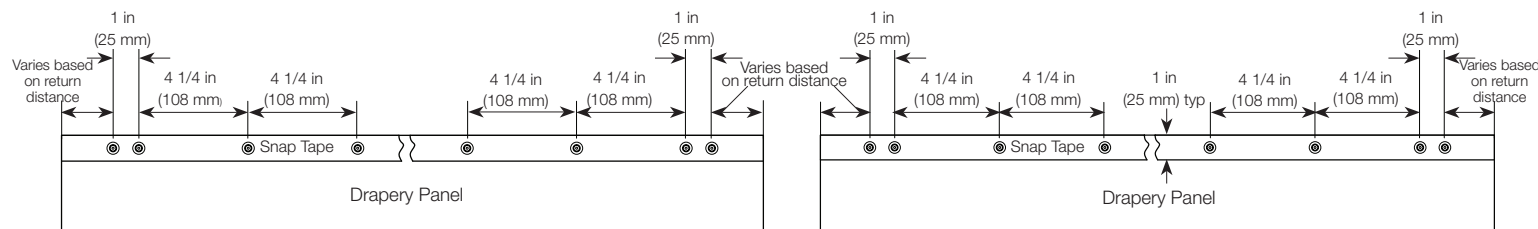
8 Ripplefold | Drapery Tape Assembly (without Pull-to-Start) *(Continued)*

Extended Overlap-Closure Snap Spacing

The ripplefold drapery snap tape is attached to the top of the drapery panel by the drapery manufacturer. The total number of snaps required for each drapery panel is based on the track width, draw type, and fullness of the drapery. Center draw and tandem center draw configurations require two drapery panels. The Lutron ripplefold drapery system is compatible with Graber snap tape which has a spacing of 4.25 in (108 mm).
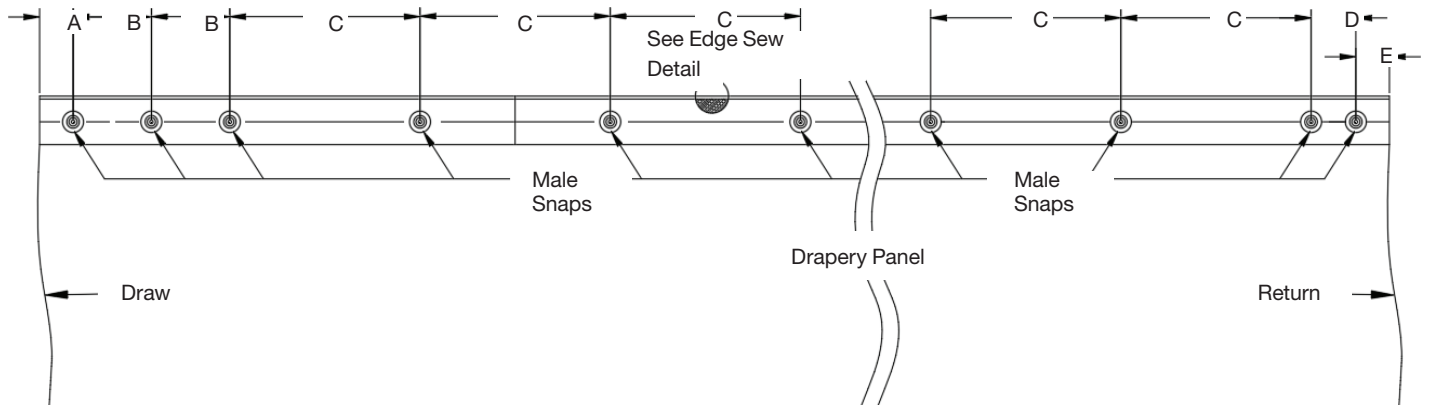
Custom Snap Spacing

A = 0.75 in (19 mm)

B = 1.75 in (45 mm)

C = Standard ripplefold snap tape spacing of 4.25 in (108 mm)

D = 1.0 in (25 mm)

E = Varies with return distance

Edge Sew Detail
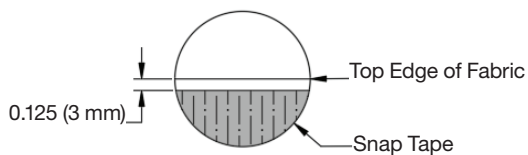
9 Ripplefold | Drapery Tape Assembly (with Pull-to-Start)

The Lutron ripplefold drapery system is compatible with standard ripplefold snap tape with spacing of 4.25 in (108 mm) between snaps.
- Standard carriers accept male snaps; quantity required varies with track width.
- Three (3) female snaps are required at the draw end as shown.
  - Compatible female snap tape is available from Alan Richard Textiles, Ltd.
    By the yard: alanrichardtextiles.com/store/DRFT02-Y.html
    By 100 yard (91.4 m) roll: alanrichardtextiles.com/store/DRFT02.html
- Single-draw configurations require one drapery panel.
- Center-draw configurations require 2 drapery panels
  - Butt-closure: snap layout shown below mirrored on the second panel.
  - Overlap-closure: the draw and return end snap layouts shown below are mirrored on the second panel, and the right panel requires one more auxiliary snap than the left. (See the Overlap-Closure diagram on previous page.)
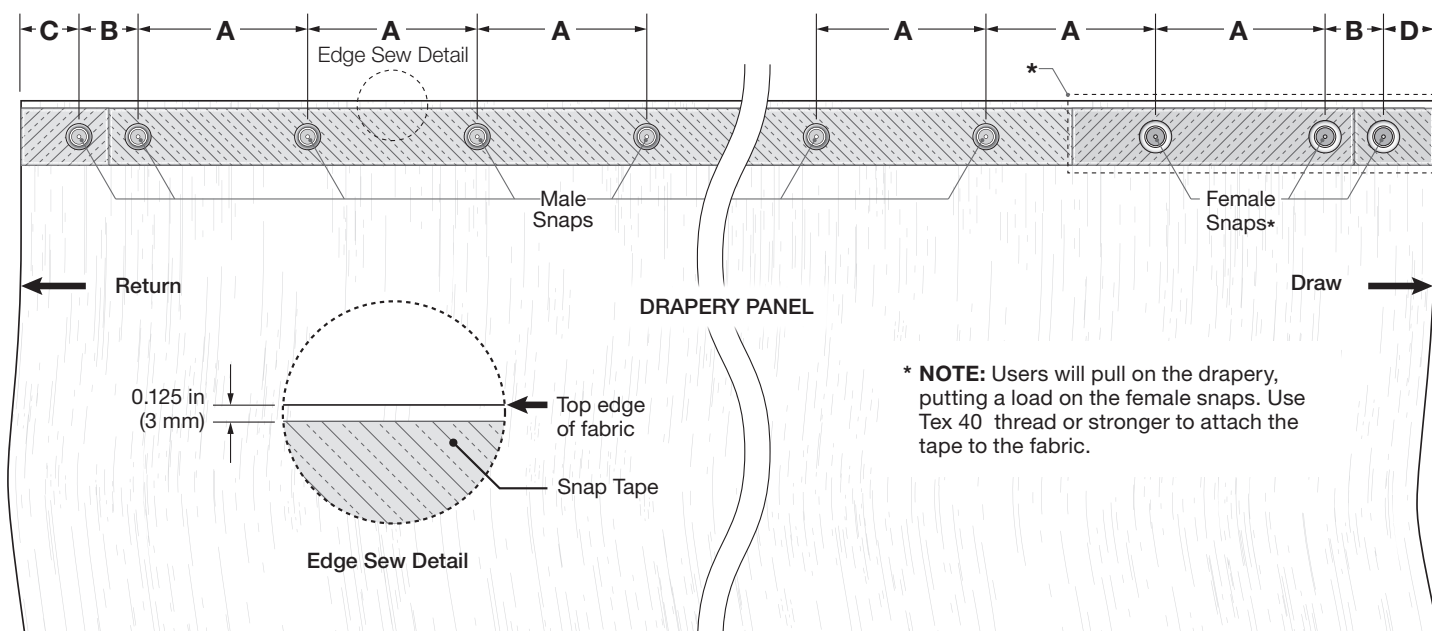
A = Standard ripplefold snap tape spacing of 4.25 in (108 mm)

B = 1 in (25 mm) for one-way draw, butt-closure, and overlap-closure master carriers

2.25 in (57 mm) for the extended overlap-closure master carrier

C = Varies with return distance

D = 0.75 in (19 mm)

10 Power Up the Drapery and Assign a Control

10.1 Initial Power-Up:

Connect the power supply to an appropriate power source.

The LED on the EDU will flash a red/green/blue pattern as the EDU powers up.

> For detailed system wiring, programming, and troubleshooting information, please refer to P/N 045314 Sivoia QS Wiring & Programming Guide.
>
> To find the meaning of LED blink codes, see: lutron.com/TechnicalDocumentLibrary/Sivoia QS Shades.html

### 10.2 Wireless Control Assignment:

A. Place the Drapery Drive in Assignment Mode.
    - Press and hold the open limit ▭ button on the drive until the green LED flashes, then remains solid.
    - Tap an arrow ⌒ button on the drive. The green LEDs on the drive and on the wireless receiver will flash twice every 4 seconds. The drive is now ready to be assigned to a control.
    - Repeat the above steps for any other drapery drives that are being assigned to the same control.

B. Complete the Assignment.
    - Press and hold the Close button on the wireless control for 6 seconds. The drapery will move a short distance in each direction or "wiggle" one time. This confirms the drive has been assigned to the control, and exits Assignment Mode.

C. Repeat steps 7.2A and 7.2B to assign more drapery drives and/or additional controls.

NOTE: Drapery systems can be assigned to multiple controls. To un-assign devices, see "Restoring Factory Default Settings" on page 14.

10.2A

HOLD

TAP

10.2B

HOLD
(6 sec)

Wall-Mounted

Hand-Held
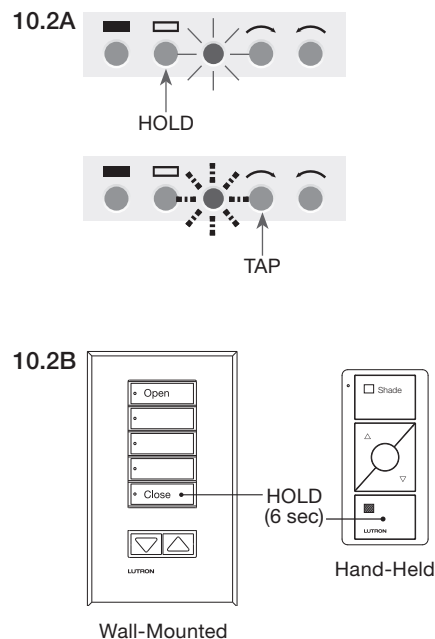
11 Setting Open and Close Limits

A. Enter Limit-Set Mode
    - To set the close limit, tap the Close ▬ button. The green LED illuminates.
    - To set the open limit, tap the Open ▭ button. The green LED illuminates.

B. Move the drapery
    - Press and hold an arrow ⌒ or ⌒ button until the drapery is at the desired location.

C. Press and hold the same button originally tapped in step 10.2A until the green LED flashes, then turns off.

Set Close Limit

Set Open Limit

A

TAP

TAP

B

OR

OR

C

HOLD

HOLD
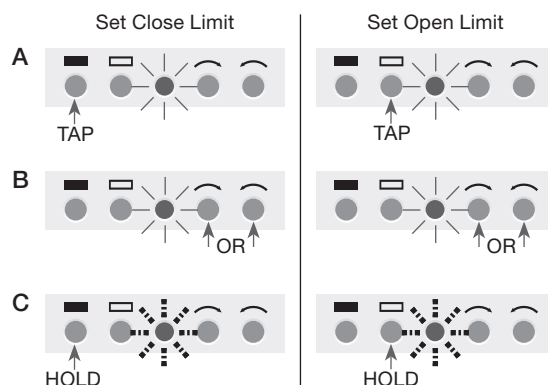
NOTE: For pull-to-start drapery systems - on first motion upon every power up, in case any manual movement during power off, the system will perform a one-time auto limit calibration process. The master carrier(s) will move to the physical limit of the track. After the calibration process, the drapery can be operated as normal with no impact of its original limits.

12 The Optional Manual Open Feature

Note: The Manual Open feature is only available in systems that were originally ordered with the option. The following instructions do not apply to the standard Master Carrier.

NOTE: The Manual Open feature is not available with Pull-to-Start.

12.1 Enabling the Manual Open Feature

The Manual Open feature allows the drapes to be manually opened in the event of a power failure, or if the user is not aware the drapery track is motorized.

With the drapery closed (the window is covered), grasp the drape near the top and pull in the direction of the open limit (exposing the window). The Master Carrier Hanger Bar will disengage from the Master Carrier Latch Plate, allowing the drape to open manually. Pull the drape to the desired open position.
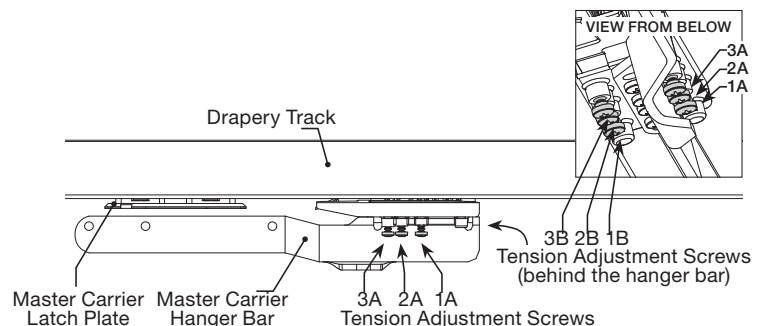
12.2 Returning to Motorized Operation

A. To re-engage the Master Carrier manually, pull the drape back to the closed position until the Master Carrier Hanger Bar meets, then engages, the Master Carrier Latch Plate. Motorized operation is restored.

B. To re-engage the Master Carrier using the drapery drive, double-tap the Open Limit ▭ button. The Master Carrier Latch Plate will move to the open limit position and engage the Master Carrier Hanger Bar. Motorized operation is restored.

12.3 Adjusting the Release Mechanism

The release mechanism is adjustable to increase the force required to disengage the drapery from the motorized carrier system. When heavier fabric panels are installed, adjustment may be needed to prevent the motorized carrier system from disengaging under the normal operating load. To test and adjust:

A. With the drapery in the open position (the window is exposed), double-tap the Close Limit ▬ button.

B. If the Master Carrier Hanger Bar disengages from the Latch Plate during travel, increase the tension by fully tightening Tension Adjustment Screws 1A and 1B.

C. Double-tap the Open Limit ▭ button to re-open the drapery, and re-engage the release mechanism, then repeat step 9.3A to test the new tension setting.

D. If the Master Carrier Hanger Bar disengages from the Latch Plate during travel, increase the tension by fully tightening Tension Adjustment Screws 2A and 2B.

E. Repeat step 11.3C to test the new tension setting.

F. If the Master Carrier Hanger Bar disengages from the Latch Plate during travel, maximize the tension by fully tightening Tension Adjustment Screws 3A and 3B.


VIEW FROM BELOW

3A
2A
1A

Drapery Track

3B 2B 1B
Tension Adjustment Screws
(behind the hanger bar)

Master Carrier   Master Carrier   3A   2A 1A
Latch Plate   Hanger Bar   Tension Adjustment Screws

❋ Restoring Factory Default Settings

This procedure will un-assign this drapery drive from all wireless controls but will not affect the open and close limits.


HOLD

HOLD

HOLD

HOLD

A. Press and hold ▬ until the green LED flashes. Release.

B. Press and hold ⬜ until the green LED flashes. Release.

C. Press and hold ⌒ until the green LED flashes. Release.

D. Press and hold ⌒ until the LED flashes a multicolor sequence, indicating the factory default settings have taken effect. Release.