





# **Table of Contents**

IECC 2012

Introd	luct	ion
Solutions	Over	view

Solutions Overview
Summary of Code Requirements
Daylight Zone Requirements
Suggested Code Compliant Solutions 6
How to Use this Guide
Vive Local Solutions   Layout

# Applications

### **Atrium**

New	Construction	(Dimming	0-10\/)	12
40.00	OOHSHUCHOH	(Dillilling	0-10 V)	 1 _

### **Break Room**

New Construction (Switching)	14
Recommended (Dimming 0-10V)	16

### Classroom

New Construction (Switching)	18
Recommended (Fixture Control)	20

### **Conference Room**

New Construction (Switching)	22
Recommended (Fixture Control)	24

### **Egress Corridor**

New Construction (Switching)	26
Recommended (Dimming 0-10V)	28

### **Open Office**

New Construction (Switching)	30
Recommended (Fixture Control)	32

### **Private Office**

New Construction (Switching)	34
Recommended (Dimming 0-10V)	36

Restroom (N	/Iulti-Stall
-------------	--------------

New Construction	(Switching)	38
------------------	-------------	----

### **Egress Stairwell**

New Construction (Fixture Control)	40
Recommended (Fixture Control)	42

This document summarizes the lighting and receptacle control requirements for commercial buildings. It is for information purposes only. It is not meant to replace your state's or local jurisdiction's official energy code. Please refer to your local building energy code or authority having jurisdiction for your precise requirements. Only the authority having jurisdiction can guarantee code compliance.

# Energy-saving lighting control strategies

Strategy		Potential savings
Max: 100% Max: 80%	<b>High-end trim/tuning</b> sets the maximum light level based on customer requirements in each space.*	10-30% Lighting
Auto On Auto Off	Occupancy/vacancy sensing turns lights on when occupants are in a space and off when they vacate the space.*	20-60% Lighting
Full On Dim	<b>Daylight harvesting</b> dims electric lights when daylight is available to light the space.*	25-60% Lighting
Full On Dim	Personal dimming control gives occupants the ability to set the light level.*	10-20% Lighting
Shade Open Shade Closed	Controllable window shading moves shades to reduce glare and solar heat gain.*	10-20% Cooling
7am: Dim 7pm: Off	<b>Scheduling</b> provides scheduled changes in light levels based on the time of day.*	10-20% Lighting
Full On Dim	<b>Demand response</b> automatically reduces lighting loads during peak electricity usage times.*	30-50% During peak period
Appliance On Appliance Off	Plug load control automatically turns off loads after occupants leave a space.*	15-50% of Controlled loads
Heating Cooling	HVAC integration controls heating, ventilation, and air conditioning systems through a contact closure.*	5-15% HVAC

<sup>\*</sup>Go to lutron.com/references for more information

Codes can sometimes be complicated and difficult to navigate. This commercial application guide provides examples of how Lutron products can be used to meet or exceed code requirements. This guide focuses on Vive and Vive compatible solutions, but our other control systems offer similar features.

# Lutron Product Capabilities: Commercial Applications

			'		1	'
			Local Solution	ıs	Panel Sol	utions
		Wallbox	Vive	Vive with wireless hub*	Energi Savr Node	Quantum
	Occupancy sensing					
Strate	Multi-level lighting control					
Strategies for code/standards compliance	Daylight harvesting					
code/s	Receptacle control					
tandard	Timeclock				**	
s compl	Demand response			• †	•	
iance	Energy monitoring			•		
	BACnet integration					

To learn more about these products and their specifications, go to lutron.com/catalogs.

<sup>\*</sup> For the latest information on products compatible with the Vive wireless hub go to lutron.com/vive.

<sup>\*\*</sup> Requires QS timeclock.

<sup>&</sup>lt;sup>†</sup> Automated Demand Response capability requires signal from a third-party device.

# **Summary of Requirements for Lighting and Receptacle Controls**

IECC 2012

The requirements listed below are summarized for simplicity and may have other exceptions that were omitted.

	Minimum control type	Description	Code provision
ontrol	Switching	Lighting shall be capable of turning ON and OFF. There shall be at least one manual device for control of the lighting within a space. See code for spaces that allow remote location of control.	C405.2.1.1
Local Control	Multi-level or dimming <sup>1</sup>	Lighting shall be capable of being reduced by at least 50% of full power, in addition to being switched ON and OFF. There shall be at least one manual device for control of the lighting within a space. See code for spaces that allow remote location of control.	C405.2.1.2
	Timeclock <sup>2</sup>	Interior & parking garages: Scheduled control, based on time-of-day, turns lighting ON or OFF based on typical occupancy. Occupancy sensors also comply as an alternate to using a timeclock.  Exterior: Scheduled control, based on time-of-day and sunrise/sunset (requires astronomical timeclock), turns lighting ON or OFF based on typical occupancy and daylight.	C405.2.2.1 C405.2.4
ontrol <sup>3</sup>	Occupancy sensor	Automatic control turns lighting ON upon occupancy or OFF after a vacancy of 30 minutes or less.	C405.2.2.2
Automatic Control <sup>3</sup>	Full ON	ON When initiated by a timeclock or occupancy sensor, lighting is automatically turned ON to maximum lighting power.	
Auton	Partial ON	When initiated by a timeclock or occupancy sensor, lighting is automatically turned ON to 50% or less of maximum lighting power.	C405.2.2.2
	Full OFF	When initiated by a timeclock or occupancy sensor, lighting is automatically turned OFF.	C405.2.2.2
	Partial OFF	When initiated by a timeclock or occupancy sensor, lighting is automatically reduced by at least 50% of maximum lighting power. In some spaces, partial OFF is permitted but it is not a code requirement.	C405.2.1 Exception
Other	Daylight responsive control <sup>1</sup>	Interior: Manual or automatic control of sidelight and skylight daylight zones is required. When using automatic control, there must be at least two levels between ON and OFF. See the "Daylight Zone Requirements" for more information. Exterior: A photosensor can be used as an alternate to the dawn/dusk operation of an astronomical timeclock.	C202 C405.2.2.3 C405.2.4

For areas being used as a path of egress or fixtures being used for emergency, verify compliance with your local authority having jurisdiction. Acceptance (functional) testing is required for all new construction applications to ensure that control hardware and software are calibrated, programmed and functioning properly (Code provision C408.3).

- 1 When multi-level lighting control and/or daylight responsive control is required, Lutron recommends using continuous dimming to allow for smooth light level adjustment and maximized energy savings.
- 2 Lutron recommends using occupancy sensors to achieve automatic on/off requirements in place of a timeclock to maximize energy savings and optimize user experience.
- 3 Manual ON is always permitted for interior applications. Provide manual ON control when no automatic ON is indicated.

# **Daylight Zone Requirements**

IECC 2012


### **Daylight Zone Requirements:**

Fixtures in primary sidelight or skylight zones must be controlled by a daylight sensor in spaces greater than 10,000 sq. ft. or having greater than 30% window-to-wall ratio. All other daylit spaces only require a separate manual control for daylight zones.

### **Daylight Exceptions:**


Daylight control is not required for daylight zones enclosed by walls or ceiling-height partitions containing two or fewer luminaires.


# Sidelighting (Window)

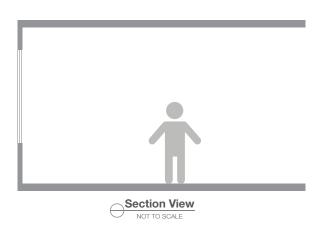



### Toplighting (Skylight)

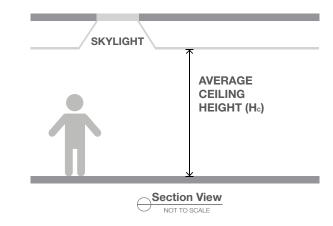

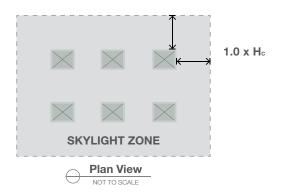

5

IECC 2012

**Suggested Code Compliant Solutions** 

IECC 2012

The compliant solutions listed below are suggested based on total installed cost, simplicity of design, and basic functional needs for the space. These solutions do not represent the only compliant options to meet lighting and receptacle control requirements. Applications in this guide will illustrate these solutions and/ or alternative solutions for advanced functionality. ASHRAE 90.1 2010 can also be used as a compliance option in meeting IECC 2012 requirements.

		Atrium	Break Room	Classroom, Lecture Hall, Training Room	Conference, Multi-purpose Room	Egress Corridor <sup>4</sup>	Lobby
Local Control	Switching			<b>Ø</b>			
Local (	Multi-level or dimming	Ø					Ø
	Timeclock						
	Occupancy sensor		Ø	<b>\overline{\over</b>	<b>\overline{\over</b>	<b>\overline{\over</b>	<b>\overline{\over</b>
Automatic Control <sup>2</sup>	Full ON					<b>Ö</b>	<b>Ö</b>
Automatic	Partial ON						
	Full OFF		Ø				<b>*</b>
	Partial OFF					<b>ऴ</b> ³	
Other	Daylight responsive control	<b>Ö</b>	Ø	<b>\overline{\over</b>	<b>☆</b>	Ø	<b>\overline{\over</b>

- 1 All retrofits altering more than 50% of the luminaires, or 10% with alterations to controls and/or circuits, must comply with all new construction requirements.
- 2 Manual ON is always permitted for interior applications. Provide manual ON control when no automatic ON is indicated.
- 3 Not a code requirement. Lutron recommends this solution for spaces designated as a path of egress.
- 4 For areas not designated as a path of egress, the occupancy sensor must turn lights to full OFF.
- 5 Timeclock ensures the lights are on when typically occupied. Occupany sensor controls lights when typically unoccupied.

### Diagram key:

New construction

**\(\overline{\ov** 

**=** New construction and retrofit

Open Office (>300 sq. ft.)	Private Office (<300 sq. ft)	Restroom	Egress Stairwell <sup>4</sup>	Storage Room	Facade/ Landscape	Parking Garage (Not Roof) <sup>5</sup>	Other Exterior
<b>\overline{\over</b>	<b>*</b>	<b>*</b>					
					<b>*</b>	<b>*</b>	<b>\overline{\overline{\phi}}</b>
*	<b>*</b>	<b>*</b>	<b>Ø</b>	<b>*</b>		<b>Ø</b>	
		<b>*</b>	<b>*</b>		<b>Ø</b>	<b>*</b>	<b>\$</b>
<b>\$</b>	<b>Ø</b>	<b>Ø</b>		<b>Ø</b>	<b>Ø</b>	<b>Ø</b>	<b>\$</b>
			<b>ॐ</b> ³				
<b>*</b>	<b>Ø</b>	<b>*</b>	<b>\overline{\over</b>	<b>*</b>			

This application guide is designed to help specifiers and contractors understand codes and Lutron controls in a simple manner. Each of the pages will lay out different spaces, the corresponding lighting control products for those spaces, and the way the system is set up in the space.

### **For Specifiers**

Use this application guide for design suggestions, to understand the way the system operates and to specify the relevant products for each space.


### **For Contractors**

Use this application guide to understand how the system is installed, the way the system must operate, and to order the correct products for each application.

> Understand how the products are laid out in the space

This guide offers up to three solutions per space type.

- The **Retrofit Solutions** are simple and inexpensive solutions, generally suited for a basic retrofit.
- The **Recommended Solutions** have advanced functionality for greater comfort and energy savings.

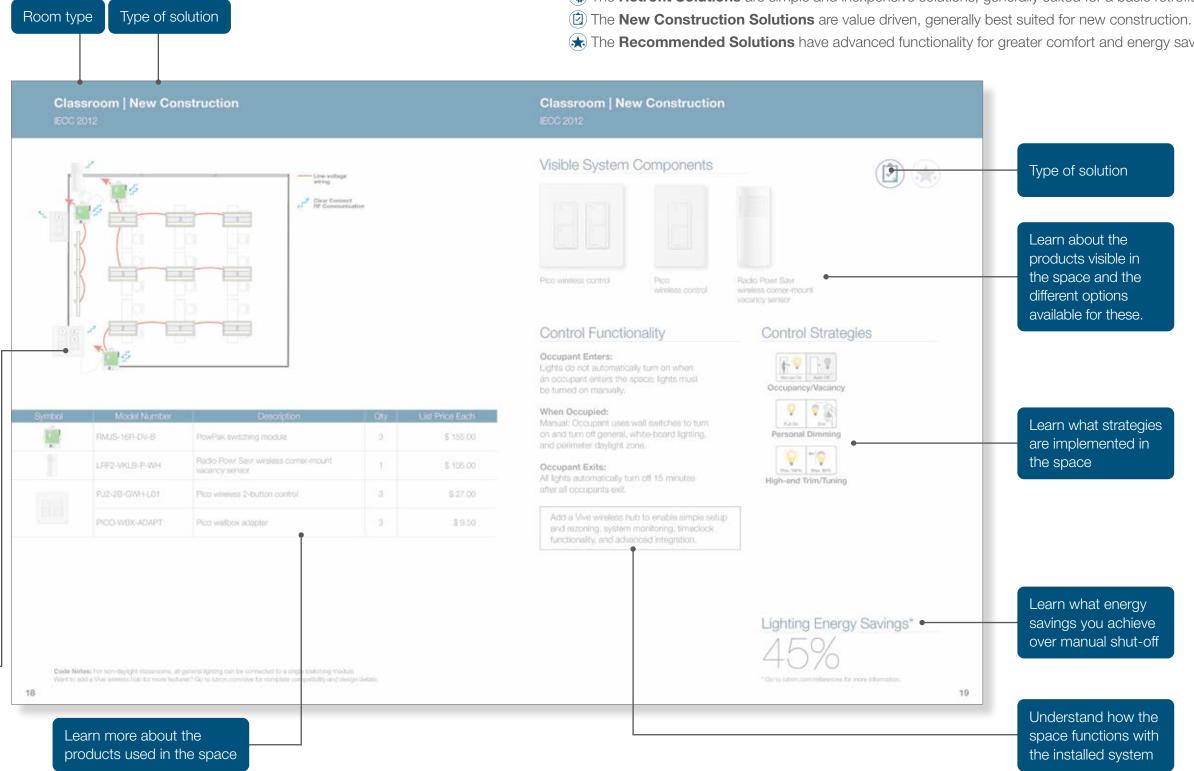

# **Vive Local Solutions Layout**

IECC 2012

This is a high-level overview of the local solutions layout. For individual room requirements refer to the detailed room type solutions in this guide. A single PowPak module can control a single or multiple fixtures. The products shown here are representative of local solutions. Multiple product options are available to meet the needs of the space.



Vive wireless hub\*



PowPak module




- Pico wireless remote control
- Daylight sensor

### **Vive wireless hub features:**

- · Central control, management, and monitoring of Vive devices via web browser
- Supports astronomic and time-of-day events
- Two contact closure inputs for third-party integration, such as Automatic Demand Response
- · Wi-Fi access for easy commissioning
- Control up to 10,000 sq. ft. with a single hub
- Optional BACnet integration
- \* Go to lutron.com/vive for complete compatibility and design details.



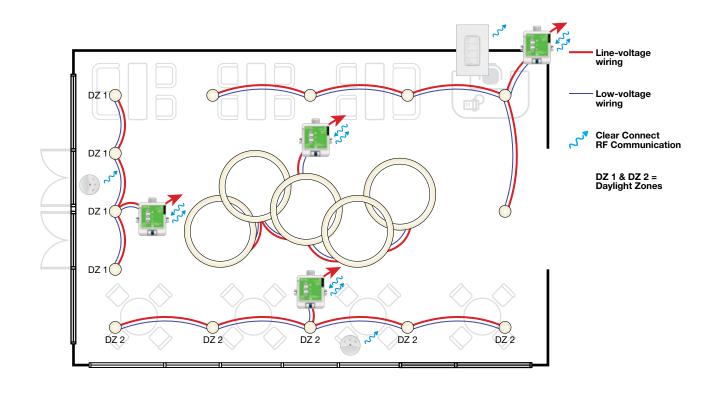

Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	4	\$ 180.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	2	\$ 150.00
	PJ2-4B-GWH-L31	Pico wireless 4-button scene control	1	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50
	HJS-1-FM	Vive wireless hub	Shared	Consult your local rep for hub pricing and service options.

# Visible System Components

**Atrium | New Construction** 







Radio Powr Savr wireless daylight sensor

# **Control Functionality**

### When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant selects scenes to set desired light levels for all lights.

### Timeclock:

Timeclock turns lights on to 50% light level during normally occupied hours. Maximum light level is set to 80%.

Timeclock turns lights off during normally unoccupied hours.


# **Control Strategies**




**Daylight Harvesting** 



**High-end Trim/Tuning** 

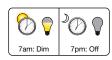

Scheduling

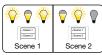

**Scene Control** 

Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information.

Code Notes: Requirements specified for 20-40 ft. atriums. Go to lutron.com/vive for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.


# **Break Room | New Construction**

IECC 2012

# Visible System Components





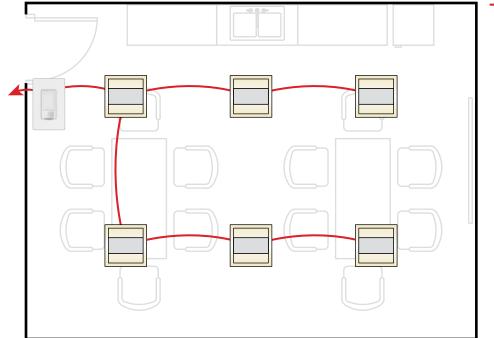

Line-voltag wiring

Symbol	Model Number	Description	Qty	List Price Each
	MS-VPS6M2-DV-WH	Maestro vacancy sensing switch*	1	\$ 57.20



Maestro vacancy sensing switch

# **Control Functionality**

### **Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.


### When Occupied:

Manual: Occupant uses wall switch to turn all lights off.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

# **Control Strategies**

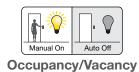

Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information.


15

\* Maestro MS-VPS6M2 is not compatible with the Vive wireless hub.

16

# **Break Room | Recommended**

IECC 2012

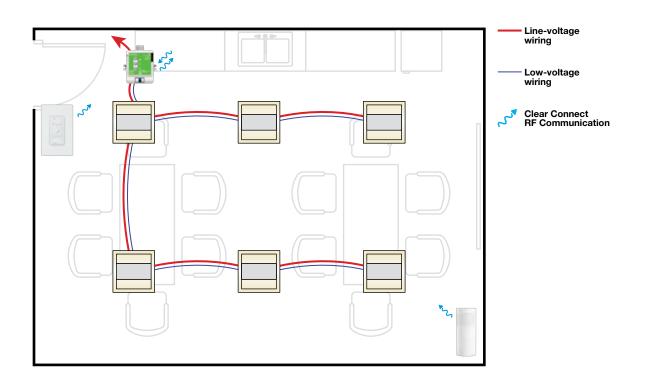

Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	1	\$ 180.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

# Visible System Components




**Control Functionality** 





Radio Powr Savr wireless corner-mount vacancy sensor

# Control Strategies

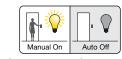





### **Occupant Exits:**

When Occupied:

**Occupant Enters:** 

All lights automatically turn off 15 minutes after all occupants exit.

Manual: Occupant uses wall dimmer

to set desired light levels for all lights.

Lights do not automatically turn on when an

occupant enters the space; lights must be turned

on manually. Maximum light level is set to 80%.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.


Lighting Energy Savings\*

45%

**Code Notes:** For break rooms with daylight, include a 0-10V dimming module per zone and a daylight sensor. Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

<sup>\*</sup> Go to lutron.com/references for more information.

IECC 2012

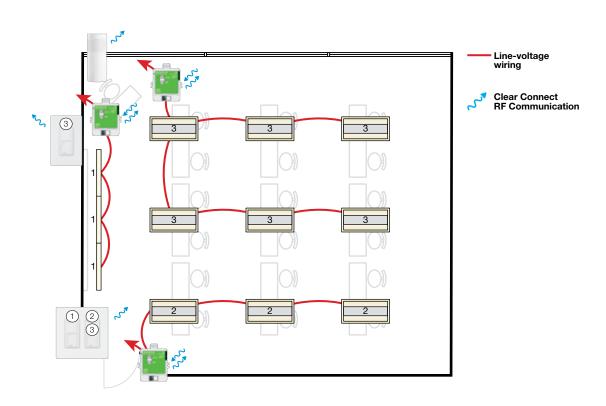

Symbol	Model Number	Description	Qty	List Price Each
N. Control of the con	RMJS-16R-DV-B	PowPak switching module	3	\$ 155.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	3	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	3	\$ 9.50

# Visible System Components





wireless control





Radio Powr Savr wireless corner-mount vacancy sensor

# **Control Functionality**

### **Occupant Enters:**

Pico wireless control

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

### When Occupied:


Manual: Occupant uses wall switches to turn on and turn off general, white-board lighting, and perimeter daylight zone.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

# **Control Strategies**

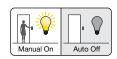

Occupancy/Vacancy



**Personal Dimming** 



**High-end Trim/Tuning** 

Lighting Energy Savings\*

Code Notes: For non-daylight classrooms, all general lighting can be connected to a single switching module. Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details.

<sup>\*</sup> Go to lutron.com/references for more information.

# Classroom | Recommended

IECC 2012

# Line-voltage **Clear Connect** 0 0 % 1 integrated into each light fixture

Symbol	Model Number	Description	Qty	List Price Each
O O	Integral to fixture <sup>1</sup>	Integral fixture control with sensor	12	\$ 78.00 <sup>2</sup>
	PJ2-4B-GWH-L31	Pico wireless 4-button scene control	1	\$ 45.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	3	\$ 9.50

<sup>1</sup> Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to lutron.com/findafixture for a complete list of compatible fixtures and drivers.





# Visible System Components









Pico wireless control

Pico wireless 4-button scene control

Integral fixture control with sensor

# Control Functionality

### **Occupant Enters:**

All lights automatically turn on to 50% light level. Occupant turns on lights to maximum light level manually. Maximum light level is set to 80%.

### When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.


Manual: Occupant selects scenes or uses dimmers to set desired light levels for all lights. Entry scene controller has 3 user-preferred presets and 1 all-off button.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

# **Control Strategies**

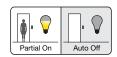


Occupancy/Vacancy




**Daylight Harvesting** 



**Personal Dimming** 

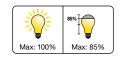

**High-end Trim/Tuning** 

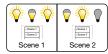

**Scene Control** 

# Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information

Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details. This solution requires digitally enabled ballasts and drivers by others.

# **Conference Room | New Construction**

IECC 2012





Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

# Visible System Components





Pico wireless control

Radio Powr Savr wireless corner-mount vacancy sensor

# Control Functionality

### **Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

### When Occupied:

Manual: Occupant uses wall switch to turn all lights off.


### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.




# **Control Strategies**

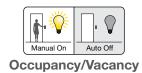

Lighting Energy Savings\*

40%

<sup>\*</sup> Go to lutron.com/references for more information.

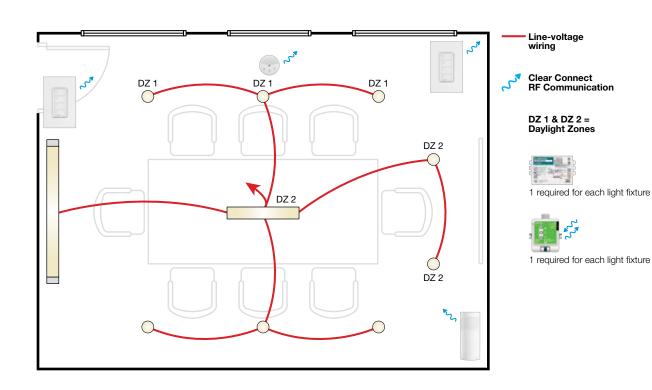

Symbol	Model Number	Description	Qty	List Price Each
	Multiple	EcoSystem-enabled Hi-Lume Soft-on, Fade-to-Black series ballasts/drivers	12	Consult your local rep
	FCJS-ECO	Wireless fixture control with EcoSystem	12	\$ 91.00
.:.	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor		\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1	\$ 105.00
	PJ2-4B-GWH-L31	Pico wireless 4-button scene control	2	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

# Visible System Components








Radio Powr Savr wireless corner-mount vacancy sensor and daylight sensor

# Control Strategies

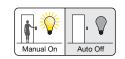

Occupancy/Vacancy



**Daylight Harvesting** 



**Personal Dimming** 



**High-end Trim/Tuning** 



**Scene Control** 

# **Control Functionality**

### **Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

### When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant selects scenes to set desired light levels for all lights. Entry scene controller has 3 user-preferred presets and 1 all-off button.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

# Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information


Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details.

# **Egress Corridor | New Construction**

IECC 2012





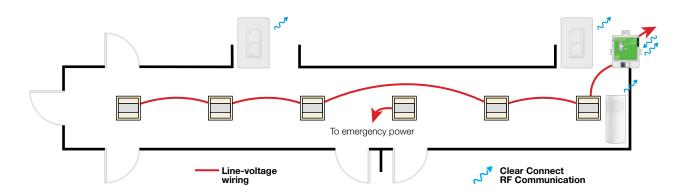

Symbol	Model Number	Description	Qty	List Price Each
D)	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-OHLB-P-WH	Radio Powr Savr wireless hallway occupancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

# Visible System Components





Pico wireless control

Radio Powr Savr wireless hallway occupancy sensor

# **Control Functionality**

### **Occupant Enters:**

All non-emergency lights automatically turn on to maximum light level.

### When Occupied:


Manual: Occupant uses wall switch to turn all non-emergency lights off.

### **Occupant Exits:**

All non-emergency lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

# **Control Strategies**

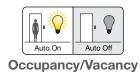


Lighting Energy Savings\*

<sup>\*</sup> Go to lutron.com/references for more information.

28

# **Egress Corridor | Recommended**

IECC 2012

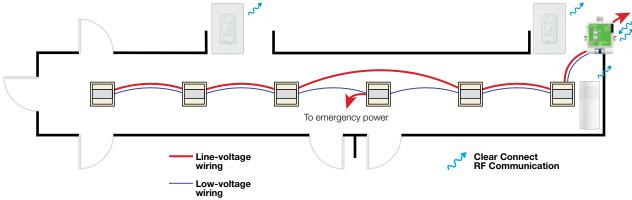

Symbol	Model Number	Description	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	1	\$ 180.00
	LRF2-OHLB-P-WH	Radio Powr Savr wireless hallway occupancy sensor		\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

# Visible System Components



Pico



All lights automatically turn on to maximum light level.

Manual: Occupant uses wall dimmer to set desired light levels for all lights. Manual control cannot fully

shut off the lights. Minimum light level is set to 10%.


wireless control

**Control Functionality** 


Maximum light level is set to 80%.

Radio Powr Savr wireless hallway occupancy sensor

# **Control Strategies**

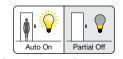



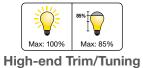

### **Occupant Exits:**

**Occupant Enters:** 

When Occupied:

All lights automatically go to minimum light level 15 minutes after all occupants exit.

### **Emergency Mode:**

Lighting connected to emergency power turns on to full output.

# Lighting Energy Savings\*




<sup>\*</sup> Go to lutron.com/references for more information.

Code Notes: Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for corridors with daylight zones. Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

# **Open Office | New Construction**

IECC 2012

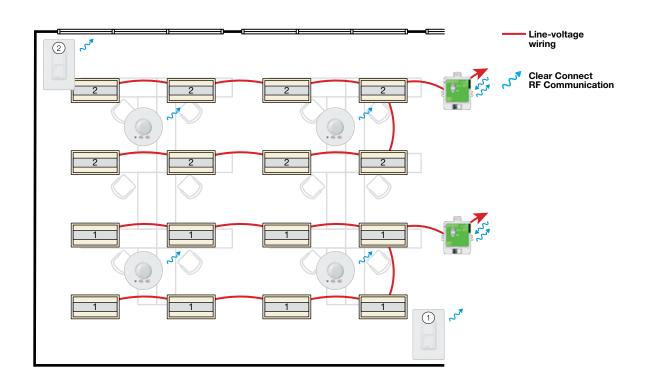

Symbol	Model Number	Description	Qty	List Price Each
W.	RMJS-16R-DV-B	PowPak switching module		\$ 155.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless ceiling-mount occupancy sensor		\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

# Visible System Components






Pico wireless control

Radio Powr Savr wireless ceiling-mount occupancy sensor

# **Control Strategies**

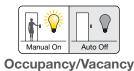

# Control Functionality

### **Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

### When Occupied:

Manual: Occupant uses wall switch to separately turn off general lighting and daylight zone.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

Lighting Energy Savings\*


35%

**Code Notes:** For non-daylight open offices, all general lighting can be connected to a single switching module. Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details.

<sup>\*</sup> Go to lutron.com/references for more information.

# **Open Office | Recommended**

IECC 2012

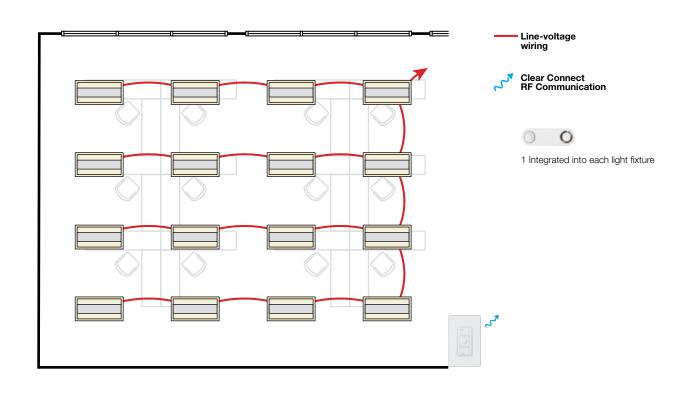

Symbol	Model Number	Description	Qty	List Price Each
O O	Integral to fixture <sup>1</sup>	Integral fixture control with sensor	16	\$ 78.00²
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

<sup>1</sup> Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to lutron.com/findafixture for a complete list of compatible fixtures and drivers.





# Visible System Components






Pico wireless control

Integral fixture control with sensor

# **Control Strategies**



Occupancy/Vacancy

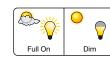

**Daylight Harvesting** 



**High-end Trim/Tuning** 

# Control Functionality

### **Occupant Enters:**

Each individual light automatically turns on to maximum light level as occupant approaches fixture proximity. Maximum light level is set to 80%.

### When Occupied:

Automatic: Each individual overhead light dims/ brightens based on local daylight availability.

Manual: Occupant uses wall dimmer to set desired light levels for all lights.

### **Occupant Exits:**

Each individual light automatically turns off 15 minutes after all occupants exit fixture proximity.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.


# Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information

Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details. This solution requires digitally enabled ballasts and drivers by others.

IECC 2012

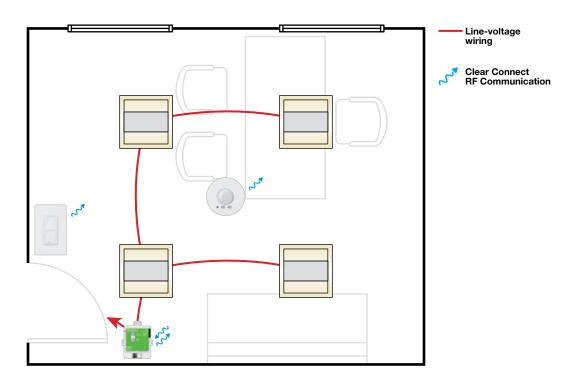


Symbol	Model Number	Description	Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module		\$ 155.00
	LRF2-VCR2B-P-WH	Radio Powr Savr wireless ceiling-mount vacancy sensor	1	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

# Visible System Components





IECC 2012

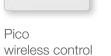



Radio Powr Savr wireless ceiling-mount vacancy sensor

# **Control Strategies**



# **Control Functionality**

### **Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

### When Occupied:

Manual: Occupant uses wall switch to turn all lights off.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

Lighting Energy Savings\*




<sup>\*</sup> Go to lutron.com/references for more information.

35

IECC 2012

IECC 2012

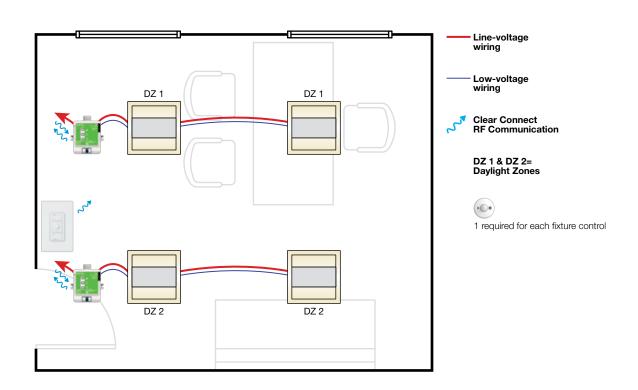

Symbol	Model Number	Description	Qty	List Price Each
	FCJS-010	Wireless fixture control with 0-10V	2	\$ 91.00
•	FC-SENSOR	PowPak fixture sensor	2	\$ 40.50
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

# Visible System Components





Pico wireless control

fixture sensor

# **Control Functionality**

### **Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

### When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.


Manual: Occupant uses wall dimmer to set desired light levels for all lights.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

# **Control Strategies**

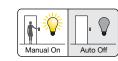

Occupancy/Vacancy



**Daylight Harvesting** 



**Personal Dimming** 



**High-end Trim/Tuning** 


Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information.

FCJS models are capable of controlling up to 3 ballasts or drivers. Review the "Vive PowPak Fixture Controls" submittal document for more

Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

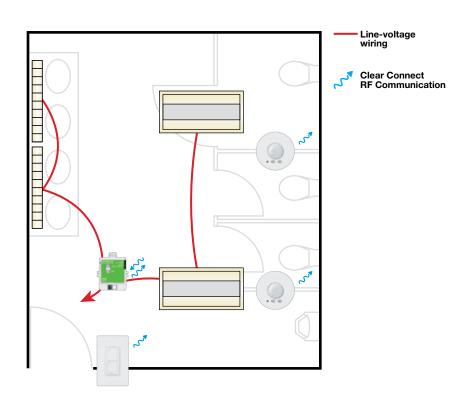

Symbol	Model Number	Description		List Price Each
N. Control of the con	RMJS-16R-DV-B	PowPak switching module	1	\$ 155.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless ceiling-mount occupancy sensor	2	\$ 105.00
	PJ2-2B-GWH-L01	Pico wireless 2-button control	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	1	\$ 9.50

# Visible System Components



wireless control

Pico





wireless ceiling-mount occupancy sensor

# **Control Functionality**

### **Occupant Enters:**

All lights automatically turn on to maximum light level.

### When Occupied:


Manual: Occupant uses wall switch to turn all lights off.

### **Occupant Exits:**

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and rezoning, system monitoring, timeclock functionality, and advanced integration.

# **Control Strategies**

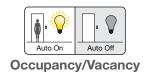

Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information.

Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details.

# **Egress Stairwell | New Construction**

IECC 2012

# Line-voltage wiring Clear Connect RF Communication To emergency power A floor cross-section is shown. One fixture per landing is suggested.

Symbol	Model Number	Description	Qty	List Price Each
	FXSWLX4H	Lutron 4 ft. stairwell LED fixture	2 (per floor)	\$ 720.00
	LRF2-OKLB-P-WH	Radio Powr Savr wireless corner-mount occupancy sensor	1 (per floor)	\$ 105.00

# Visible System Components







Radio Powr Savr wireless corner-mount occupancy sensor

# **Control Functionality**

### **Occupant Enters:**

All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

### **Occupant Exits:**

All lights dim to minimum light level 15 minutes after all occupants exit. Minimum light level is set to 10%.

### **Emergency Mode:**

Lighting connected to emergency power turns on to full output.

# **Control Strategies**



Occupancy/Vacancy



**High-end Trim/Tuning** 

Code Notes: Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for stainwells with daylight zones. Lutron stainwell fixture (FXSWLX44) is not currently compatible with the Vive wireless hub. A new model number is coming soon that will include Vive compatibility.

Go to lutron.com/vive for the latest compatibility details.

Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information.

**Code Notes:** For non-egress stairwells, see the recommended solution and set the minimum light level to full off.

# **Egress Stairwell | Recommended**

IECC 2012

# Line-voltage wiring Clear Connect RF Communication I required for each light fixture A floor cross-section is shown. One fixture per landing is suggested.

Symbol	Model Number	Description	Qty	List Price Each
0	Integral to fixture <sup>1</sup>	Integral fixture control	2 (per floor)	\$ 67.00²
	LRF2-OKLB-P-WH	Radio Powr Savr wireless corner-mount occupancy sensor	1 (per floor)	\$ 105.00

<sup>1</sup> Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to lutron.com/findafixture for a complete list of compatible fixtures and drivers.




42



# Visible System Components




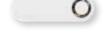

Radio Powr Savr wireless corner-mount occupancy sensor

Integral fixture control

# Control Strategies

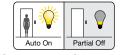





High-end Trim/Tuning

# Control Functionality

### **Occupant Enters:**

All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

### **Occupant Exits:**

All lights dim to minimum light level 15 minutes after all occupants exit. Minimum light level is set to 10%.

### **Emergency Mode:**

Lighting connected to emergency power turns on to full output.

Lighting Energy Savings\*



<sup>\*</sup> Go to lutron.com/references for more information.

43

**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for stairwells with daylight zones. This solution requires digitally enabled ballasts and drivers by others.

**Code Notes:** For non-egress stairwells, set the minimum light level to full off.

Notes			

Clear Connect, EcoSystem, Hi-Lume, Lutron, Maestro, Pico, PowPak, and Quantum are trademarks of Lutron Electronics Co., Inc., registered in the U.S. and other countries. Energi Savr Node, Radio Powr Savr, and Vive are trademarks of Lutron Electronics Co., Inc.

### **Contact Lutron**

lutron.com Lutron Electronics Co., Inc., 7200 Suter Road, Coopersburg, PA 18036-1299

### **Customer Assistance**

Online: lutron.com/help Email: support@lutron.com

Phone: 1.844.LUTRON1 (588.7661) — includes 24/7 technical support

 $\ \odot$  07/2022 Lutron Electronics Co., Inc.  $\ |$  P/N 367-2557 REV H

















