

COMMERCIAL LIGHTING CONTROLS

# ANSI/ASHRAE/IES 90.1–2019

Design to meet code compliance with Lutron

USD List prices effective July 10, 2022



Table of Contents

ASHRAE 90.1-2019

Introduction

Solutions Overview . . . . . 2

Summary of Code Requirements . . . . . 4

Daylight Zone Requirements . . . . . 5

Suggested Code Compliant Solutions . . . . . 6

How to Use this Guide . . . . . 8

Vive Local Solutions Layout . . . . . 10

Applications

Atrium

Retrofit (Dimming 0-10V) . . . . . 12

New Construction (Dimming 0-10V) . . . . . 14

Break Room

Retrofit (Dimming 0-10V) . . . . . 16

New Construction (Dimming 0-10V) . . . . . 18

Classroom

Retrofit (Dimming 0-10V) . . . . . 20

New Construction (Dimming 0-10V) . . . . . 22

Recommended (Fixture Control) . . . . . 24

Conference Room

Retrofit (Dimming 0-10V) . . . . . 26

New Construction (Dimming 0-10V) . . . . . 28

Recommended (Fixture Control) . . . . . 30

Egress Corridor

Retrofit and New Construction . . . . . 32

Guestroom

Retrofit and New Construction . . . . . 34

Recommended (Fixture Control) . . . . . 36

Open Office

Retrofit (Dimming 0-10V) . . . . . 38

New Construction (Dimming 0-10V) . . . . . 40

Recommended (Fixture Control) . . . . . 42

Private Office

Retrofit (Dimming 0-10V) . . . . . 44

New Construction (Dimming 0-10V) . . . . . 46

Restaurant

Retrofit and New Construction . . . . . 48

Restroom (Multi-Stall)

Retrofit (Switching) . . . . . 50

New Construction (Dimming 0-10V) . . . . . 52

Retail

Retrofit (Switching) . . . . . 54

New Construction (Dimming 0-10V) . . . . . 56










Egress Stairwell

Retrofit (Fixture Control) . . . . . 58

New Construction (Fixture Control) . . . . . 60

This document summarizes the lighting and receptacle control requirements for commercial buildings. It is for information purposes only. It is not meant to replace your state’s or local jurisdiction’s official energy code. The recommendations presented in this guide are based on the originally published code prior to addenda. Please refer to your local building energy code or Authority Having Jurisdiction (AHJ) for your precise requirements. Only the AHJ can guarantee code compliance.



Energy-saving lighting control strategies

Strategy	Potential savings
<div><b>High-end trim/tuning</b> sets the maximum light level based on customer requirements in each space.*</div>	10–30% Lighting
<div><b>Occupancy/vacancy sensing</b> turns lights on when occupants are in a space and off when they vacate the space.*</div>	20–60% Lighting
<div><b>Daylight harvesting</b> dims electric lights when daylight is available to light the space.*</div>	25–60% Lighting
<div><b>Dimming control</b> gives occupants the ability to set the light level.*</div>	10–20% Lighting
<div><b>Controllable window shading</b> moves shades to reduce glare and solar heat gain.*</div>	10–20% Cooling
<div><b>Scheduling</b> provides scheduled changes in light levels based on the time of day.*</div>	10–20% Lighting
<div><b>Demand response</b> automatically reduces lighting loads during peak electricity usage times.*</div>	30–50% During peak period
<div><b>Plug load control</b> automatically turns off loads after occupants leave a space.*</div>	15–50% of Controlled loads
<div><b>HVAC integration</b> controls heating, ventilation, and air conditioning systems through a contact closure.*</div>	5–15% HVAC

\*Go to [lutron.com/references](https://lutron.com/references) for more information

Codes can sometimes be complicated and difficult to navigate. This commercial application guide provides examples of how Lutron products can be used to meet or exceed code requirements. This guide focuses on Vive and Vive compatible solutions, but our other control systems offer similar features.

Lutron Product Capabilities: Commercial Applications

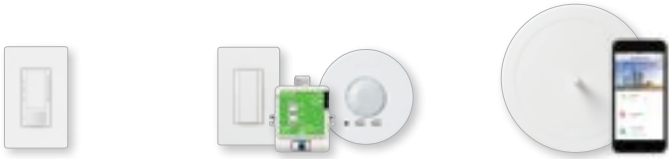Strategies for code/standards compliance				
	Local Solutions			Guestroom Solutions
	Wallbox	Vive wireless	Vive with wireless hub*	Code-compliant guestroom solutions
Occupancy sensing	●	●	●	●
Multi-level lighting control	●	●	●	●
Daylight harvesting		●	●	
Receptacle control		●	●	●
Timeclock			●	●
Demand response†			● **	
Energy monitoring			●	
BACnet integration			●	●

To learn more about these products and their specifications, go to [lutron.com/catalogs](https://lutron.com/catalogs).

\* For the latest information on products compatible with the Vive wireless hub go to [lutron.com/vive](https://lutron.com/vive).  
\*\* Requires QS timeclock.  
† Automated Demand Response capability requires signal from a third-party device.

Summary of Requirements for Lighting and Receptacle Controls

ASHRAE 90.1-2019

The requirements listed below are summarized for simplicity and may have exceptions that were omitted.

	Minimum control type	Description	Code provision
Local Control	Switching	Lighting shall be capable of turning ON and OFF. There shall be at least one manual device for control of the lighting within a space. See code for spaces that allow remote location of control.	9.4.1.1 (a)
	Multi-level or dimming <sup>1</sup>	Lighting shall be capable of providing at least one level between 30% and 70% of full power, in addition to ON and OFF. There shall be at least one manual device for control of the lighting within a space. See code for spaces that allow remote location of control.	9.4.1.1 (a) 9.4.1.1 (d)
Automatic Control <sup>3</sup>	Timeclock <sup>2</sup>	<b>Interior:</b> Scheduled control, based on time-of-day, turns lighting ON or OFF based on typical occupancy. Occupancy sensors also comply as an alternate to using a timeclock. <b>Exterior &amp; parking garages:</b> Scheduled control, based on time-of-day and sunrise/sunset, turns lighting ON or OFF based on typical occupancy and daylight (requires astronomical timeclock).	9.4.1.1 (i) 9.4.1.2 (a) & (c) 9.4.1.4 (a), (b), & (c)
	Occupancy sensor	Automatic control turns lighting ON upon occupancy or OFF after a vacancy of 20 minutes or less (15 minutes for exterior).	9.4.1.1 9.4.1.2 (b) 9.4.1.4 (d)
	Full ON	When initiated by a timeclock or occupancy sensor, lighting is automatically turned ON to maximum lighting power.	9.4.1.1 (h)
	Partial ON	When initiated by a timeclock or occupancy sensor, lighting is automatically turned ON to 50% or less of maximum lighting power.	9.4.1.1 (c)
	Full OFF	When initiated by a timeclock or occupancy sensor, lighting is automatically turned OFF.	9.4.1.1 (h)
	Partial OFF	When initiated by a timeclock or occupancy sensor, lighting is automatically reduced by at least 50% of maximum lighting power (30% for parking garages). Automatic full OFF also complies.	9.4.1.1 (g) 9.4.1.2 (b) & (c) 9.4.1.4 (c) & (d)
Other	Daylight responsive control <sup>1</sup>	<b>Interior:</b> A sensor which adjusts lighting in response to available daylight is required for sidelight and skylight zones. Lighting adjusts in response to daylight using continuous dimming to 20% or less and OFF. See the “Daylight Zone Requirements” diagrams for more information. <b>Exterior &amp; parking garages:</b> A photosensor can be used as an alternate to the dawn/dusk operation of an astronomical timeclock. The perimeter 20 ft. of parking garages with access to daylight must automatically reduce lighting power by at least 50% in response to daylight.	9.4.1.1 (e) 9.4.1.1 (f) 9.4.1.2 (d) 9.4.1.4 (a)
	Receptacle control	At least 50% of the receptacles shall automatically turn OFF based on typical occupancy or after a vacancy of 20 minutes or less. Plug-in devices do not comply.	8.4.2

For areas being used as a path of egress or fixtures being used for emergency, verify compliance with your local AHJ. Acceptance (functional) testing is required for all new construction applications to ensure that control hardware and software are calibrated, programmed and functioning properly (Code provision 9.9).

1 When multi-level lighting control and/or daylight responsive control is required, Lutron recommends using continuous dimming to allow for smooth light level adjustment and maximized energy savings.

2 Lutron recommends using occupancy sensors to achieve automatic ON/OFF requirements in place of a timeclock to maximize energy savings and optimize user experience.

3 Manual ON is always permitted for interior applications. Provide manual ON control when no automatic ON is indicated.

Daylight Zone Requirements

ASHRAE 90.1-2019


Daylight Zone Requirements:

Fixtures in the primary and secondary daylight zones must be independently controlled by zone. Sidelighted zones must be controlled separately from toplighted zones.


Daylight Exceptions:

Daylight control is not required when the total lighting power of a daylight zone is less than 150W or when the total glazing area is less than 20 sq. ft.

Sidelighting (Window)

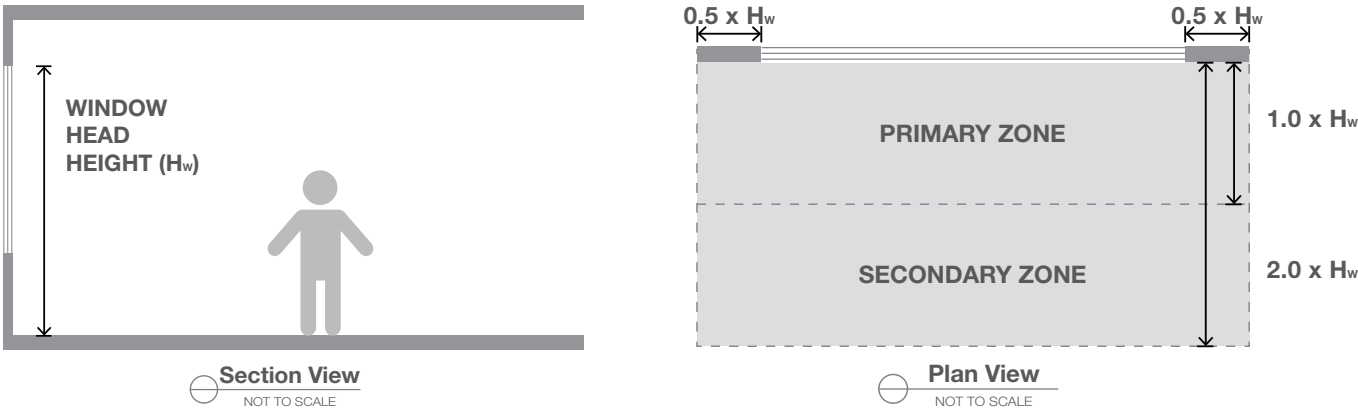

Toplighting (Skylight)

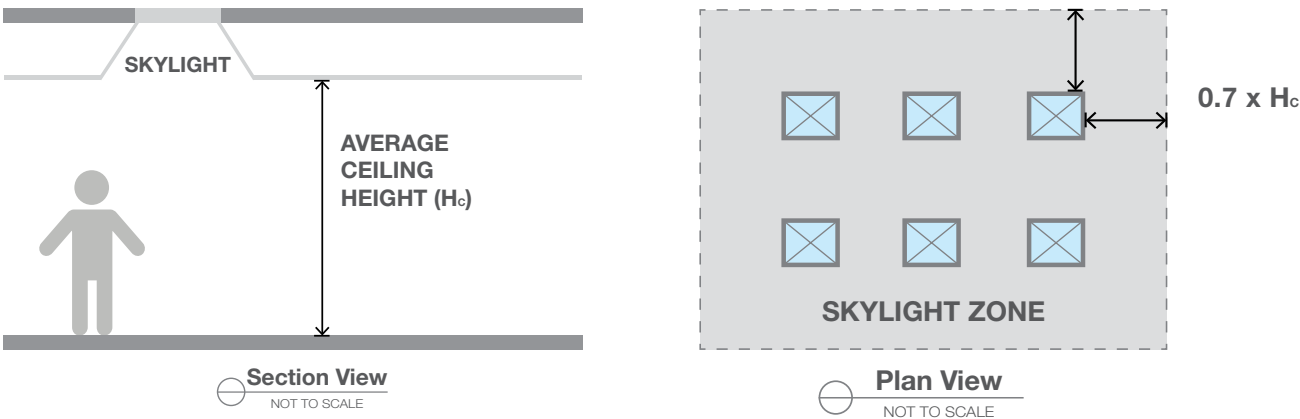

Suggested Code-Compliant Solutions

ASHRAE 90.1-2019

The compliant solutions listed below are suggested based on total installed cost, simplicity of design, and basic functional needs for the space. These solutions do not represent the only compliant options to meet lighting and receptacle control requirements.<sup>1</sup> Applications in this guide will illustrate these solutions and/or alternative solutions for advanced functionality.

		Atrium	Classroom, Lecture Hall, Training Room	Conference, Break Room	Corridor <sup>3</sup>	Guestroom <sup>4</sup>	Lobby <sup>5</sup>	Open Office (>250 sq. ft.)
Local Control	Switching					⚙️		
	Multi-level or dimming	⚙️	⚙️	⚙️	⚙️		⚙️	⚙️
Automatic Control <sup>2</sup>	Timeclock	⚙️					⚙️	
	Occupancy sensor		⚙️	⚙️	⚙️	⚙️	⦿	⚙️
	Full ON				⚙️		⚙️	
	Partial ON	⚙️						⚙️
	Manual ON		⚙️	⚙️		⚙️		
	Full OFF	⚙️	⚙️	⚙️		⚙️	⚙️	⚙️
	Partial OFF				⚙️		⚙️	
Other	Daylight responsive control	⦿	⦿	⦿	⦿		⦿	⦿
	Receptacle control		⚙️	⚙️				⚙️

1 The suggested code-complaint solutions are for buildings or tenant improvements greater than 25,000 ft².

2 Retrofit requirements indicated are for lighting alterations greater than 20% of the connected load in a space.

3 To comply with some life-safety code requirements for egress illumination, automatic full OFF is not suggested. For non-egress areas, the occupancy sensor should turn the lights to full OFF and a switching control may be used.

4 Automatic OFF is required for all luminaires and switched receptacles. Bathrooms must have a separate, automatic OFF control for lighting.

5 The occupancy sensor provides partial OFF functionality during business hours. The timeclock provides full OFF functionality after hours.

6 For entrances and exits, daylight responsive control is not required nor recommended, and the maximum light level is set to 50% at night.

Suggested Code-Compliant Solutions

ASHRAE 90.1-2019

Diagram key:  
⦿ = New construction  
⚙️ = New construction and retrofit<sup>2</sup>

Parking Garage <sup>5,6</sup>	Private Office (<250 sq. ft)	Restaurant/ Cafeteria, Retail	Restroom	Stairwell <sup>3</sup>	Storage Room	Warehouse and Library Stacks	Facade/ Landscape	Other Exterior <sup>7</sup>
					⚙️			
⚙️	⚙️	⚙️				⚙️		
⚙️		⚙️				⚙️	⚙️	⚙️
⚙️	⚙️		⚙️	⚙️	⚙️	⦿		⚙️
⚙️			⚙️	⚙️			⚙️	⚙️
		⚙️				⚙️		
	⚙️				⚙️			
⚙️	⚙️	⚙️	⚙️		⚙️	⚙️	⚙️	⚙️
⚙️				⚙️		⚙️		⚙️
⦿	⦿	⦿ <sup>8</sup>	⦿	⦿	⦿	⦿		
	⚙️							

7 Astronomical timeclock shall ensure all lights are off during daylight hours. For lights mounted below 24 ft. provide occupancy sensing to Partial OFF. All other lighting shall be scheduled to Partial OFF. See section 9.4.1.4 for scheduling times.

8 Not required for sidelight daylight zones in retail spaces.

This application guide is designed to help specifiers and contractors understand codes and Lutron controls in a simple manner. Each of the pages will lay out different spaces, the corresponding lighting control products for those spaces, and the way the system is set up in the space.

For Specifiers

Use this application guide for design suggestions, to understand the way the system operates, and to specify the relevant products for each space.

For Contractors

Use this application guide to understand how the system is installed, the way the system must operate, and to order the correct products for each application.

Understand how the products are laid out in the space

Learn more about the products used in the space

Room type    Type of solution

Classroom | New Construction

ASHRAE 90.1-2019

Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/277V	4	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347V	4	Consult your local rep for pricing
	RMJS-20R-DV-B	20A PowPak relay module	120V/277V	1	\$ 170.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	N/A	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless, corner-mount vacancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	2	Consult your local rep for pricing


\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** For non-daylit classrooms, all general lighting can be connected to a single 0-10V dimming module. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

This guide offers up to three solutions per space type.

- The **Retrofit Solutions** are simple and inexpensive solutions, generally suited for a basic retrofit.
- The **New Construction Solutions** are value driven, generally best suited for new construction.
- The **Recommended Solutions** have advanced functionality for greater comfort and energy savings.

Visible System Components

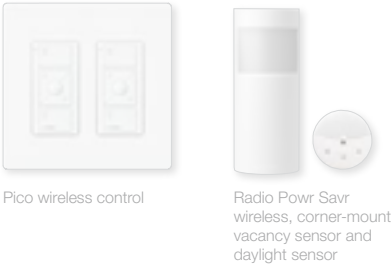

Control Functionality

**Occupant Enters:** Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:** Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses wall dimmers to set desired light levels for both general and white-board lights.

**Occupant Exits:** All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.

Control Strategies



Lighting Energy Savings\*

65%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.

Type of solution

Learn about the products visible in the space and the different options available for these.

Learn what strategies are implemented in the space

Learn what energy savings you achieve over manual shut-off







Understand how the space functions with the installed system



# Vive Local Solutions Layout

ASHRAE 90.1-2019

This is a high-level overview of the local solutions layout. For individual room requirements refer to the detailed room type solutions in this guide. A single PowPak module can control a single fixture or multiple fixtures. The products shown here are representative of local solutions. Multiple product options are available to meet the needs of the space.


-  Vive wireless hub\*
-  PowPak module
-  Occupancy sensor
-  Pico wireless remote control
-  Daylight sensor
-  Vive wireless receptacle







### Vive wireless hub features:

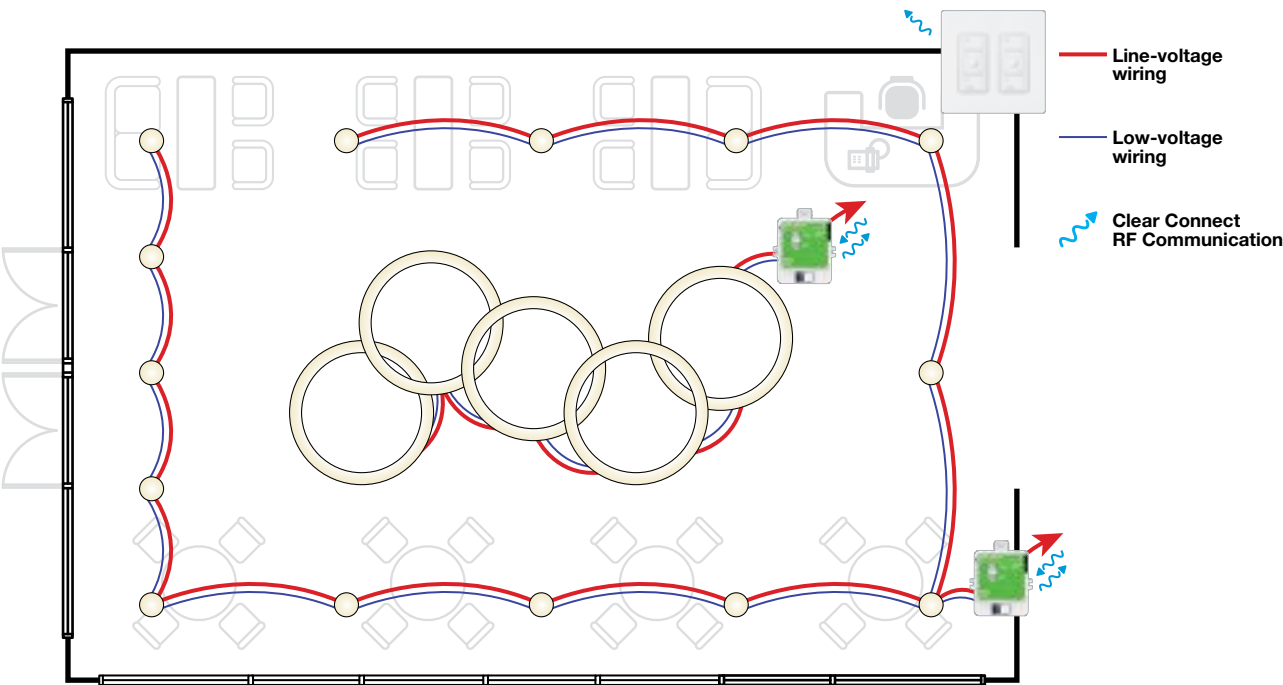- Central control, management, and monitoring of Vive devices via web browser
- Supports astronomic and time-of-day events
- Two contact closure inputs for third-party integration, such as Automatic Demand Response
- Wi-Fi access for easy commissioning
- Control up to 10,000 sq. ft. with a single hub
- Optional BACnet integration

\* Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.





Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10 V	120 V/ 277 V	2	\$ 180.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10 V	347 V	2	Consult your local rep for pricing 
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	2	Consult your local rep for pricing 
	HJS-1-FM	Vive wireless hub	120 V/ 277 V	Shared	Consult your local rep for hub pricing and service options.

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** Requirements specified for atriums 20-40 ft. in height. Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless control

Control Functionality


**When Occupied:**  
Manual: Occupant uses wall dimmers to set desired light levels for general lighting. Maximum light level is set to 80%.

**Timeclock:**  
Timeclock turns lights on to 50% during normally occupied hours.


Timeclock turns lights off during normally unoccupied hours.




Control Strategies



Dimming



High-end Trim/Tuning




Scheduling








Lighting Energy Savings\*

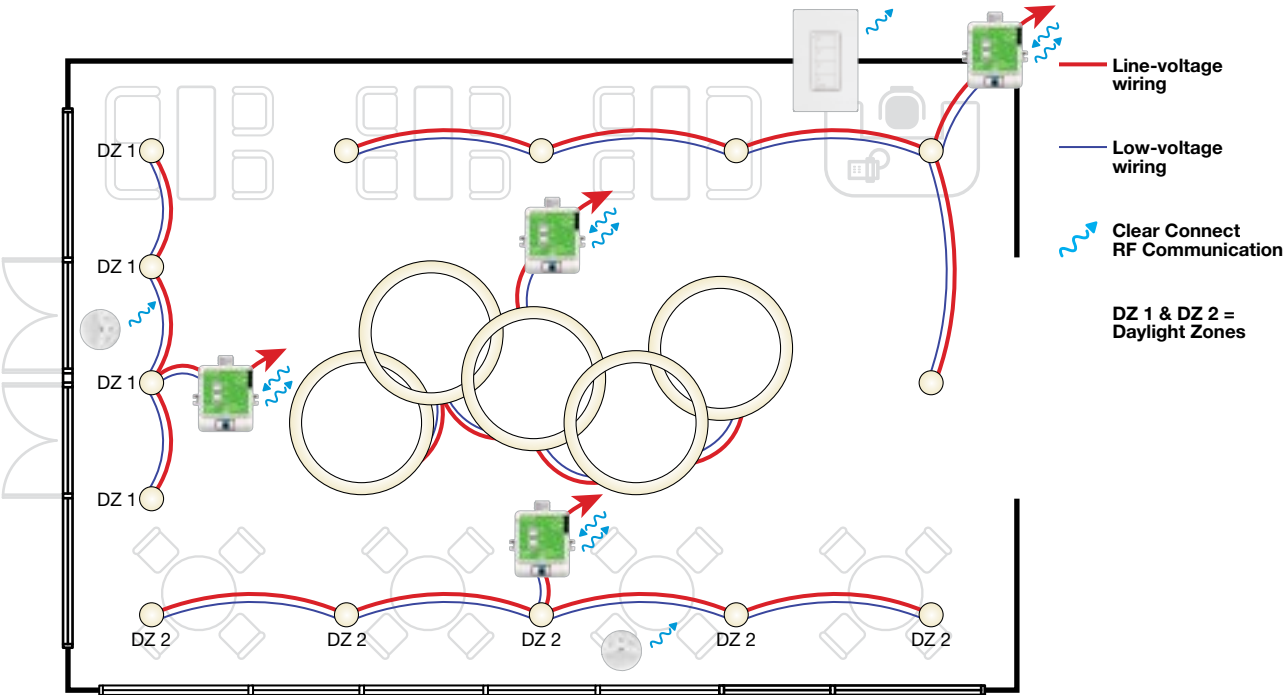30%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.





Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10 V	120V/277 V	4	\$ 180.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10 V	347 V	2	Consult your local rep for pricing 
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	N/A	2	\$ 150.00
	PJ2-4B-GWH-L31	Pico wireless, 4-button scene control	N/A	1	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	2	Consult your local rep for pricing 
	HJS-1-FM	Vive wireless hub	120V/277 V	Shared	Consult your local rep for hub pricing and service options.

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** Requirements specified for 20-40 ft. atriums.  
Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless, 4-button scene control



Radio Powr Savr wireless daylight sensor


Control Functionality

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.


Manual: Occupant selects scenes to set desired light levels for all lights. Maximum light level is set to 80%.

**Timeclock:**  
Timeclock turns lights on to 50% during normally occupied hours.  
Timeclock turns lights off during normally unoccupied hours.


Control Strategies




Daylight Harvesting

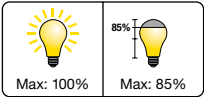

High-end Trim/Tuning



Scheduling





Scene Control

Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

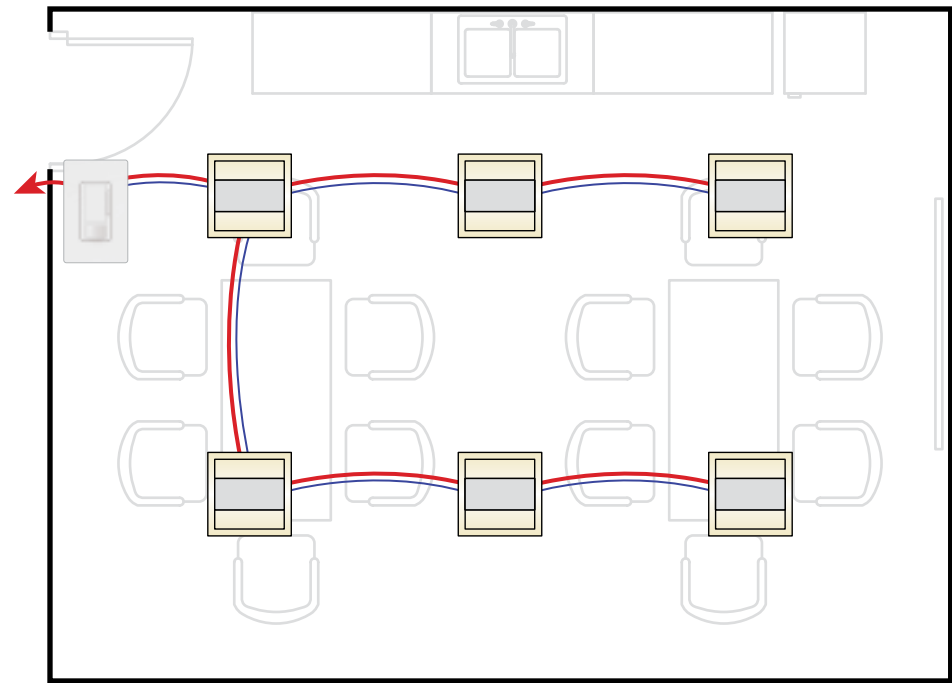

Symbol	Model Number	Description	Qty	List Price Each
	MS-Z101-V-WH	Maestro vacancy-sensing, 0-10V dimmer*	1	\$120.00

\* Maestro MS-Z101-V-WH is not compatible with the Vive wireless hub. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components





Maestro vacancy-sensing dimmer

Control Functionality

- Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%
- When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.
- Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.





Control Strategies



Manual On      Auto Off

**Occupancy/Vacancy**




Max: 100%      Max: 85%

**High-end Trim/Tuning**

Lighting Energy Savings\*

40%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

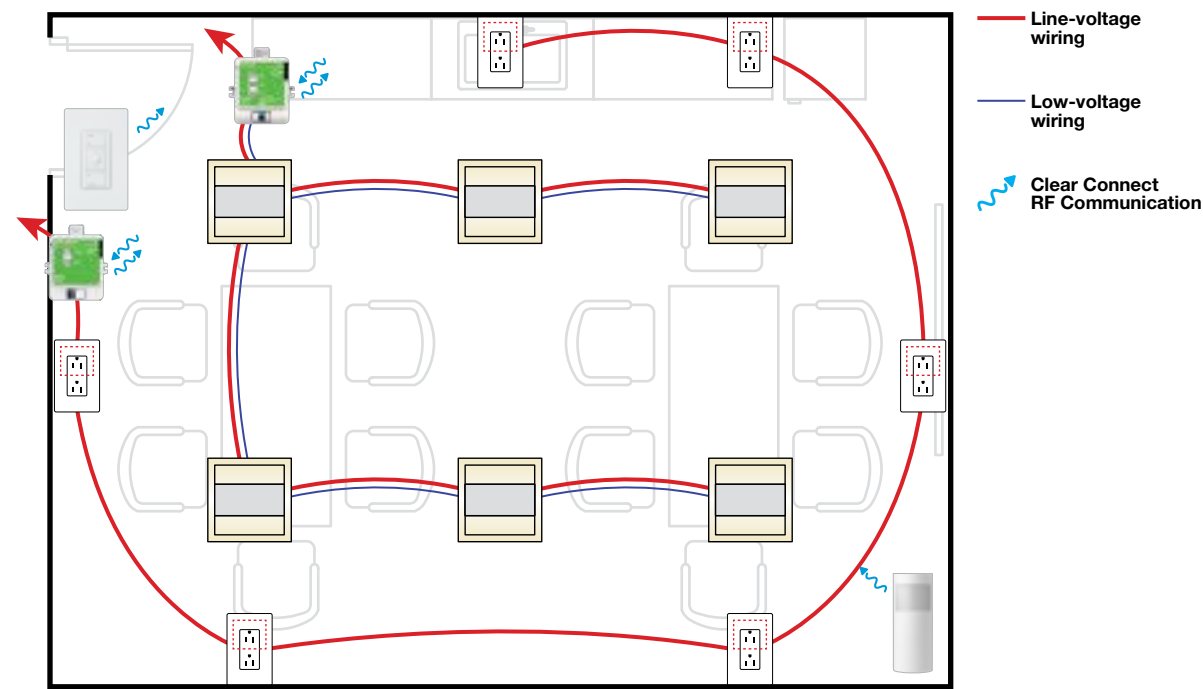

Visible System Components



Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.


Controlled receptacles automatically regain power when occupant enters

**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.

Control Strategies

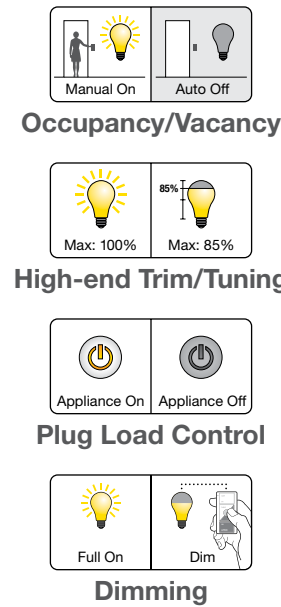








Lighting Energy Savings\*

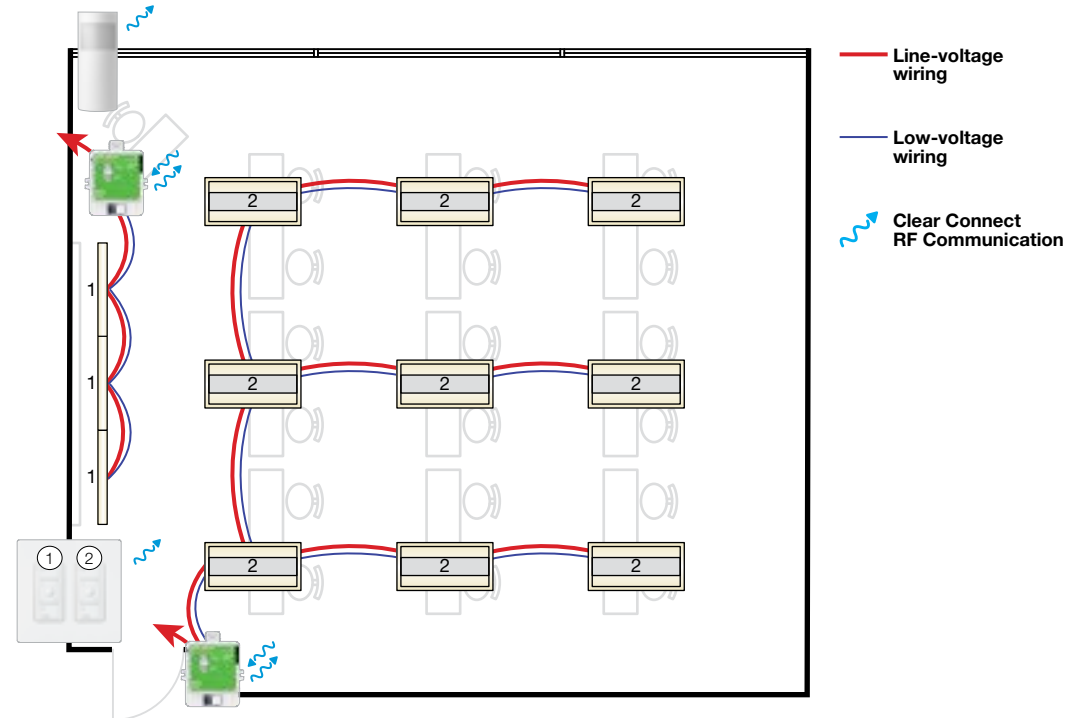45%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

**Code Notes:** For break rooms with daylight, include a 0-10V dimming module per zone and a daylight sensor.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/ 277V	2	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347V	2	Consult your local rep for pricing 
	LRF2-VKLB-P-WH	Radio Powr Savr wireless, corner-mount vacancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button control with raise/lower	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	2	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0–10 V enabled ballasts and drivers by others.

## Visible System Components



## Pico wireless control

Radio Powr Savr  
wireless, corner-mount  
vacancy sensor

## Control Functionality

**Occupant Enters:**

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

**When Occupied:**


Manual: Occupant uses wall dimmers to set desired light levels for both general and white-board lighting.

### Occupant Exits:


All lights automatically turn off 15 minutes after all occupants exit.




## Control Strategies



## Occupancy/Vacancy



### High-end Trim/Tuning










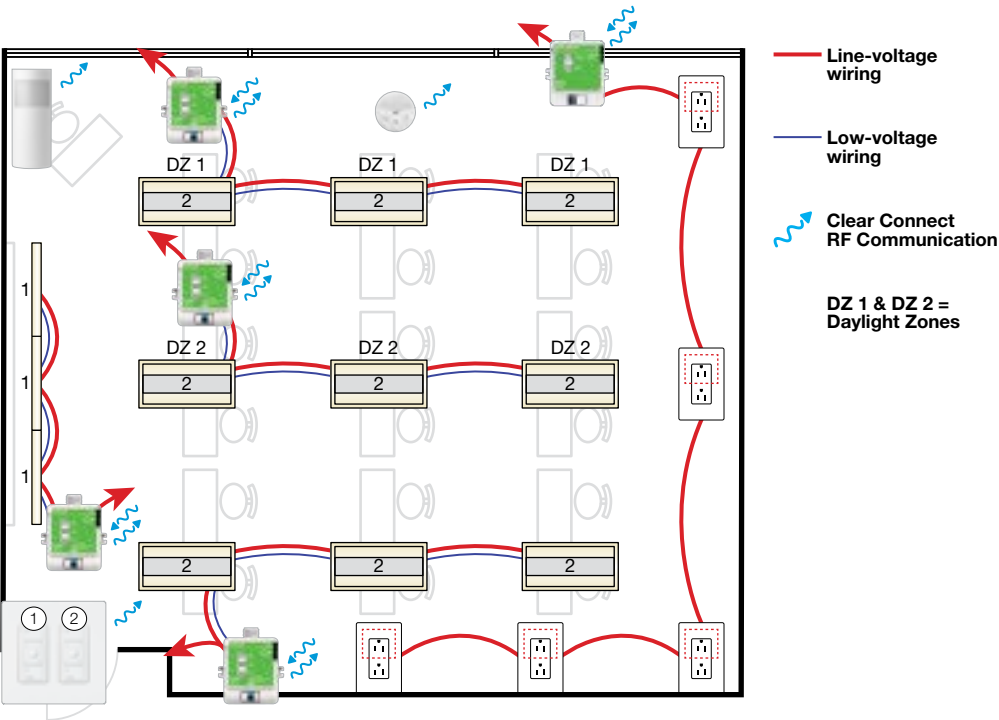

## Dimming

## Lighting Energy Savings\*

45%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/ 277 V	4	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347 V	4	Consult your local rep for pricing 
	RMJS-20R-DV-B	20A PowPak relay module	120V/ 277V	1	\$ 170.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	N/A	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless, corner-mount vacancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	2	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** For non-daylit classrooms, all general lighting can be connected to a single 0-10V dimming module. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless control



Radio Powr Savr wireless, corner-mount vacancy sensor and daylight sensor

Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.


**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses wall dimmers to set desired light levels for both general and white-board lights.


**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.


Control Strategies




Occupancy/Vacancy




Daylight Harvesting



Dimming



High-end Trim/Tuning




Plug Load Control

Lighting Energy Savings\*

65%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

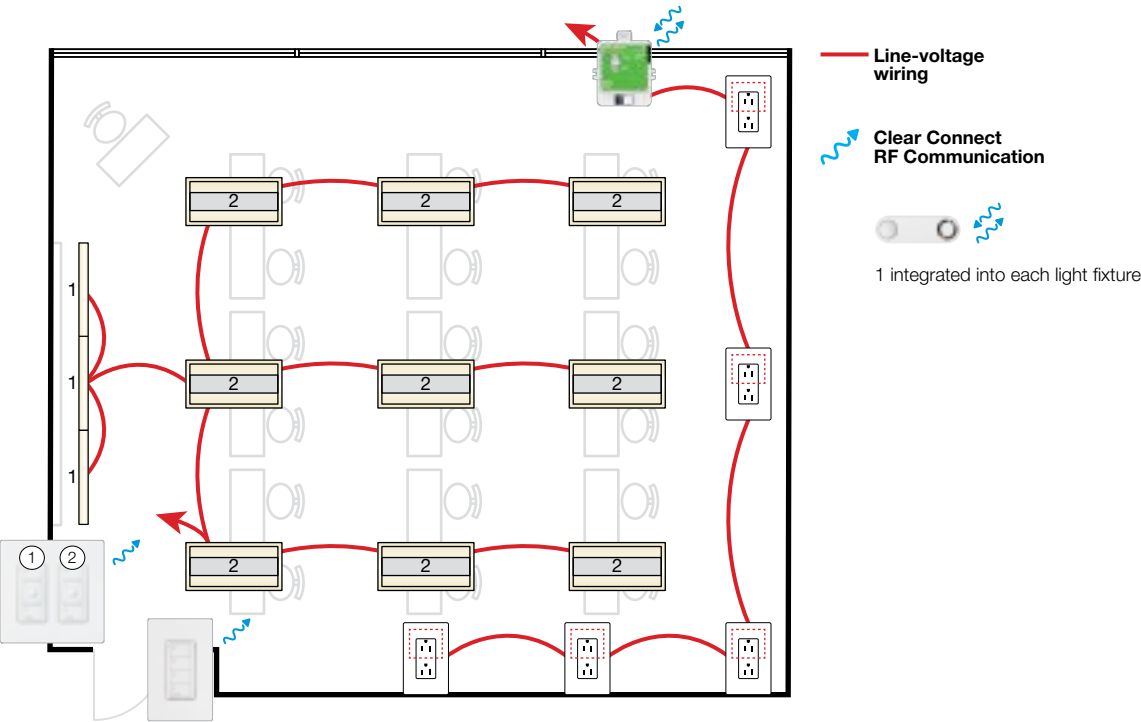

Symbol	Model Number	Description	Qty	List Price Each
	Integral to fixture <sup>1</sup>	Integral fixture control with sensor	12	\$ 78.00 <sup>2</sup>
	RMJS-20R-DV-B	20A PowPak relay module	1	\$ 170.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	3	\$ 9.50

1 Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to [lutron.com/findafixture](http://lutron.com/findafixture) for a complete list of compatible fixtures and drivers.  
2 Fixture adder for the control module may vary.



Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires digitally enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.


**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant selects scenes or uses dimmers to set desired light levels for all lights. Entry scene controller has 3 user-preferred presets and 1 all-off button.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.

Control Strategies

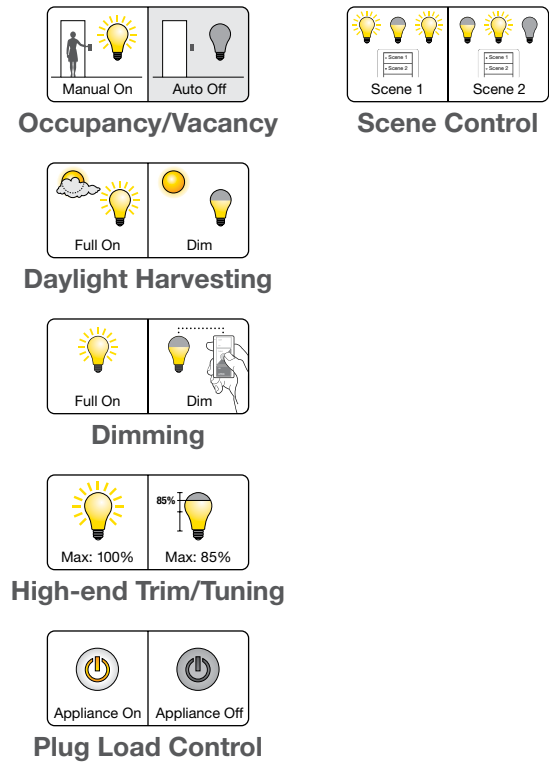








Lighting Energy Savings\*

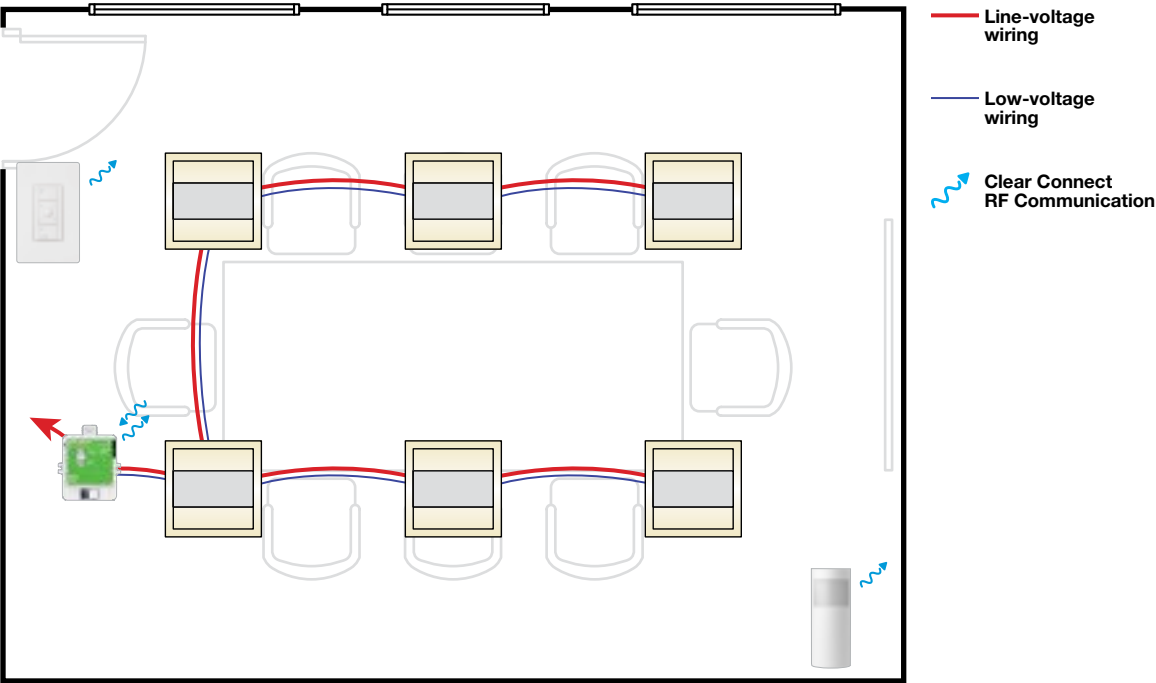65%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.






Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10 V	120V/277 V	1	\$ 180.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10 V	347 V	1	Consult your local rep for pricing 
	LRF2-VKLB-P-WH	Radio Powr Savr wireless, corner-mount vacancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button control with raise/lower	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	1	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components

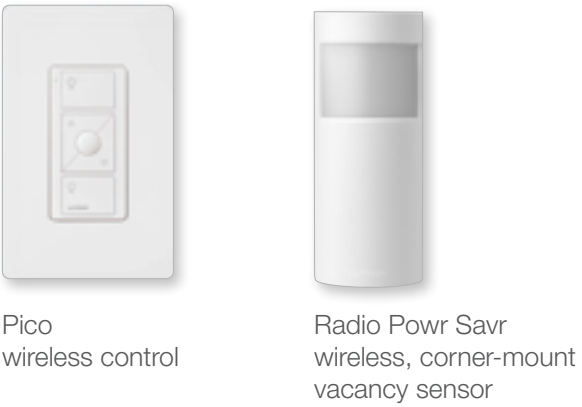

Control Functionality


**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.




Control Strategies

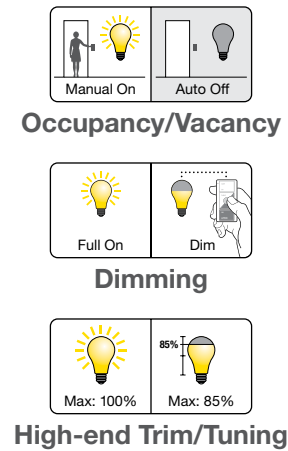

Lighting Energy Savings\*

40%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

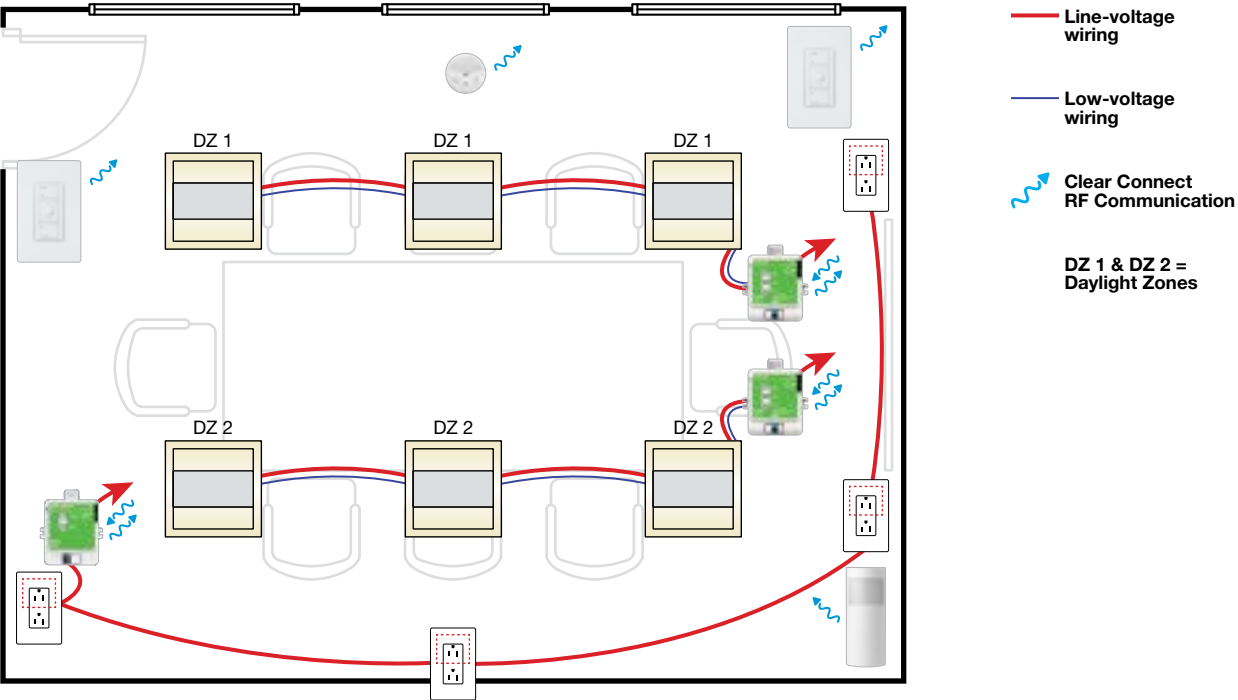

Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/277V	2	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347V	2	Consult your local rep for pricing
	RMJS-20R-DV-B	20A PowPak relay module	120V/277V	1	\$ 170.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	N/A	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless, corner-mount vacancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	2	Consult your local rep for pricing

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** For non-daylit conference rooms, all general lighting can be connected to a single 0-10V dimming module. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.


**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.


Control Strategies

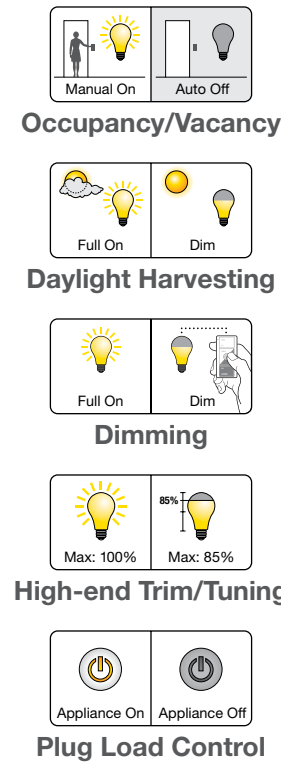

Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

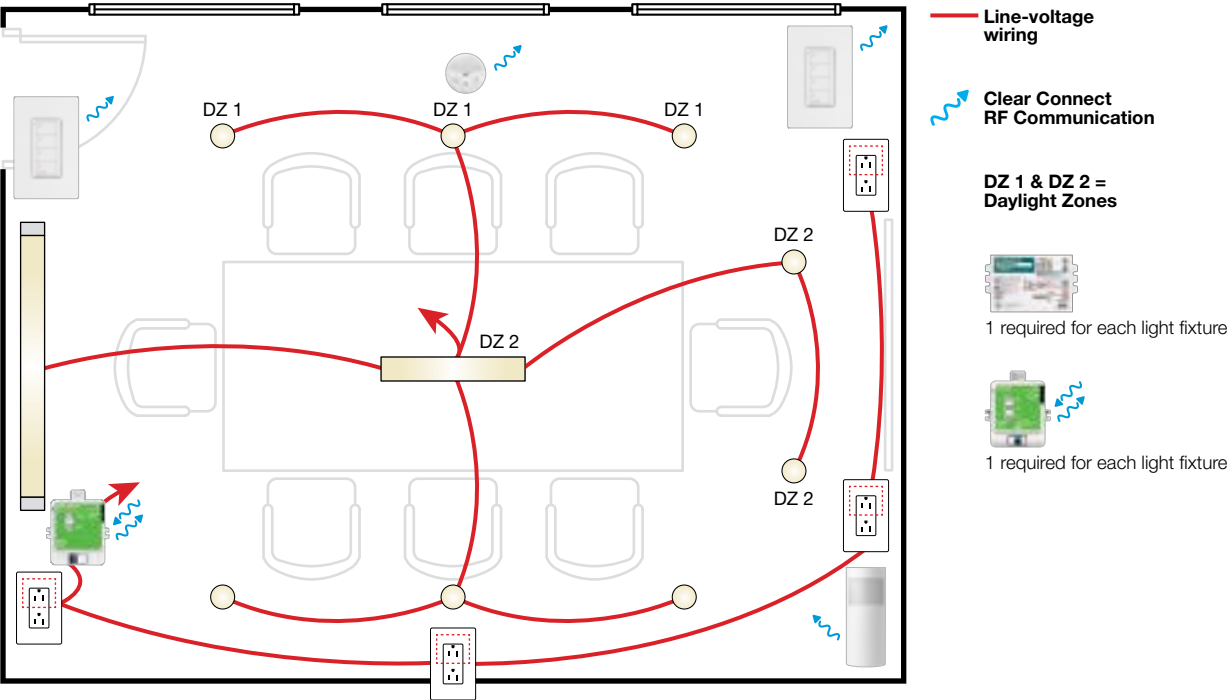

Symbol	Model Number	Description	Qty	List Price Each
	Multiple	EcoSystem-enabled Hi-lume Soft-on, Fade-to-Black series ballasts/drivers	10	Consult your local rep for pricing
	FCJS-ECO	Wireless fixture control with EcoSystem	10	\$ 91.00
	RMJS-20R-DV-B	20A PowPak relay module	1	\$ 170.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1	\$ 150.00
	LRF2-VKLB-P-WH	Radio Powr Savr wireless, corner-mount vacancy sensor	1	\$ 105.00
	PJ2-4B-GWH-L31	Pico wireless, 4-button scene control	2	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	2	\$ 9.50

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. Go to [lutron.com/ballasttool](https://lutron.com/ballasttool) or [lutron.com/findafixture](https://lutron.com/findafixture) to identify the correct ballast or LED fixture for your project.

Visible System Components

Pico wireless, 4-button scene control

Radio Powr Savr wireless, corner-mount vacancy sensor and daylight sensor

Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses scene controller to set desired lighting scenes.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.



Control Strategies

Manual On Auto Off

**Occupancy/Vacancy**

Full On Dim

**Daylight Harvesting**

Max: 100% Max: 85%

**High-end Trim/Tuning**

Appliance On Appliance Off

**Plug Load Control**


Scene 1 Scene 2







**Scene Control**

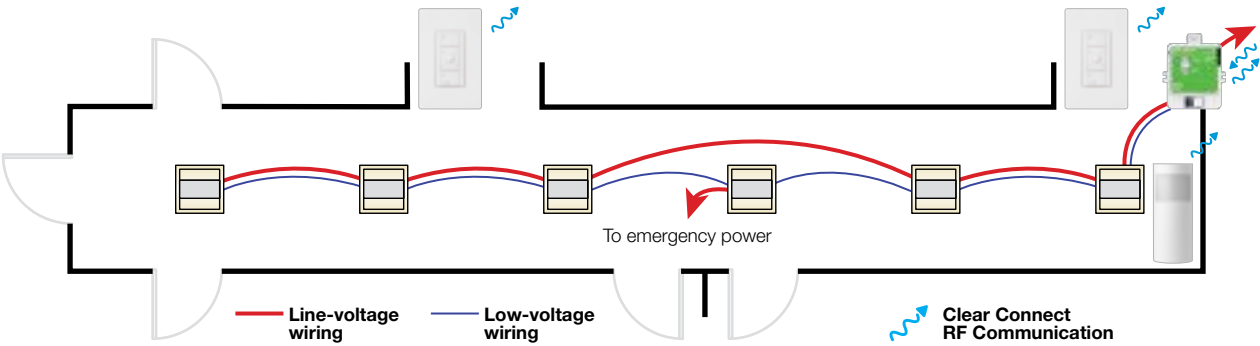Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10 V	120V/ 277V	1	\$ 180.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10 V	347 V	1	Consult your local rep for pricing 
	LRF2-OHLB-P-WH	Radio Powr Savr wireless, hallway occupancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button control with raise/lower	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	2	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for corridors with daylight zones. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.

This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless control



Radio Powr Savr wireless, hallway occupancy sensor

Control Functionality


**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights. Manual control cannot fully shut off the lights. Minimum light level is set to 10%.


**Occupant Exits:**  
All lights automatically go to minimum light level 15 minutes after all occupants exit.

**Emergency Mode:**  
Lighting connected to emergency power turns on to full output.


Control Strategies

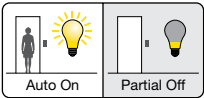

Occupancy/Vacancy



Dimming




High-end Trim/Tuning

Lighting Energy Savings\*

60%

**Code Notes:** For non-egress corridors, set the minimum light level to full off.

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

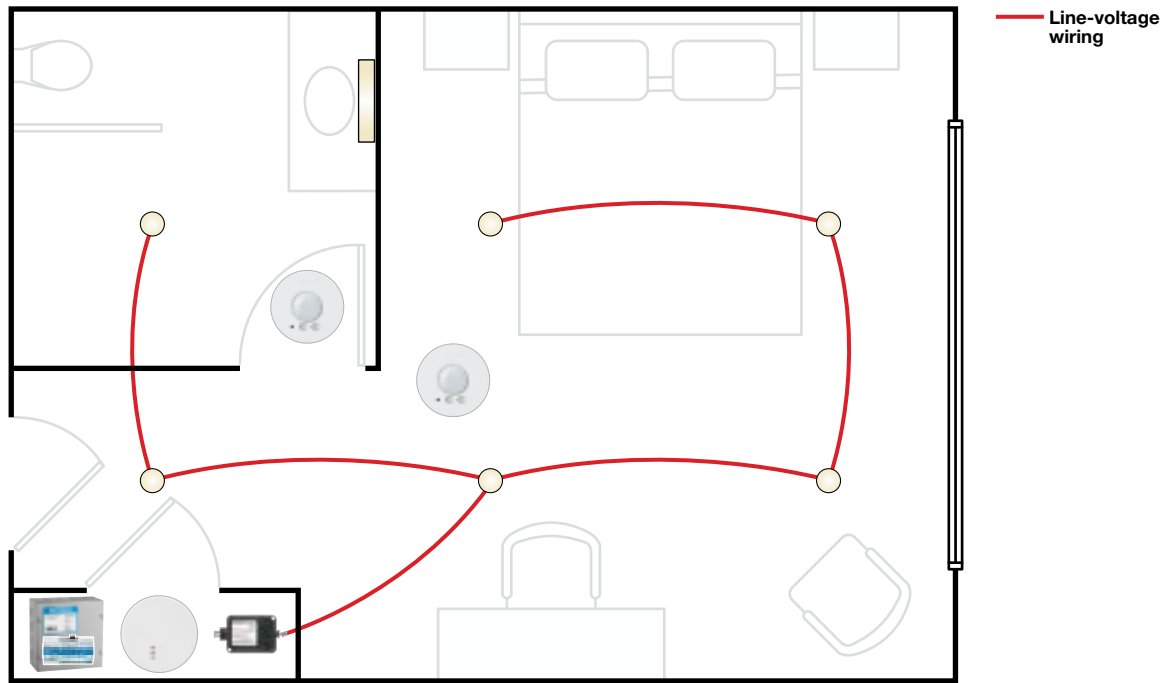

Symbol	Model Number	Description	Voltage	Qty	List Price Each
	CCGS-NA-1	One-circuit Guestroom Package; includes all products listed below	N/A	1	\$ 830.00
	LUT-8X8-ENC with MQSE-2S1-D and MQSPS-DH-1-30	Lutron-provided enclosure, switching load controller, myRoom power supply	120V	1	N/A
	QSM2-XW-C	QS sensor module	120V	1	N/A
	PP-DV	Relay power pack (lighting)	120V	1	N/A
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	2	N/A

Visible System Components




Radio Powr Savr wireless, ceiling-mount occupancy sensor

Control Functionality


- Occupant Enters:**  
All lights will return to previous levels from when the room was vacated.
- When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.
- Occupant Exits:**  
All lights go off 15 minutes after all occupants exit.




Control Strategies








Occupancy/Vacancy

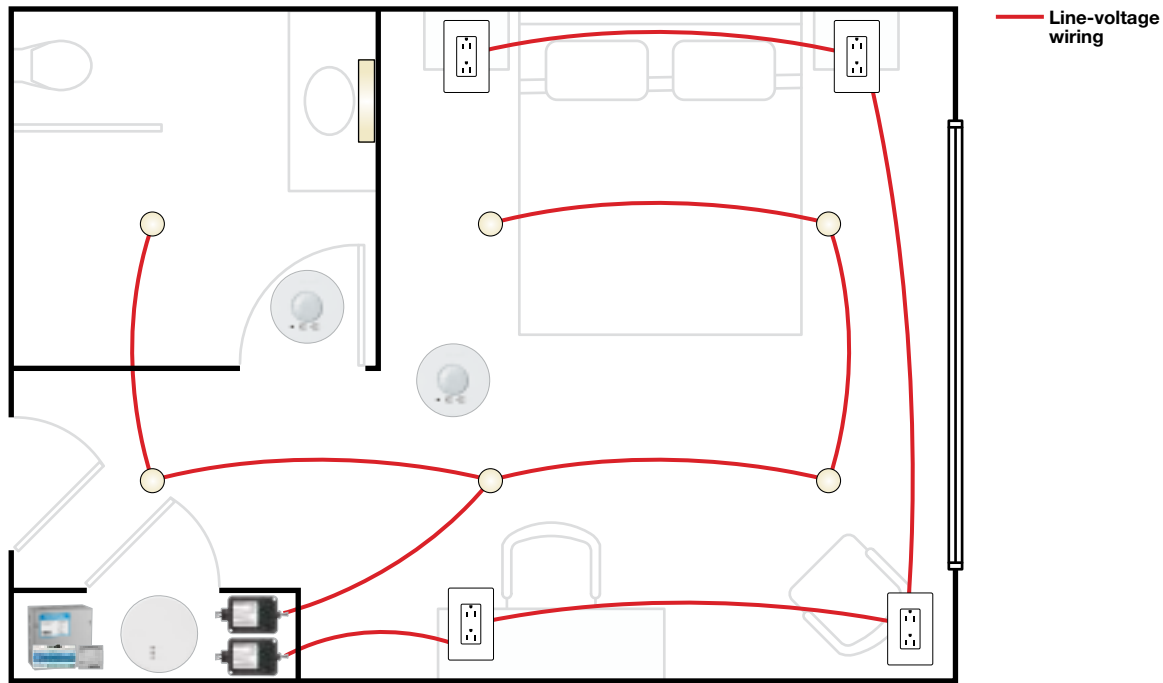

Dimming



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	CCGS-NA-2	Two-circuit Guestroom Package; includes all products listed below	N/A	1	\$ 1,120.00
	LUT-8X8-ENC with MQSE-2S1-D and MQSPS-DH-1-30	Lutron-provided enclosure, switching load controller, myRoom power supply	120V	1	N/A
	QSM2-XW-C	QS sensor module	120V	1	N/A
	PP-DV	Relay power pack (lighting)	120V	1	N/A
	CU300HD-CPN6814	Relay power pack (receptacles)	120V	1	N/A
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	2	N/A

Visible System Components





Radio Powr Savr wireless, ceiling-mount occupancy sensor

Control Functionality

- Occupant Enters:** Controlled receptacles turn on and all lights will return to previous levels from when the room was vacated.
- When Occupied:** Manual: Occupant uses wall dimmer to set desired light levels for all lights.
- Occupant Exits:** All lights and controlled receptacles go off 15 minutes after all occupants exit.





Control Strategies





Auto On Partial Off

Occupancy/Vacancy



Full On Dim


Dimming







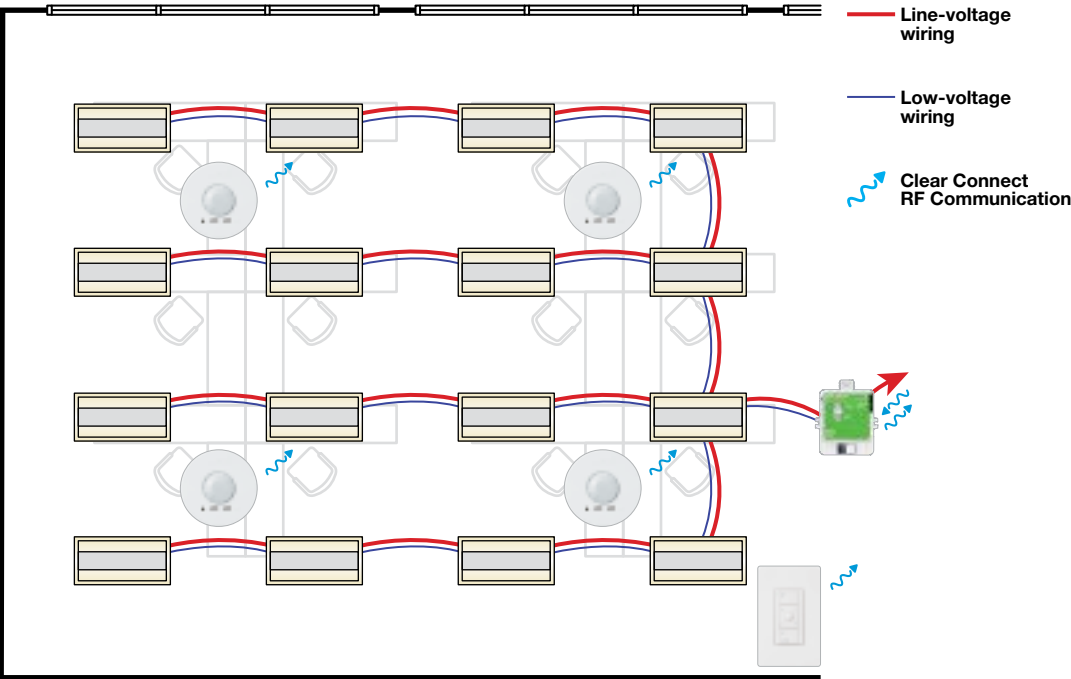

Appliance On Appliance Off

Plug Load Control





Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10 V	120V/ 277V	1	\$ 180.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10 V	347 V	1	Consult your local rep for pricing 
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	4	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button control with raise/lower	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	1	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components




Control Functionality

**Occupant Enters:**  
All lights automatically turn on to 50% light level. Occupant turns lights on to maximum light level manually. Maximum light level is set to 80%.

**When Occupied:**  
Manual: Occupant uses wall dimmers to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.


Control Strategies

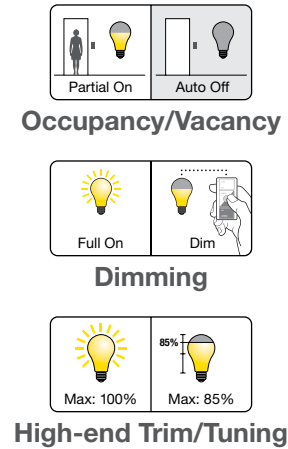







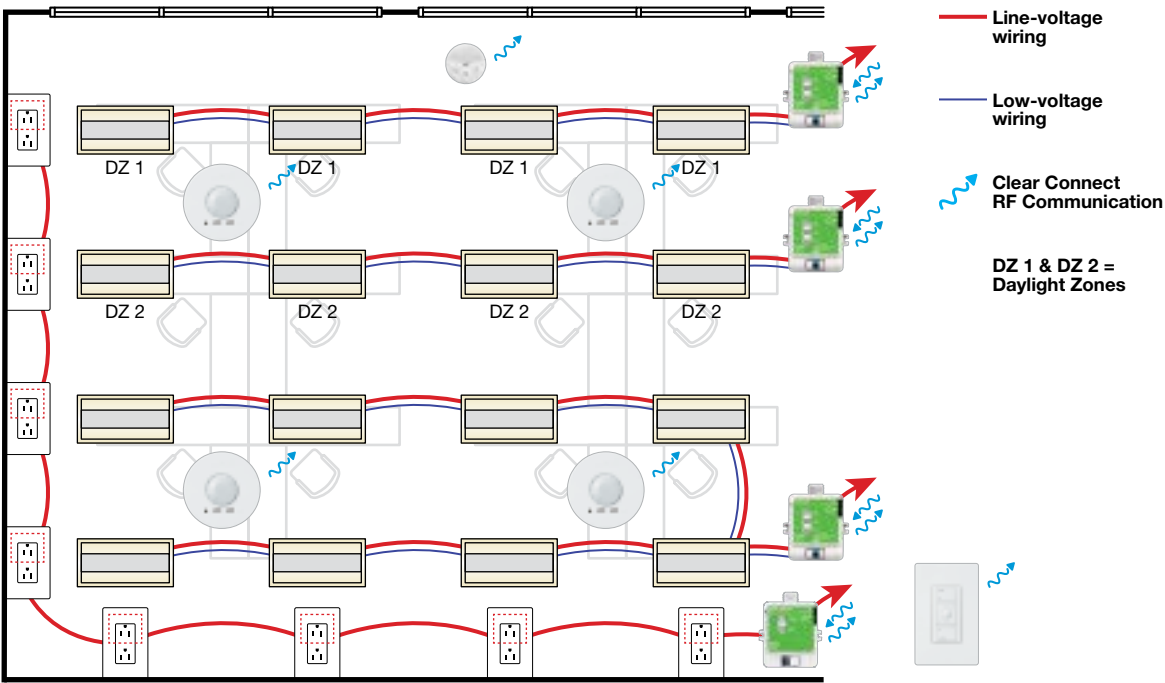

Lighting Energy Savings\*

45%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/ 277V	3	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347V	3	Consult your local rep for pricing 
	RMJS-20R-DV-B	20A PowPak relay module	120V/ 277V	1	\$ 170.00
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	N/A	1	\$ 150.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	4	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	1	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** For non-daylit open offices, all general lighting can be connected to a single 0-10V dimming module. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
All lights automatically turn on to 50% light level. Occupant turns lights on to maximum level manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.


**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.

Manual: Occupant uses wall dimmers to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.


Control Strategies

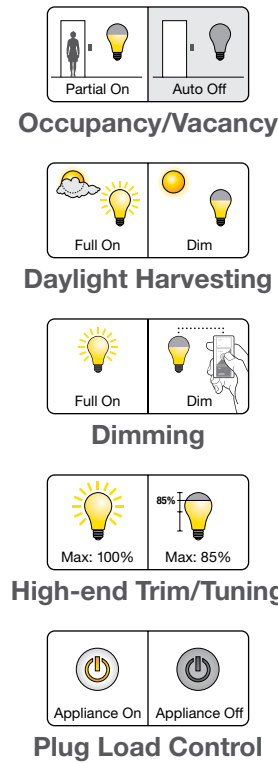

Lighting Energy Savings\*

55%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

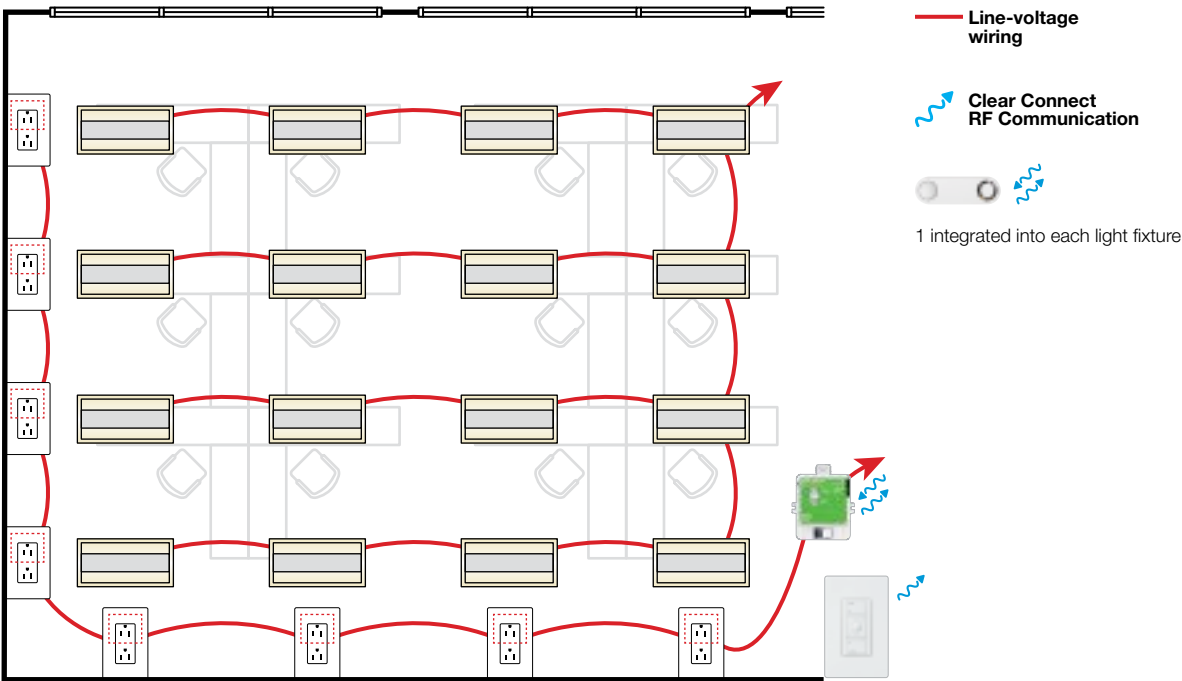

Symbol	Model Number	Description		Qty	List Price Each
	Integral to fixture <sup>1</sup>	Integral fixture control with sensor	N/A	16	\$ 78.00 <sup>2</sup>
	RMJS-20R-DV-B	20A PowPak relay module	120V/ 277V	1	\$ 170.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10V	347 V	1	Consult your local rep for pricing
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	347 V	1	Consult your local rep for pricing

\*For ASHRAE 90.1-2019 compliant installations in Canada

1 Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to [lutron.com/findafixture](http://lutron.com/findafixture) for a complete list of compatible fixtures and drivers.  
2 Fixture adder for the control module may vary.



Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires digitally enabled ballasts and drivers by others.

Visible System Components



Control Functionality

**Occupant Enters:**  
Each individual light automatically turns on to 50% light level as occupant approaches fixture proximity. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:**  
Automatic: Each individual overhead light dims/brightens based on local daylight availability.


Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
Each individual light automatically turns off 15 minutes after all occupants exit fixture proximity.

50% of all receptacles automatically turn off 15 minutes after all occupants exit.




Control Strategies

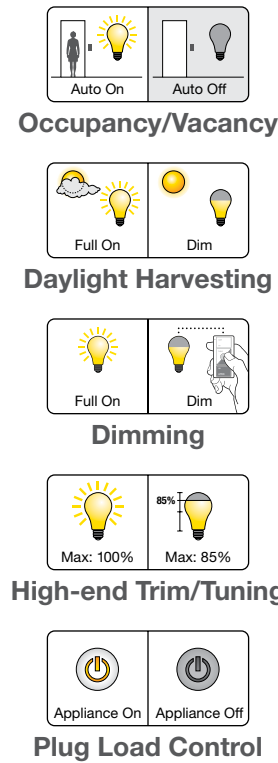





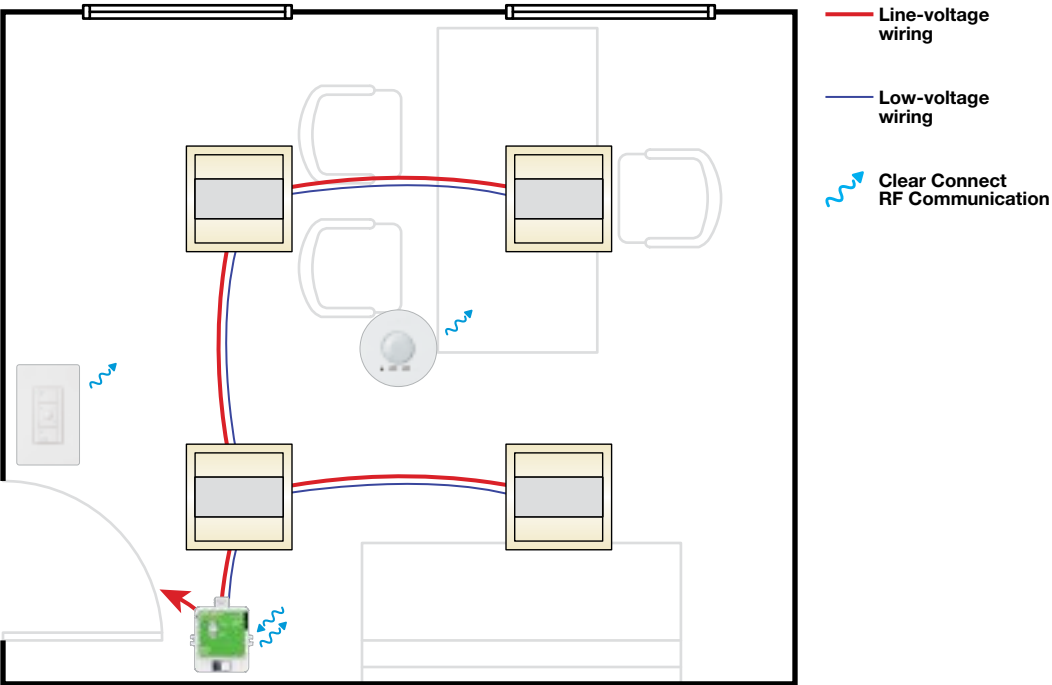

Lighting Energy Savings\*

60%

\* Go to [lutron.com/references](http://lutron.com/references) for more information.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module 0-10V	120V/ 277V	1	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347V	1	Consult your local rep for pricing 
	LRF2-VCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount vacancy sensor	N/A	1	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button control with raise/lower	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	1	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components




Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.


Control Strategies

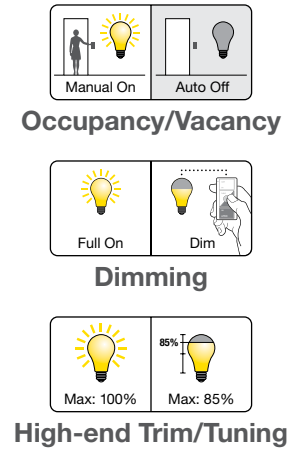

Lighting Energy Savings\*

45%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

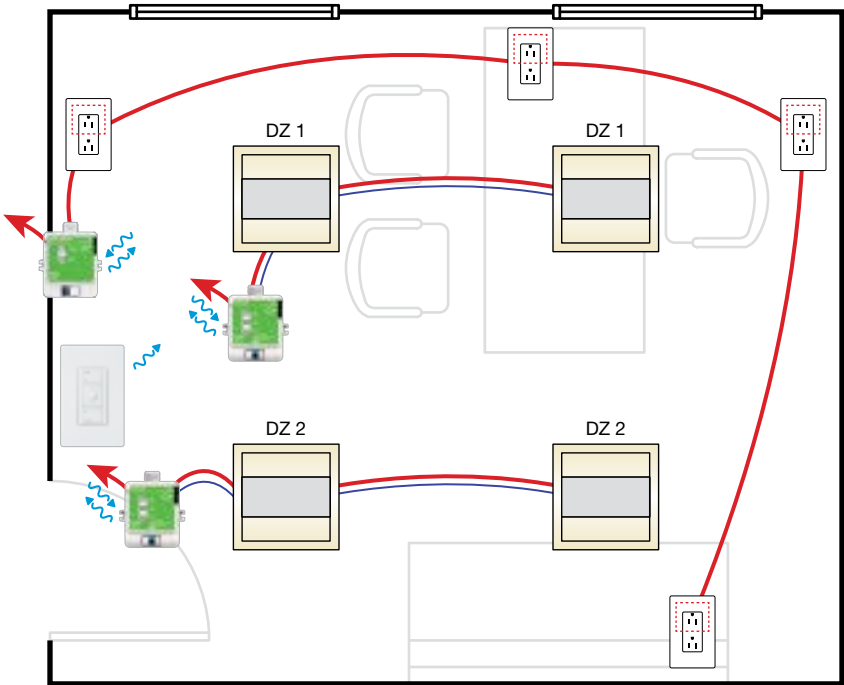








Line-voltage wiring

Low-voltage wiring

Clear Connect RF Communication

DZ 1 & DZ 2 = Daylight Zones


1 required for each fixture control

Symbol	Model Number	Description		Qty	List Price Each
	FCJS-010	Wireless fixture control with 0-10V	120V/277V	2	\$ 91.00
	RMJS-20R-DV-B	20A PowPak relay module	120V/277V	1	\$ 170.00
	RMJS-5T-347*	347 V PowPak dimming module with 0-10V	347 V	2	Consult your local rep for pricing 
	FC-SENSOR	PowPak fixture sensor	N/A	2	\$ 40.50
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	1	Consult your local rep for pricing 

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** FCJS models are capable of controlling up to 3 ballasts or drivers. Review the “Vive PowPak Fixture Controls” submittal document for more design details.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components

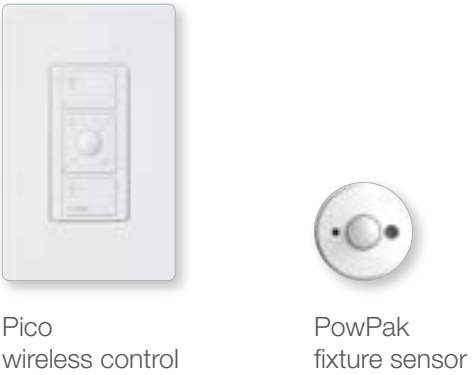

Control Functionality

**Occupant Enters:**  
Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

Controlled receptacles automatically regain power when occupant enters.

**When Occupied:**  
Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.


Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.


50% of all receptacles automatically turn off 15 minutes after all occupants exit.



Control Strategies

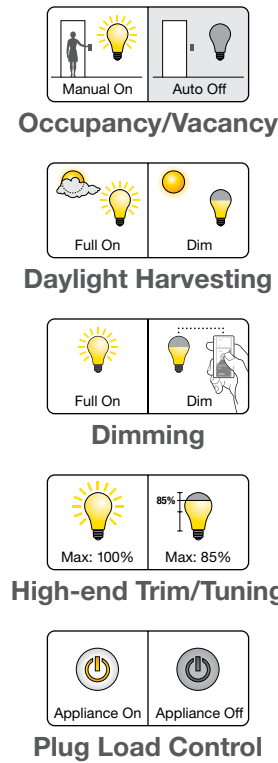



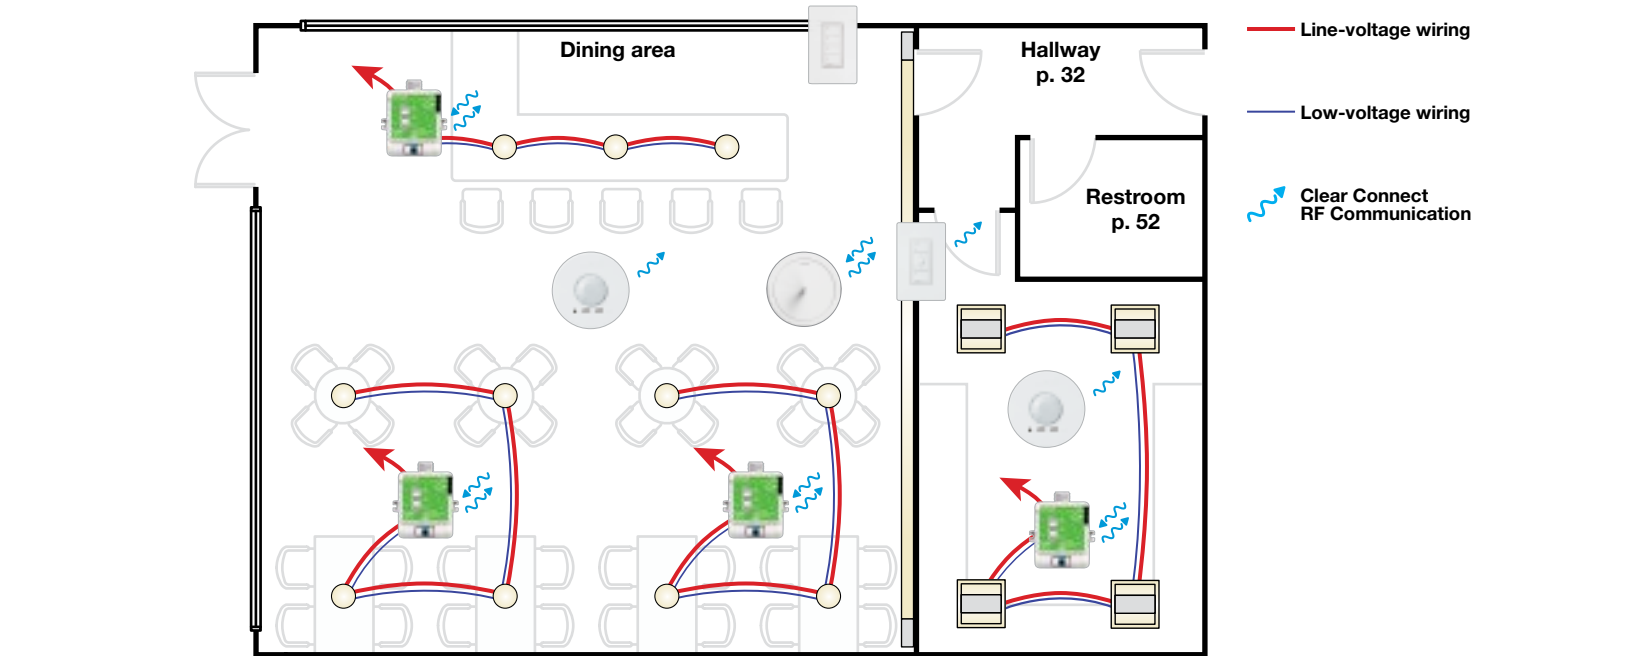

Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/277V	4	\$ 180.00
	RMJS-5T-347*	347V PowPak dimming module with 0-10V	347V	4	Consult your local rep for pricing
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	2	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button with raise/lower control	N/A	1	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	1	Consult your local rep for pricing
	PJ2-4B-GWH-L31	Pico wireless, 4-button scene control	N/A	1	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	1	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	1	Consult your local rep for pricing
	HJS-1-FM	Vive wireless hub	120V/277V	Shared	Consult your local rep for hub pricing and service options.

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** Add a daylight sensor for restrooms with daylight zones. Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components



Pico wireless controls



Radio Powr Savr wireless, ceiling-mount occupancy sensor



Vive wireless hub

Control Functionality

**Prior to Business Opening:**  
Lights scheduled to automatically turn on in dining area prior to employee arrival.

**Occupant Enters:**  
Lighting automatically turns on to at least 50% of full power in employee-only area. Remaining lighting must be turned on manually.


**When Occupied:**  
Automatic: Lighting in dining area changes to different scenes for breakfast, lunch, and dinner.

Manual: Employees can use wall dimmers to adjust lighting as needed.


**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit the employee-only area.

**After Business Closing:**  
All lighting in dining area is scheduled to automatically turn off after business operations conclude.


Control Strategies




Occupancy/Vacancy




Dimming



High-end Trim/Tuning








Scheduling

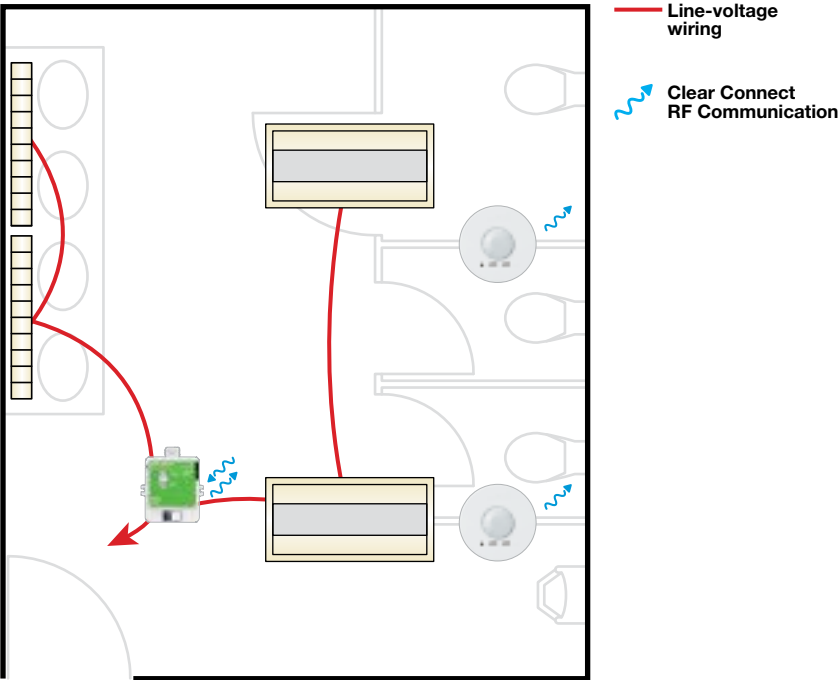

Scene Control





Symbol	Model Number	Description		Qty	List Price Each
	RMJS-16R-DV-B	PowPak switching module	120V/ 277V	1	\$ 155.00
	RMJS-5R-347*	347 V PowPak switching 5 A	347 V	1	Consult your local rep for pricing 
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	2	\$ 105.00

\*For ASHRAE 90.1-2019 compliant installations in Canada

Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.

Visible System Components




Radio Powr Savr  
wireless, ceiling-mount  
occupancy sensor

Control Functionality

**Occupant Enters:**  
All lights automatically turn on to maximum light level.

**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.


Control Strategies

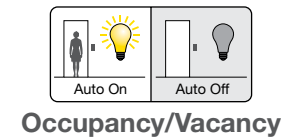





Lighting Energy Savings\*

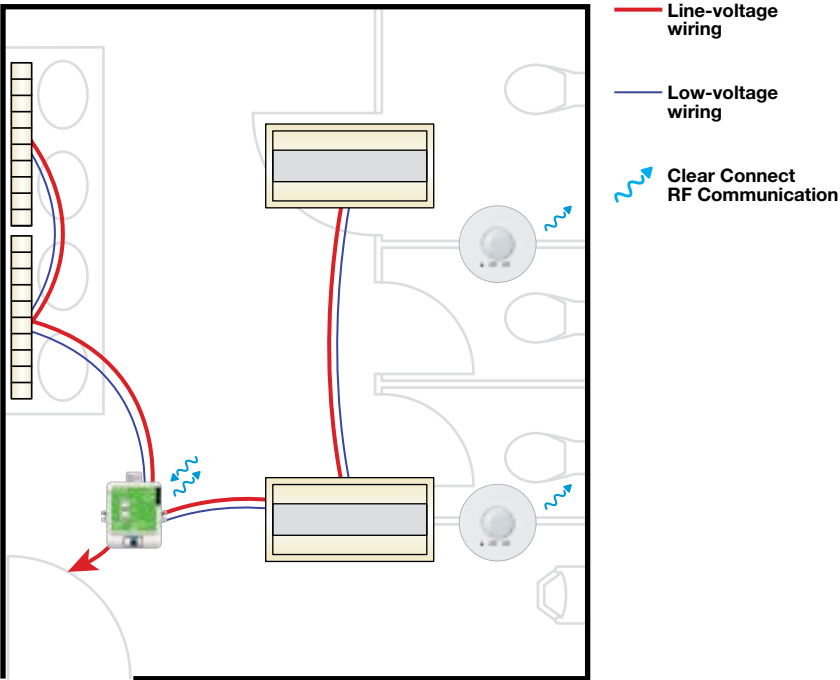50%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/ 277V	1	\$ 180.00
	RMJS-5R-347*	347V PowPak switching 5A	347V	1	Consult your local rep for pricing 
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	2	\$ 105.00

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** Add a daylight sensor for restrooms with daylight zones.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.  
This solution requires 0-10V enabled ballasts and drivers by others.

Visible System Components





Radio Powr Savr wireless, ceiling-mount occupancy sensor

Control Functionality

**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.



**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit.

Control Strategies



Auto On    Auto Off

**Occupancy/Vacancy**




Max: 100%    Max: 85%






**High-end Trim/Tuning**

Lighting Energy Savings\*

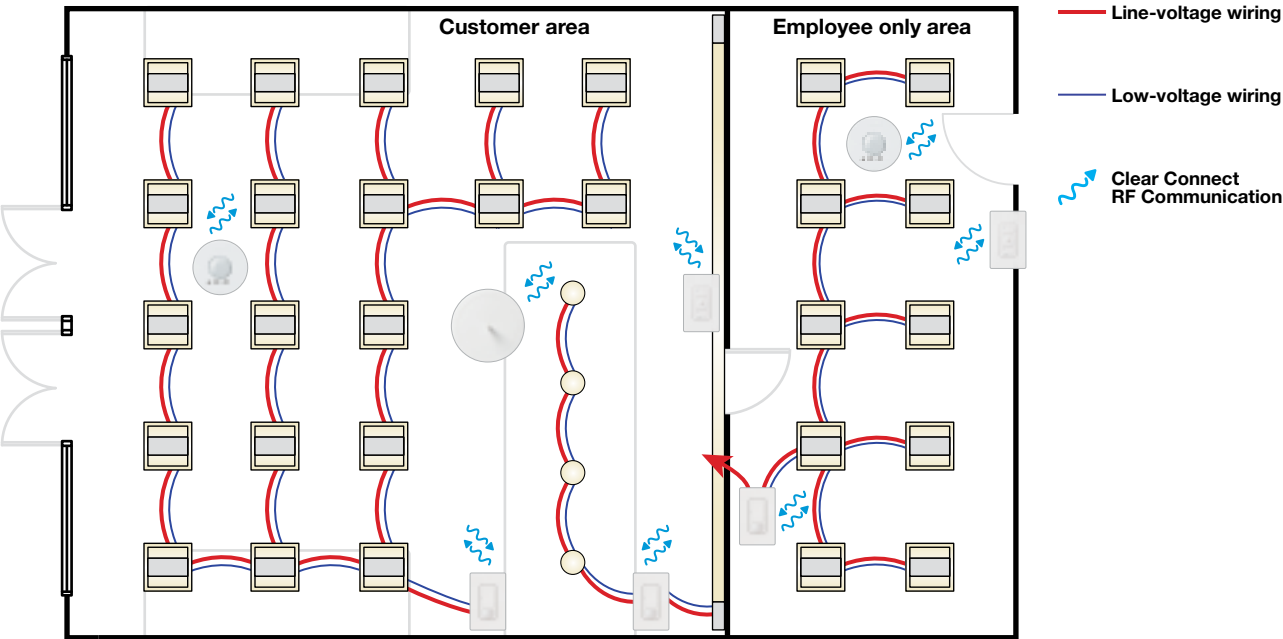60%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	MRF2S-8SD010-WH	Maestro Wireless 0-10V dimmer sensor	120V/277V	3	\$ 215.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	2	\$ 105.00
	PJ2-3BRL-GWH-L01	Pico wireless, 3-button control with raise/lower	N/A	2	\$ 27.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	2	\$ 9.50
	PICO-347WBX-ADAP*	347V wallbox adapter	N/A	2	Consult your local rep for pricing 
	HJS-1-FM	Vive wireless hub	N/A	Shared	Consult your local rep for hub pricing and service options.

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** This solution requires 0-10V enabled ballasts and drivers by others. Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



Radio Powr Savr wireless, ceiling-mount occupancy sensor



Vive wireless hub


Control Functionality

**At Business Opening:**  
System timeclock turns lights on at pre-programmed time when store opens. Maximum light level is set to 80%.


**When Occupied:**  
Manual: Occupant uses wall dimmer to set desired light levels for all lights.

**At Business Closing:**  
System timeclock turns lights off at pre-programmed time when store closes.


Control Strategies




Occupancy/Vacancy




Dimming








High-end Trim/Tuning

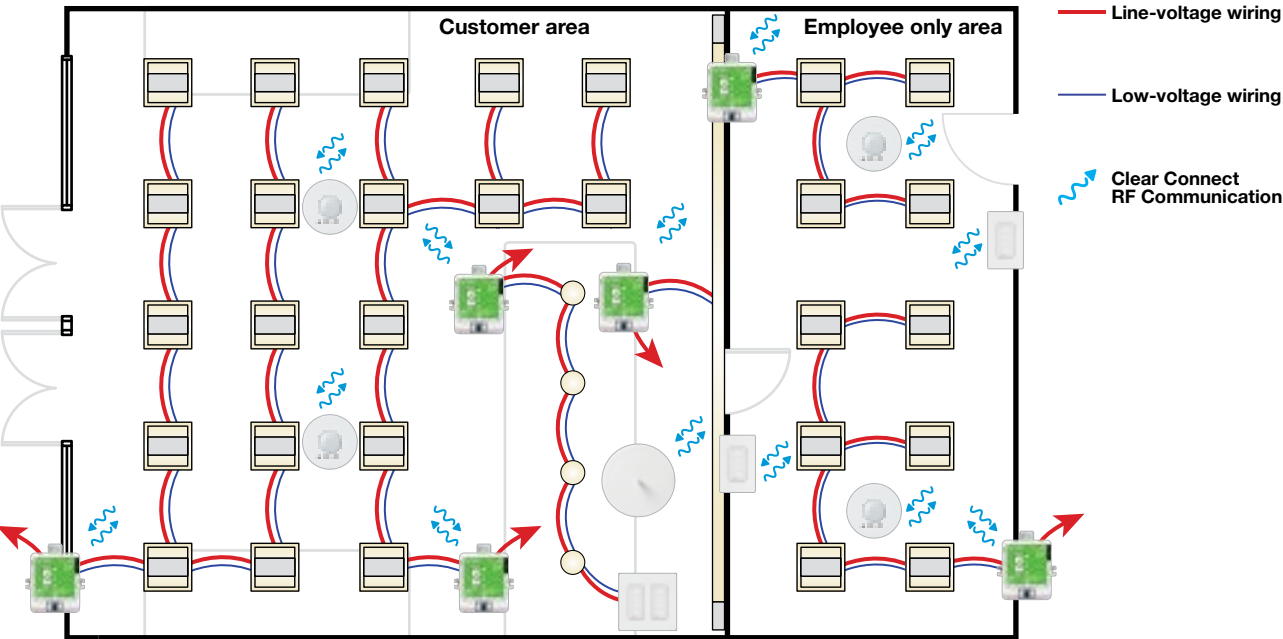

Scheduling



Symbol	Model Number	Description	Voltage	Qty	List Price Each
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	120V/277V	6	\$ 180.00
	LRF2-OCR2B-P-WH	Radio Powr Savr wireless, ceiling-mount occupancy sensor	N/A	4	\$ 105.00
	PJ2-4B-GWH-L31	Pico wireless, 4-button scene control	N/A	4	\$ 45.00
	PICO-WBX-ADAPT	Pico wallbox adapter	N/A	4	\$ 9.50
	PICO-347WBX-ADAP*	347 V wallbox adapter	N/A	4	Consult your local rep for pricing 
	HJS-1-FM	Vive wireless hub	N/A	Shared	Consult your local rep for hub pricing and service options.

\*For ASHRAE 90.1-2019 compliant installations in Canada

**Code Notes:** This solution requires 0-10V enabled ballasts and drivers by others.  
Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](https://lutron.com/vive) for complete compatibility and design details.

Visible System Components



Pico wireless control



Radio Powr Savr wireless, ceiling-mount occupancy sensor



Vive wireless hub

Control Functionality

**Prior to Business Opening:**  
Lights scheduled to automatically turn on in customer area prior to employee arrival.


**Occupant Enters:**  
Lighting automatically turns on to at least 50% of full power in employee-only area. Remaining lighting must be turned on manually.

**When Occupied:**  
Manual: Employees use wall dimmers to adjust lighting as needed.


**Occupant Exits:**  
All lights automatically turn off 15 minutes after all occupants exit the employee-only area.

**After Business Closing:**  
All lighting is scheduled to automatically turn off after business operations conclude.


Control Strategies




Occupancy/Vacancy




Dimming





High-end Trim/Tuning

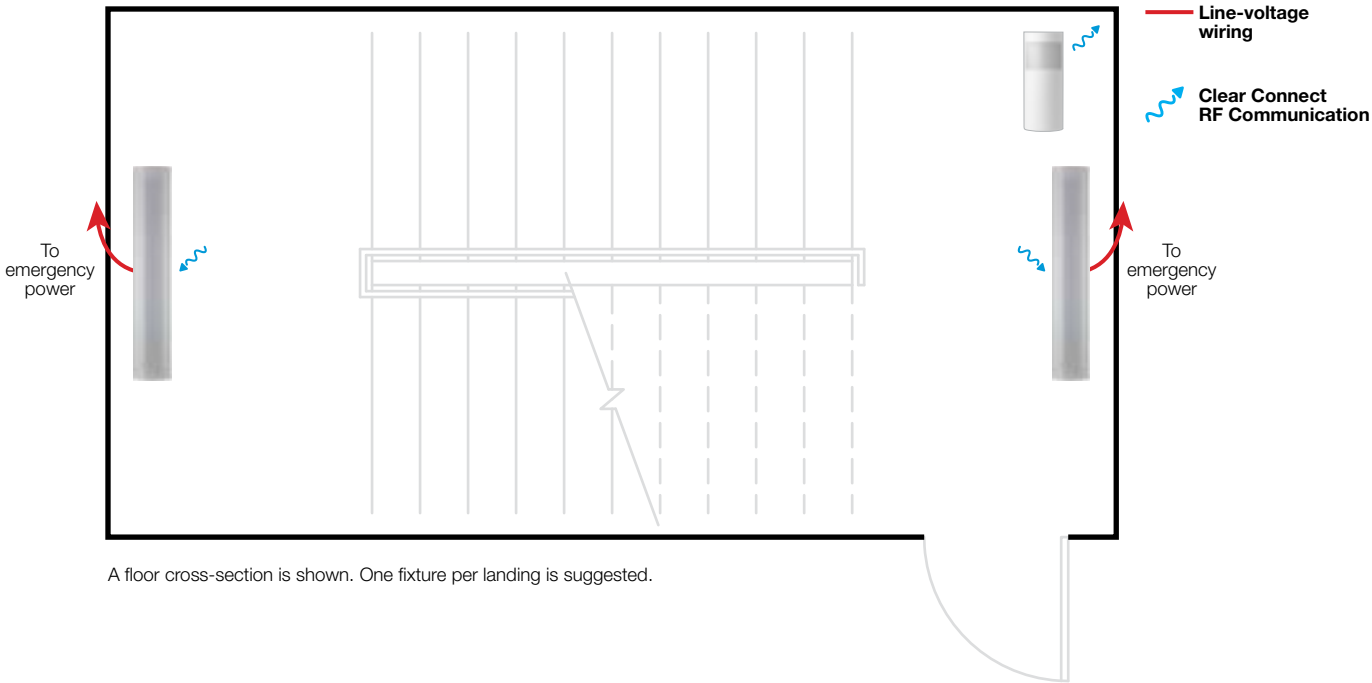

Scheduling



Symbol	Model Number	Description	Qty	List Price Each
	FXSWLX4H	Lutron 4 ft. stairwell LED fixture	2 (per floor)	\$ 720.00
	LRF2-OKLB-P-WH	Radio Powr Savr wireless, corner-mount occupancy sensor	1 (per floor)	\$ 105.00

**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for stairwells with daylight zones. Lutron Stairwell Fixture (FXSWLX44) is not currently compatible with Vive wireless hub. A new model number, that will include Vive compatibility, is coming soon. Go to [lutron.com/vive](https://lutron.com/vive) for the latest compatibility details.

Visible System Components



Radio Powr Savr  
wireless, corner-mount  
occupancy sensor

Control Functionality


**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

**Occupant Exits:**  
All lights dim to minimum light level 15 minutes after all occupants exit. Minimum light level is set to 10%.


**Emergency Mode:**  
Lighting connected to emergency power turns on to full output.



Control Strategies



Occupancy/Vacancy




High-end Trim/Tuning



Lighting Energy Savings\*

80%

\* Go to [lutron.com/references](https://lutron.com/references) for more information.

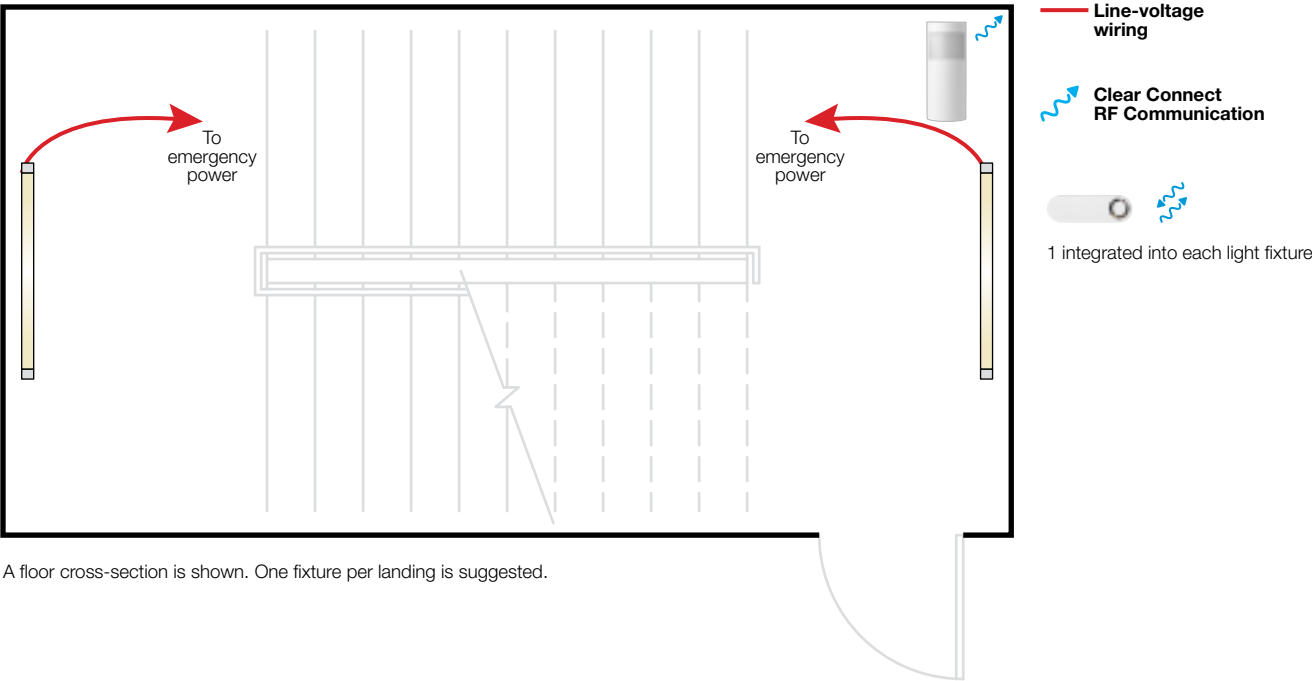**Code Notes:** For non-egress stairwells, see the new construction solution and set the minimum light level to full off.



Symbol	Model Number	Description	Qty	List Price Each
	Integral to fixture <sup>1</sup>	Integral fixture control	2 (per floor)	\$ 67.00 <sup>2</sup>
	LRF2-OKLB-P-WH	Radio Powr Savr wireless, corner-mount occupancy sensor	1 (per floor)	\$ 105.00

1 Fixture control comes pre-installed in fixture. Look for the Clear Connect Wireless symbol for fixtures containing this module. Go to [lutron.com/findafixture](http://lutron.com/findafixture) for a complete list of compatible fixtures and drivers.

2 Fixture adder for the control module may vary.



**Code Notes:** Verify that the egress fixtures go to full output upon loss of control signal. For projects that require UL 924 compliance, provide an automatic load control relay (ALCR) per load controller connected to emergency fixtures. Add a daylight sensor for stairwells with daylight zones. This solution requires digitally enabled ballasts and drivers by others.

Visible System Components



Control Functionality


**Occupant Enters:**  
All lights automatically turn on to maximum light level. Maximum light level is set to 80%.

**Occupant Exits:**  
All lights dim to minimum light level 15 minutes after all occupants exit. Minimum light level is set to 10%.

**Emergency Mode:**  
Lighting connected to emergency power turns on to full output.



Control Strategies

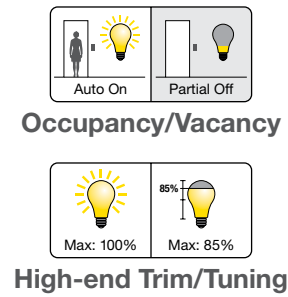

Lighting Energy Savings\*

80%

**Code Notes:** For non-egress stairwells, set the minimum light level to full off. \* Go to [lutron.com/references](http://lutron.com/references) for more information.



Lutron, the Lutron logo, Clear Connect, EcoSystem, Energi Savr Node, Hi-lume, Maestro, Pico, PowPak, Quantum, Radio Powr Savr, and Vive are trademarks or registered trademarks of Lutron Electronics Co., Inc., in the U.S. and/or other countries.

**lutron.com**

Lutron Electronics Co., Inc., 7200 Suter Road, Coopersburg, PA 18036-1299

**Customer Assistance**

Online: [lutron.com/help](https://lutron.com/help)

Email: [support@lutron.com](mailto:support@lutron.com)

Phone: 1.844.LUTRON1 (588.7661) — includes 24/7 technical support

© 08/2022 Lutron Electronics Co., Inc. | P/N 368-6163 REV A

